



Special_Function

Index	Special Function Name	Index	Special Function Name
0003	Read coding and change if necessary.	0032	Program replacement keys
0005	Initial startup	0033	Activate control module N73 (EIS [EVS] control unit).
0010	Chassis number	0034	Activate control module N26/5 (Electric steering lock control module)
0012	Calibration of the torque sensor	0035	Key assignment or key track assignment to a memory block number
0014	Road test	0036	Writing of the VIN
0015	Tire pressure loss warner (Activating)	0037	Telematic service 'Remote door unlocking' (TELE AID)
0027	Initial startup of control unit EZS	0041	Steering variant
0028	Initial startup of control unit ESL	0047	Erase zero point offset error of component N49 (Steering angle sensor)
0029	Disable key or key track	0050	Initializing:Rain sensor,Steering column module
0030	Once again authorize key or key track.// (DEF@KL15)	0058	Replacement of control module N80(Steering column module)
0031	Once again authorize key or key track.// (! (DEF@KL15))		