

Jaguar_V4.30 Fuction List

VehicleType	ModelYear	Specil Function Name
X150	2006.5-2009	Driver's door window glass
X150	2006.5-2009	Erase all existing keys.
X150	2006.5-2009	Headlamp and axle sensor calibration.
X150	2006.5-2009	Idle speed test.
X150	2006.5-2009	Immobilization
X150	2006.5-2009	Key programming
X150	2006.5-2009	Lateral accelerometer calibration.
X150	2006.5-2009	Parking brake release to service position
X150	2006.5-2009	Passenger's door window glass
X150	2006.5-2009	Pressure sensor calibration.
X150	2006.5-2009	Seat cover replacement
X150	2006.5-2009	Steering column calibration
X150	2006.5-2009	Tire pressure monitor confirmation application.
X150	2006.5-2009	Tire pressure monitor receiver calibration.
X150	2006.5-2009	Tire pressure sensor replacement.
X150	2006.5-2009	Verify keys
X150	2006.5-2009	Yaw rate sensor calibration.
X150	2010	Battery replacement
X150	2010	Brake bleed.
X150	2010	Build mode
X150	2010	Calibration learn
X150	2010	Check engine oil level.
X150	2010	Driver's side - Door glass window calibration
X150	2010	Erase all existing keys.
X150	2010	Headlamp and axle sensor calibration.
X150	2010	Height calibration
X150	2010	Idle speed test.
X150	2010	Immobilization
X150	2010	Key programming
X150	2010	Oil service counter reset
X150	2010	Parking brake release to service position
X150	2010	Passenger's side - Door glass window calibration
X150	2010	Reset oil level
X150	2010	Seat cover replacement
X150	2010	Steering column calibration
X150	2010	Tire pressure monitor confirmation application.
X150	2010	Tire pressure monitor receiver calibration.
X150	2010	Tire pressure monitor sensor identification display
X150	2010	Tire pressure sensor replacement.
X150	2010	Verify keys
X202	2002.5	Parking brake release to service position
X202	2002.5	Reset the oil service counter.
X202	2002.5	Tire pressure monitor confirmation application.
X202	2002.5	Tire pressure monitor receiver calibration.
X202	2002.5	Tire pressure sensor replacement.
X250	2008-2009	Air conditioning system adaption reset
X250	2008-2009	Battery replacement
X250	2008-2009	Brake bleed.
X250	2008-2009	Diesel particulate filter dynamic regeneration
X250	2008-2009	Diesel particulate filter fuel related component replacement
X250	2008-2009	Diesel particulate filter replacement
X250	2008-2009	Driver's side - Door glass window calibration
X250	2008-2009	Erase all existing keys.
X250	2008-2009	Headlamp control module system calibration
X250	2008-2009	Idle speed test.
X250	2008-2009	Immobilisation
X250	2008-2009	Immobilization
X250	2008-2009	Key programming
X250	2008-2009	Parking brake release to service position
X250	2008-2009	Passenger's side - Door glass window calibration
X250	2008-2009	Pedestrian impact crash status reset
X250	2008-2009	Reset the oil service counter.
X250	2008-2009	Restraints build mode
X250	2008-2009	Seat cushion replacement
X250	2008-2009	Steering column calibration
X250	2008-2009	Tire pressure monitor confirmation application.

X250	2008-2009	Tire pressure monitor receiver calibration.
X250	2008-2009	Tire pressure sensor replacement.
X250	2008-2009	Verify keys
X250	2010	Battery replacement
X250	2010	Brake bleed.
X250	2010	Build mode
X250	2010	Calibration learn
X250	2010	Check engine oil level.
X250	2010	Diesel particulate filter dynamic regeneration
X250	2010	Diesel particulate filter replacement
X250	2010	Driver's side - Door glass window calibration
X250	2010	Erase all existing keys.
X250	2010	Exhaust gas recirculation valve
X250	2010	Headlamp control module system calibration
X250	2010	Height calibration
X250	2010	Idle speed test.
X250	2010	Immobilization
X250	2010	Injector replacement
X250	2010	Key programming
X250	2010	Oil service counter reset
X250	2010	Parking brake release to service position
X250	2010	Passenger's side - Door glass window calibration
X250	2010	Pedestrian impact crash status reset
X250	2010	Reset oil level
X250	2010	Restraints build mode
X250	2010	Seat cushion replacement
X250	2010	Steering column calibration
X250	2010	Throttle valve actuator
X250	2010	Tire pressure monitor confirmation application.
X250	2010	Tire pressure monitor receiver calibration.
X250	2010	Tire pressure sensor replacement.
X250	2010	Verify keys
X350	2002.5	Parking brake release to service position
X350	2002.5	Reset the oil service counter.
X350	2002.5	Tire pressure monitor confirmation application.
X350	2002.5	Tire pressure monitor receiver calibration.
X350	2002.5	Tire pressure sensor replacement.
X351	2010	Add additional keys
X351	2010	Air suspension deflation.
X351	2010	Air suspension enable.
X351	2010	Battery replacement
X351	2010	Brake bleed.
X351	2010	Build mode
X351	2010	Calibration learn
X351	2010	Check Passive Keys Enabled
X351	2010	Diesel particulate filter dynamic regeneration
X351	2010	Diesel particulate filter replacement
X351	2010	Driver's side - Door glass window calibration
X351	2010	Exhaust gas recirculation valve
X351	2010	Headlamp calibration suspension set-up
X351	2010	Headlamp control module system calibration
X351	2010	Idle speed test.
X351	2010	Immobilization
X351	2010	Injector replacement
X351	2010	Oil service counter reset
X351	2010	Parking brake release to service position
X351	2010	Passenger's side - Door glass window calibration
X351	2010	Recover Programmed keys
X351	2010	Replace faulty/lost keys
X351	2010	Seat cushion replacement
X351	2010	Service interval reset.
X351	2010	Steering column calibration
X351	2010	Sunroof calibration
X351	2010	Suspension geometry set-up
X351	2010	Suspension tight tolerance control
X351	2010	Throttle valve actuator
X351	2010	Verify keys
X400	2001.50	Brake bleed.
X400	2001.50	Service interval reset.
X400	2001.50	Steering angle sensor calibration

X400	2001_50	Tire pressure monitor confirmation application.
X400	2001_50	Tire pressure monitor receiver calibration.
X400	2001_50	Tire pressure sensor replacement.