

A Brief Duplicator User's Guide

A.NORMAL COPY

1. please turn on the power and press the 5th key once-----remote copy
2. press the 1st key once-----input 1 key
3. begin to input the client's 1st key (press the key until the frequency displayed)----- ISN data
4. press the 5th key once-----input 1 key again
5. input the client's 1st key again-----ISN data
6. press the 5th key once-----input 2 key
7. input the client's 2nd key-----ISN data
8. press the 5th key once-----input 3 key
9. input the client's 3rd key-----ISN data
10. The rest deduced ,having finished the inputting process,press the 5th key twice -----use NO."x" remote
11. having inserted No."x" remote,press the 5th key twice-----write ok
12. pull out the remote,press the duplicator 4th key-----FREQ MHz
13. put the copied remote on the duplicator,press any key once-----appearing frequency
14. put the new remote on the duplicator,use ceramic aligner tool to turn round white capacitance until the digital reach the copied remote
15. having finished the adjustment,press the 1st and 2nd once at the same time .

the light flash once, then press any key, the light -light-, over

B. SINGKEY single COPY

1. turn on the power, press the 5th key twice-----normal copy
2. press the 3rd once-----singkey copy
3. press the 5th once-----input 1 key
4. input the 1st key once-----input 1key 003
5. input the 1st key the 2nd time -----input 1key 013
6. input the 1st key the 3rd time-----input 1key 023
7. go on inputting until-----input 2key 013
8. input the 2nd key once-----input 2key 023
9. all key inputted, press the duplicator 5th key twice-----use no"x"remote
10. the other steps like the "normal copy"

C. Reread/recopy(SCP)

this function is used to recopy the having copied remote

1. turn on the power, press the 5th key once -----remote copy
2. press the 2nd key once-----inline remote
3. insert the client's having copied remote, press the 5th key once-----write to remot
4. pull out the client's remote, press the 5th key once-----input NO."X" remote
5. insert the new blank No"x" remote, press the 5th key twice-----write ok
6. pull out the new remote, begin to adjust the frequency, like the "normal copy"
7. press the 1st and 2nd key of the new remote at the same time, then press

any key

the light light,ok ,over.

D.No.3 remote copy(rolling code series)

1.turn on the power,input all key of the client's remote,like the "normal copy"

2.Notice : some of the client's remotes are two key,even one key,you must input five

key(any key is ok)

3.after you finish inputing, press the 5th key twice ,the duplicator begin to scan,if the decode scanning is successful,-----completely copy;if failed ,the scanning can't be stopped ,or the duplicator

displayes-----input 1key

4.if display(completely copy),press the 5th key twice-----input No.3 remote

5.insert the new blank remote(No.3),press the 4th key(+1),then press the 5th key

-----write ok

6.pull out the new copiedremote,begin to adjust the frequency,like the "normal copy"

7.if the new copied remote is 5 keyes,please press it's 5th key;if the remote 5 keyes,press the 1st and 2nd key once at the same time,then press any key ,the light

lights.

end

Notice: Please intercopy with the client's old remote ,or it can't be used