


### CAS 4+ Copy key without key CG-DI

CAS 4+ anti-theft auto keys are all lost, need to be read to configure the key, read CAS 4+ anti-theft data and engine computer data, to load data distribution keys.


## Operating CG-Pro Read CAS 4+ anti-theft data




CAS 4+ anti-theft computer module style

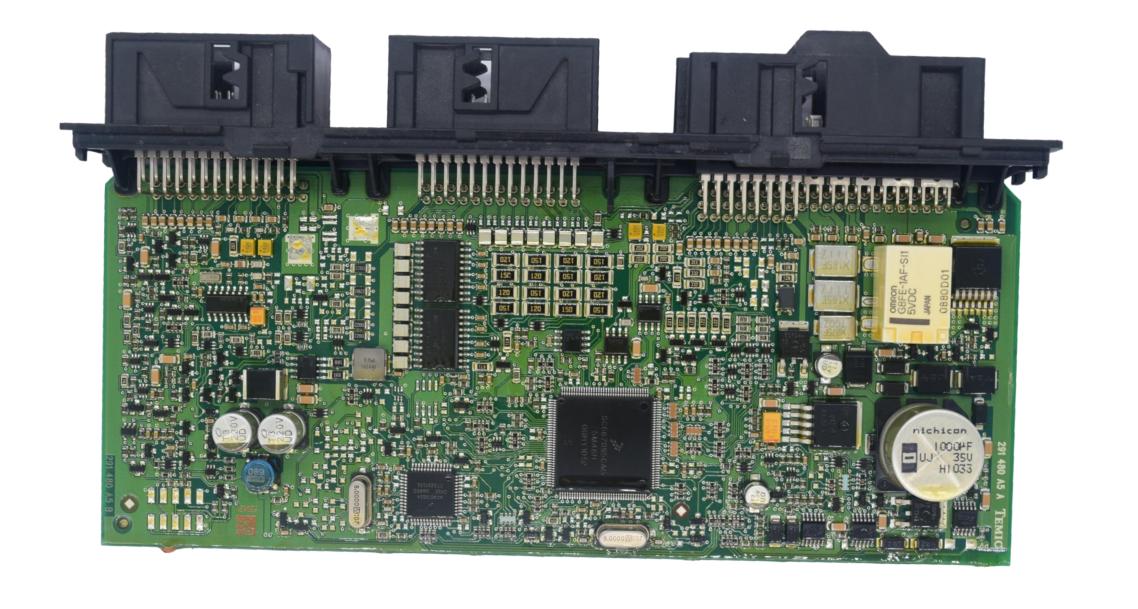


#### CAS 4+ anti-theft computer module

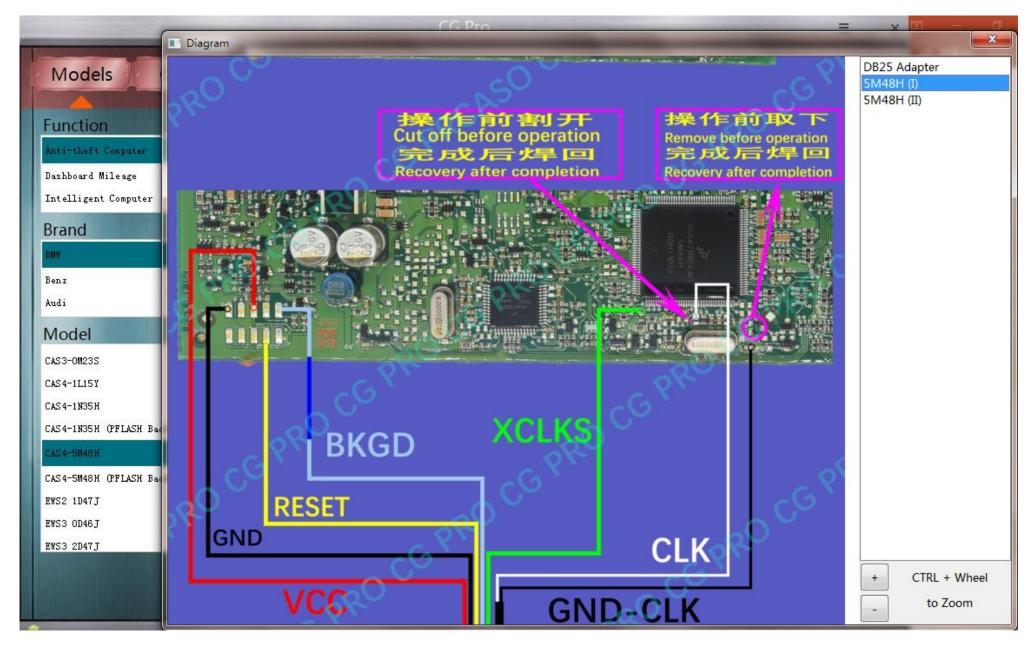


Software physical wiring diagram

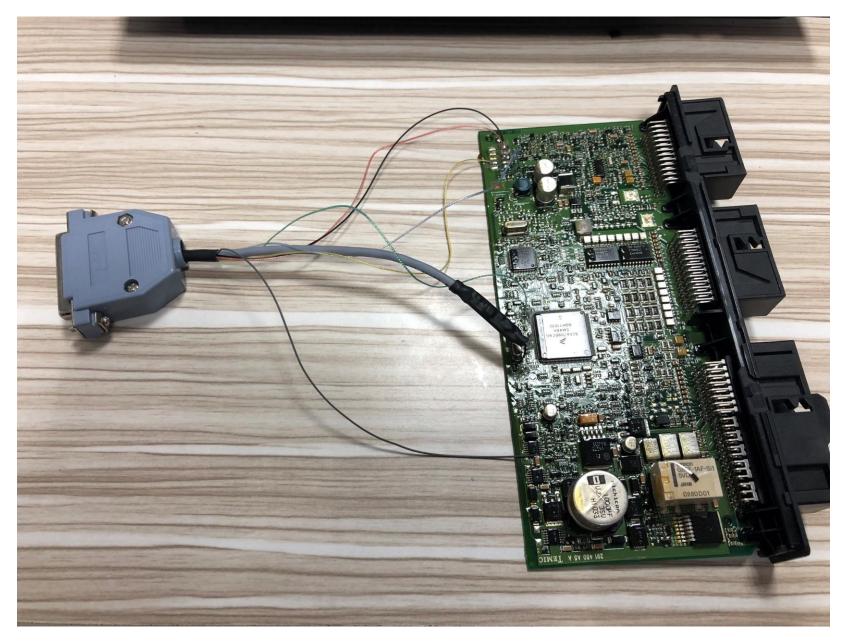

**Physical connection** 

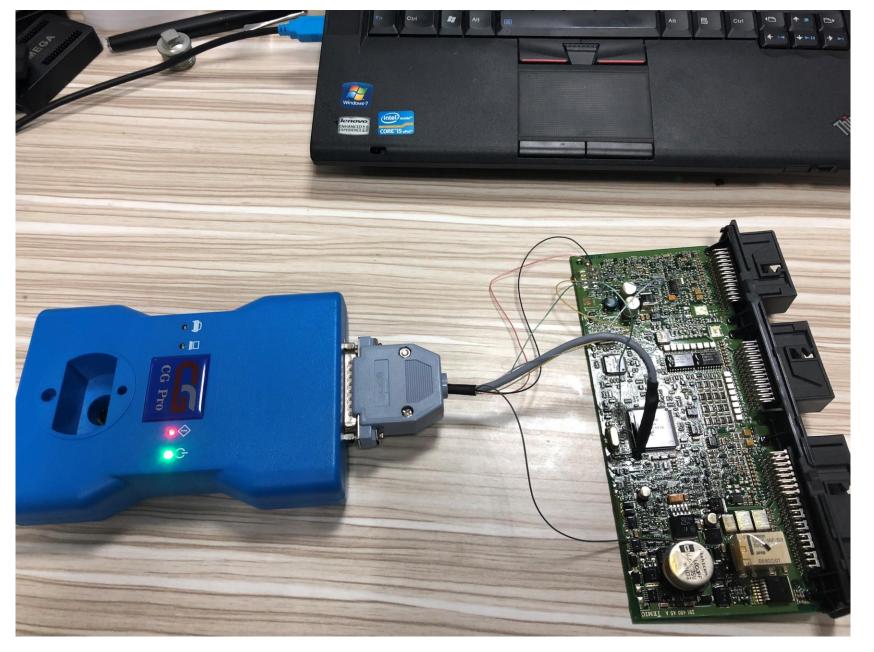


Connect the CG-Pro

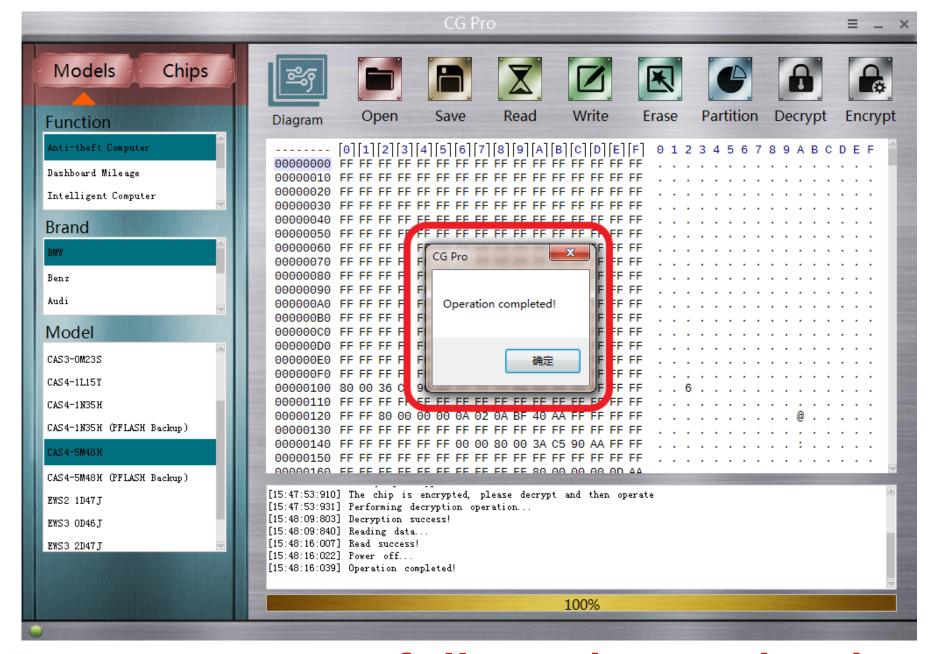


Decrypt successfully and save the data

### Operating CG – 100 Read engine ECU data

Note: CG-100 full-featured support

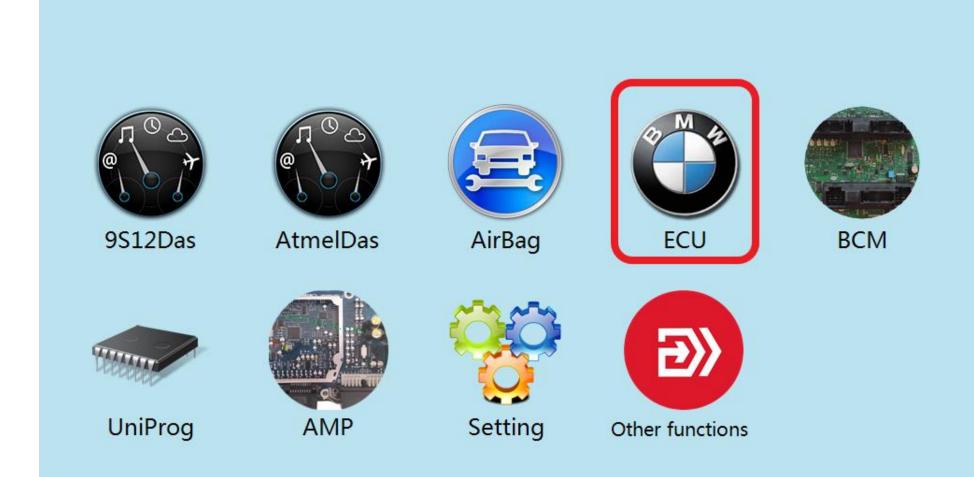


#### Click to enter "ECU"

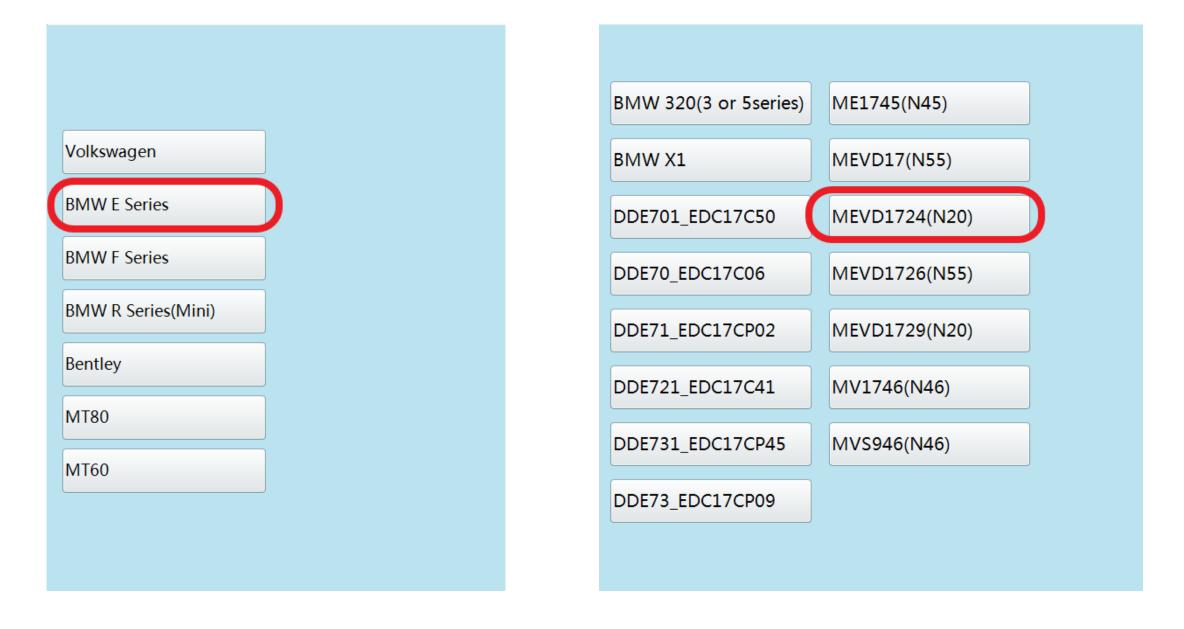

Click on the engine model option to enter the current vehicle




According to the software physical wiring diagram wiring

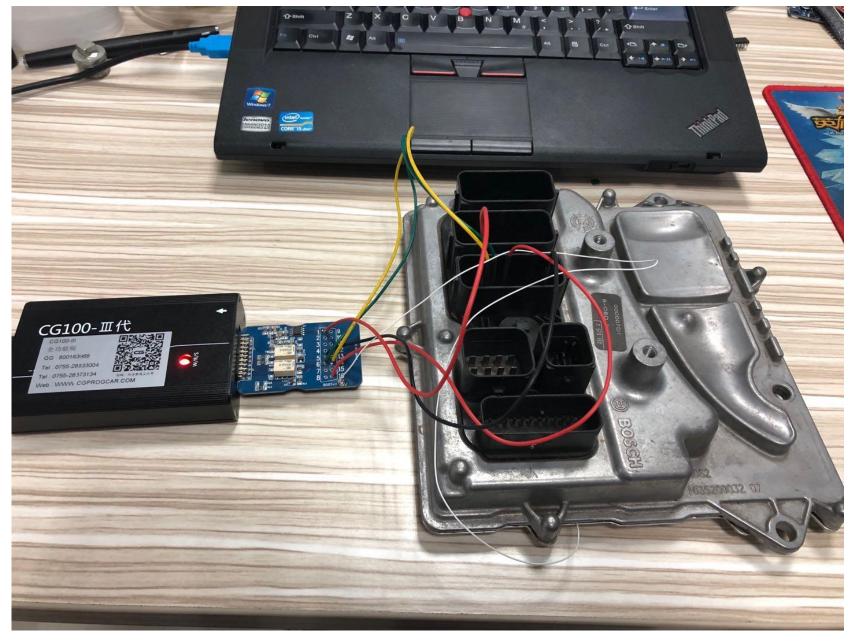

**Engine module wiring** 



#### **Click read EEPROM**

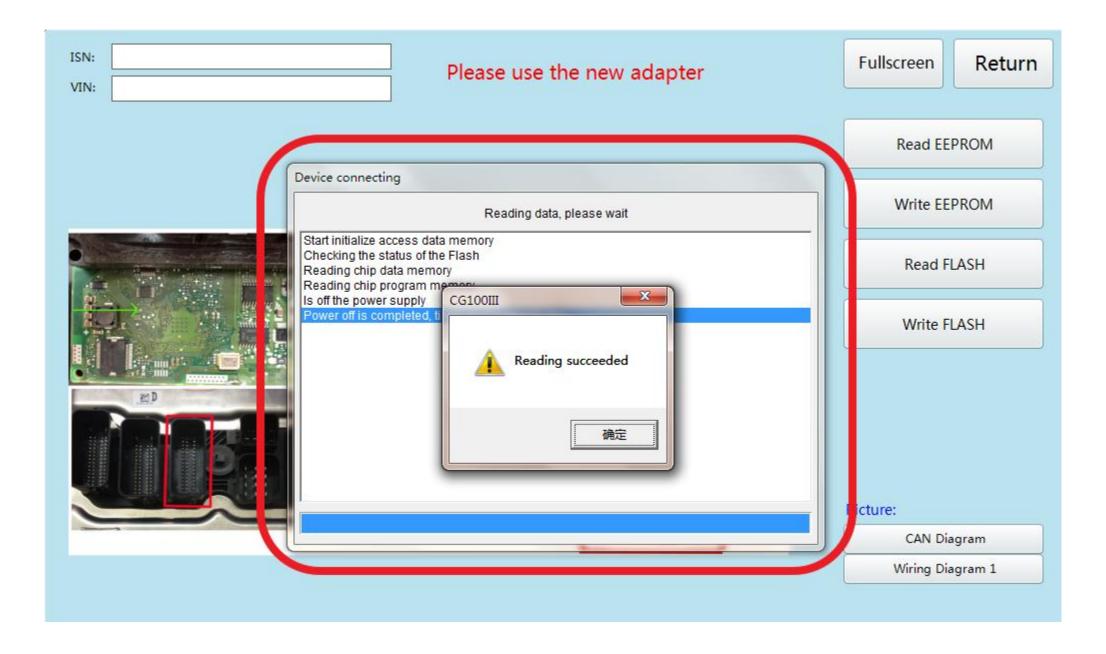


Read successfully and save the data




#### **Show ISN and VIN**


# Operating CG – DI Match the new key

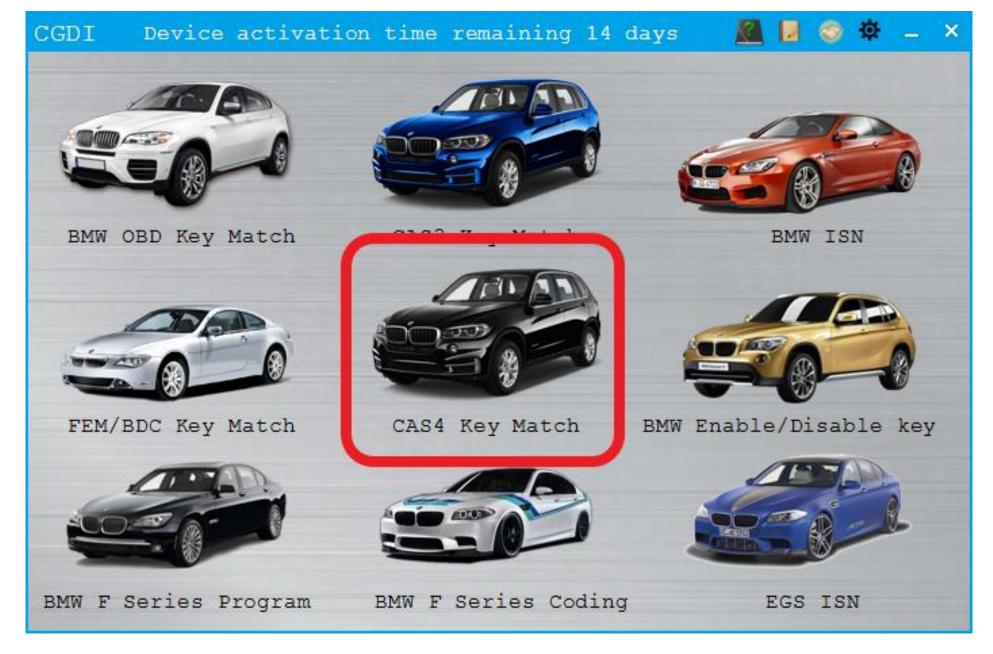


Click on the "CAS4 key match"

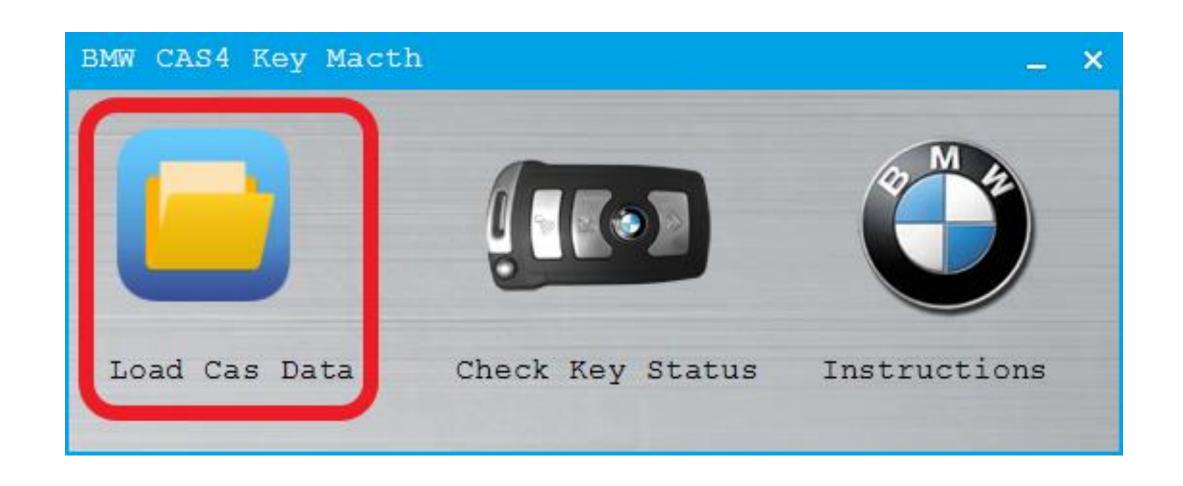

Load CAS 4+ data read by CG-Pro

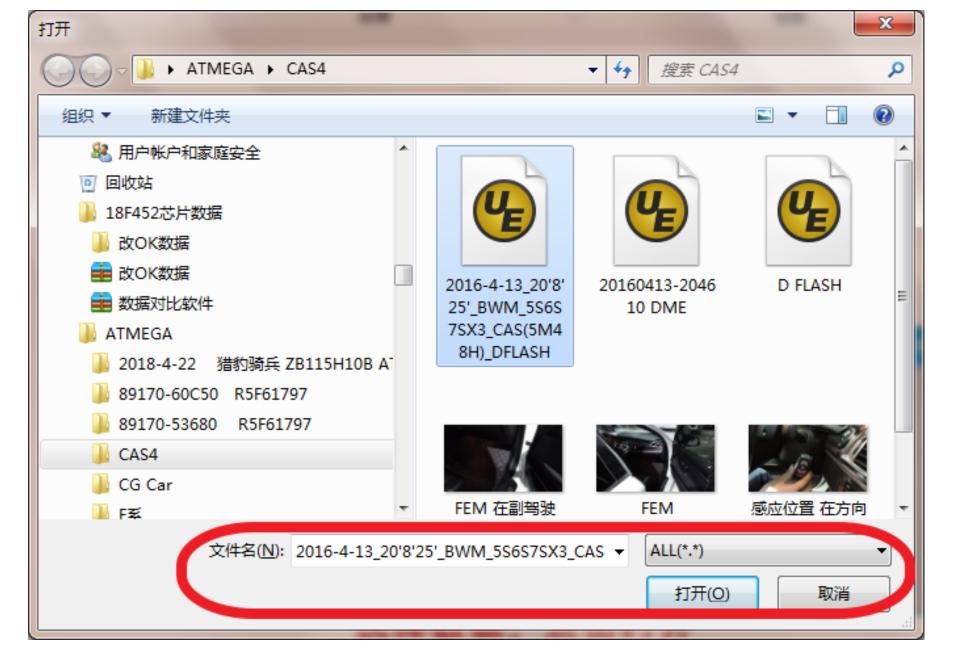


Select data and click open

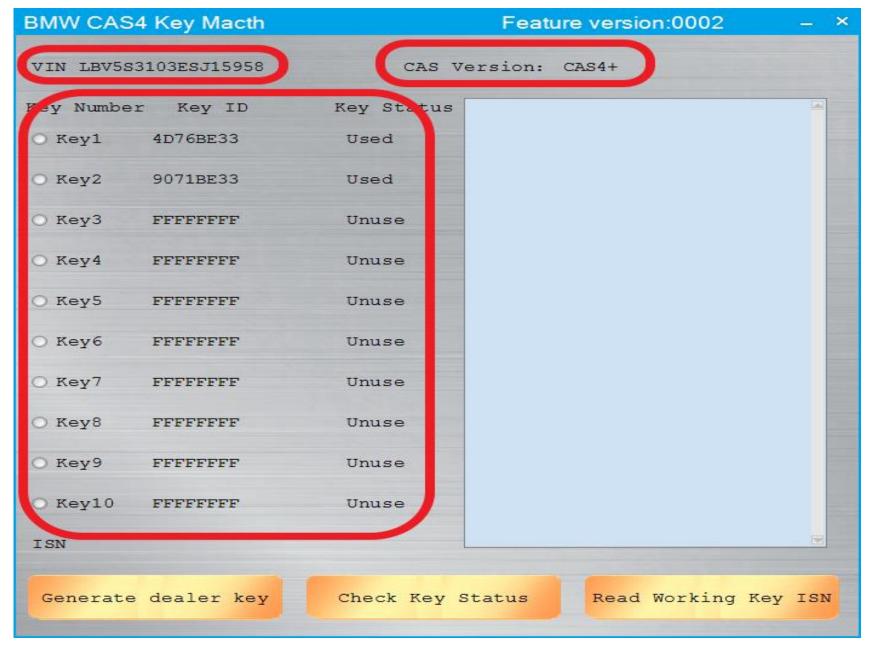


Display relevant information



Select the key position that needs to be configured, click to generate the dealer key, and click on the engine data to determine the next step

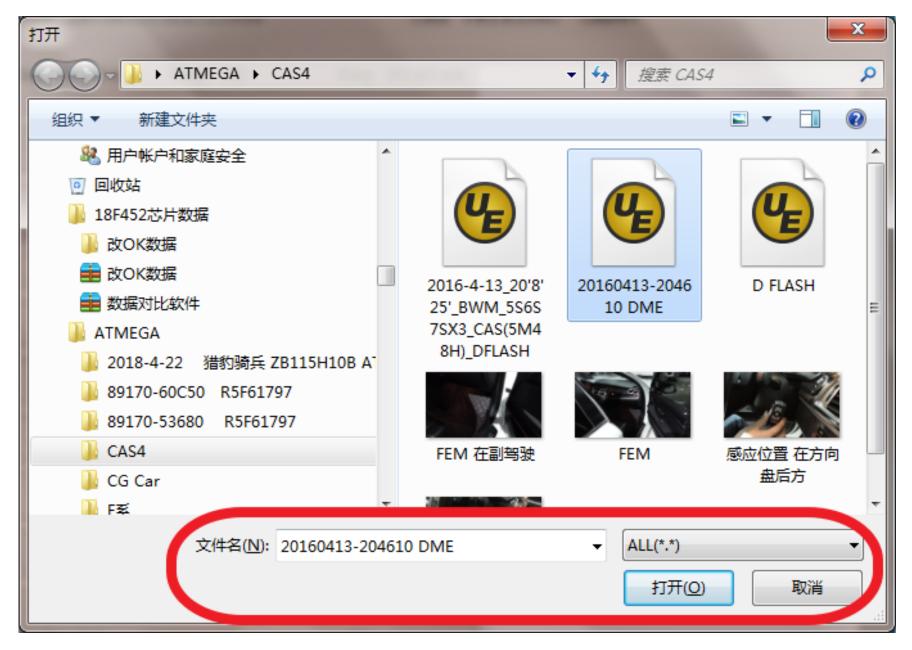


Choose the engine data with CG-100

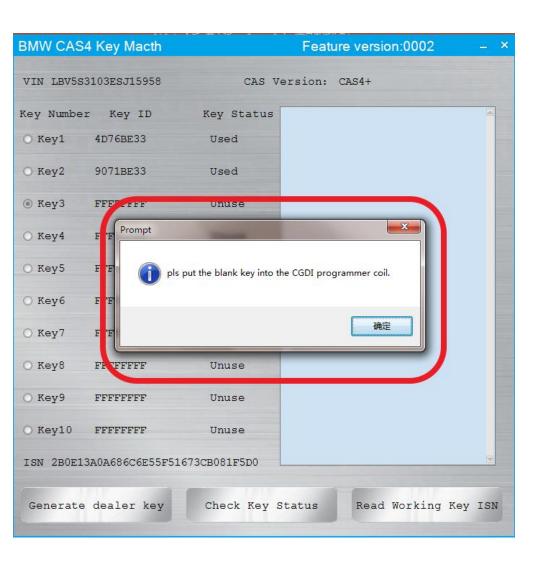




#### **Blank key**

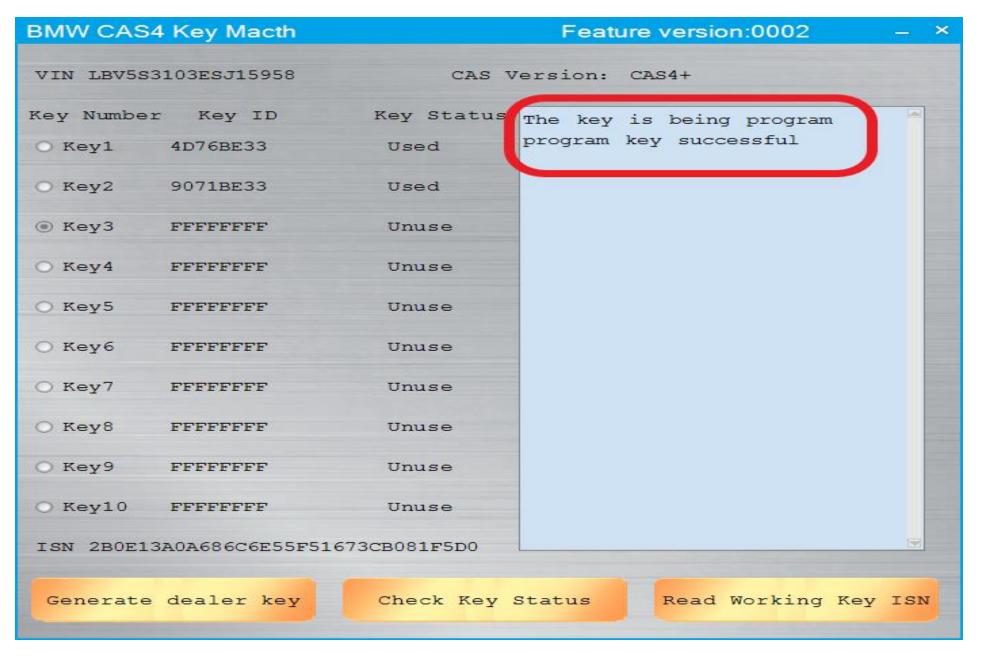

New key programming success

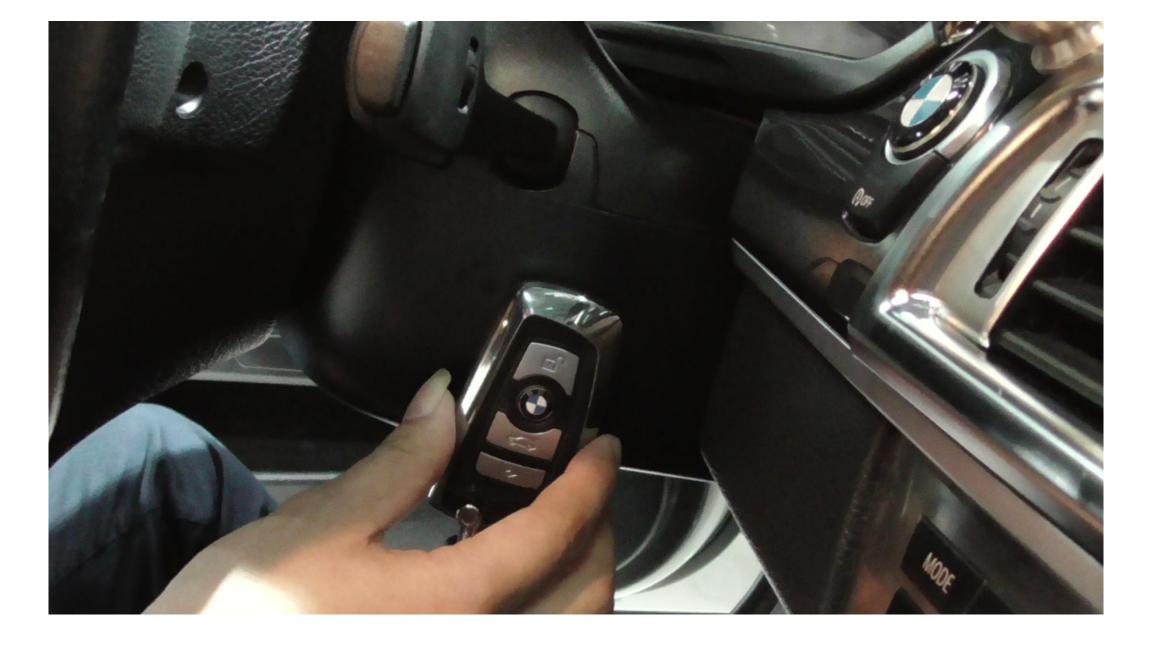

After learning, it can be used normally