


CAS 4 Copy key with key




CAS 4 anti-theft buggy key increases, needs to be read to configure the key, read CAS 4 anti-theft data to load data matching keys. Operating CG-Pro Read CAS 4 anti-theft data




CAS 4+ anti-theft computer module style

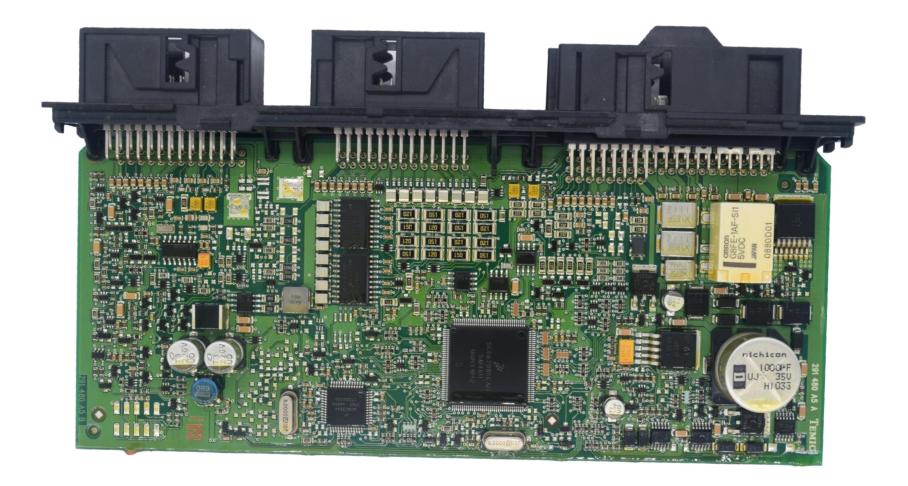


CAS 4 anti-theft computer module

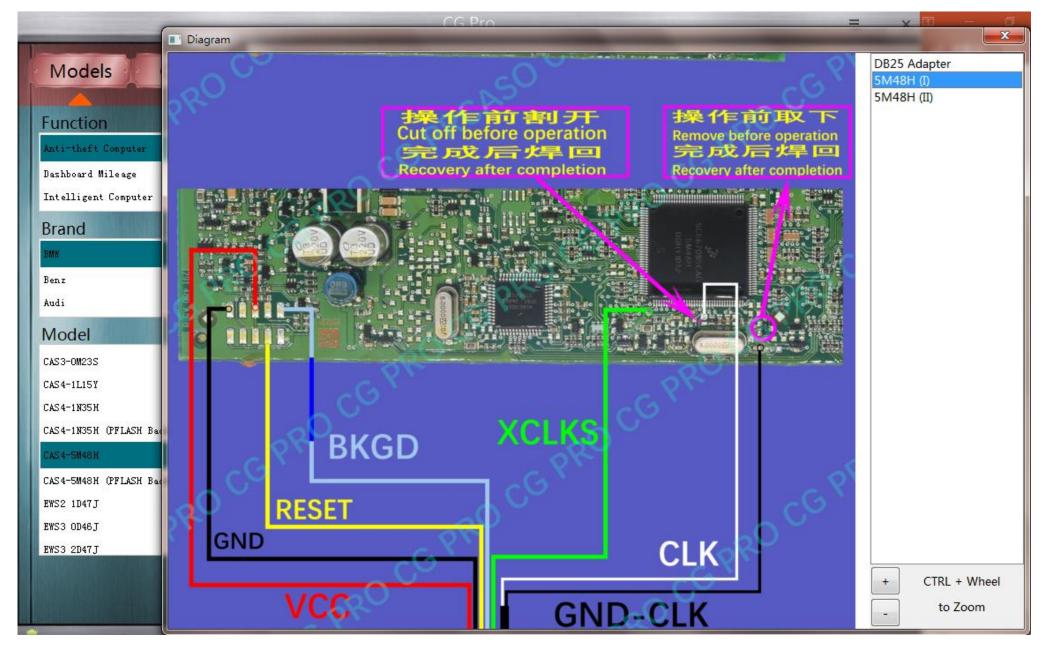


Software physical wiring diagram

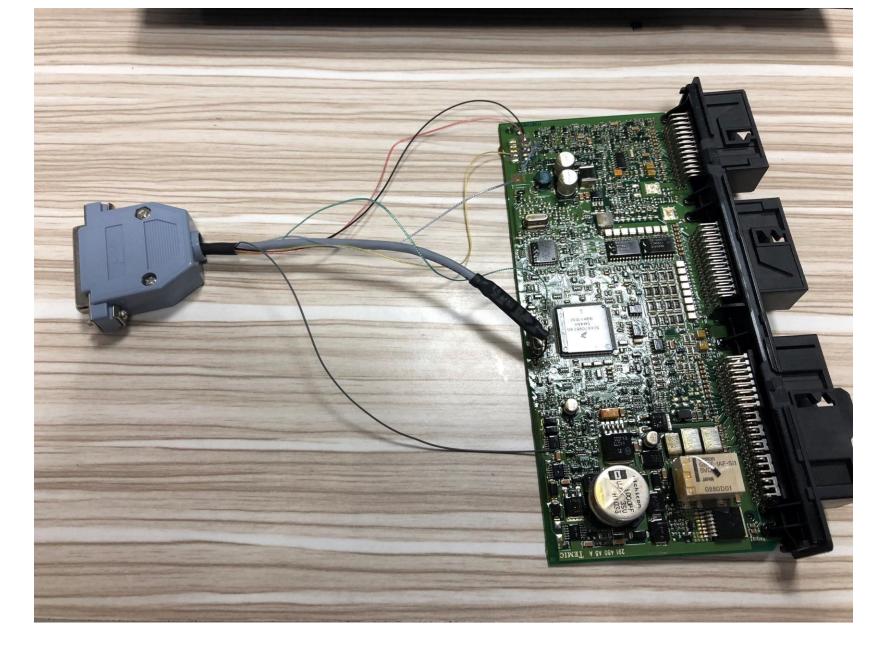

Physical connection

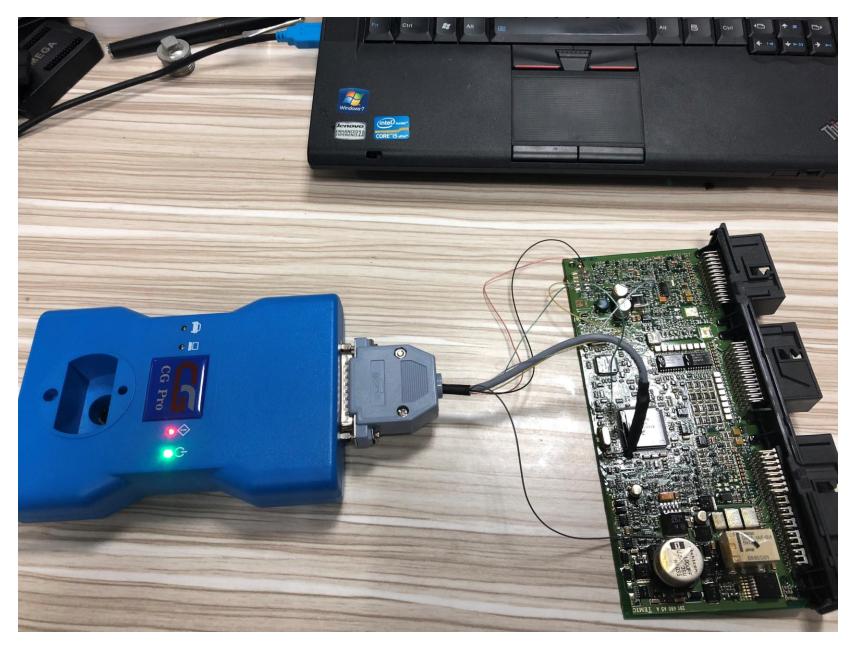


Connect to CG-Pro equipment

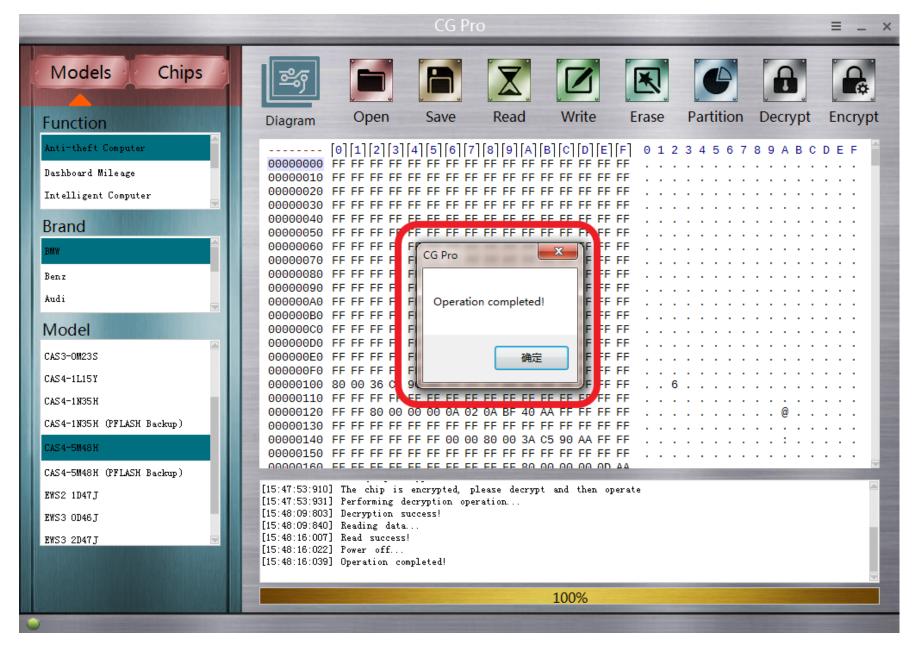


Decrypt successfully and save the data


Operating CG - DI Match the new key

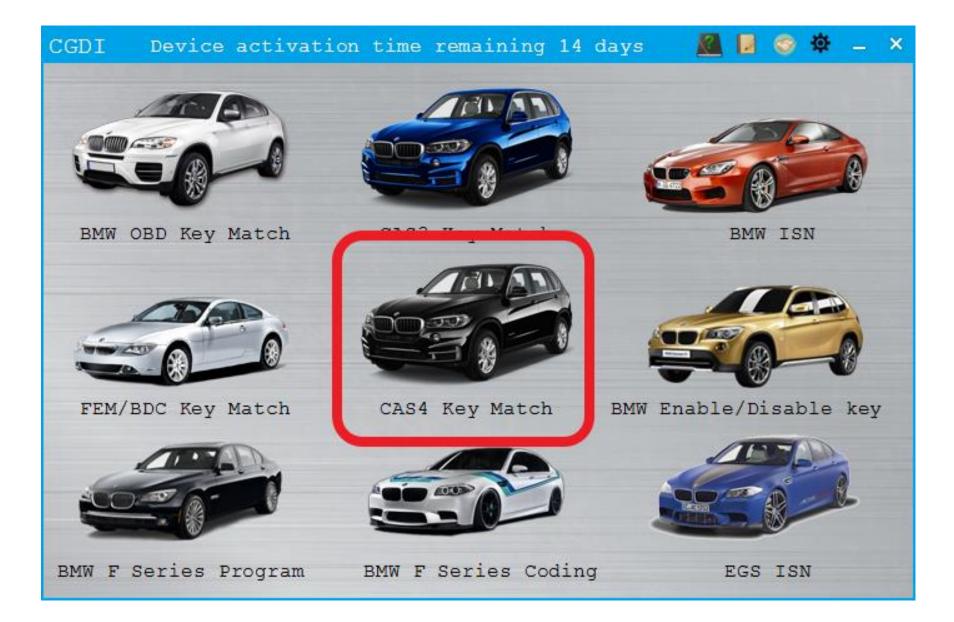


Click on the "CAS4 key match"

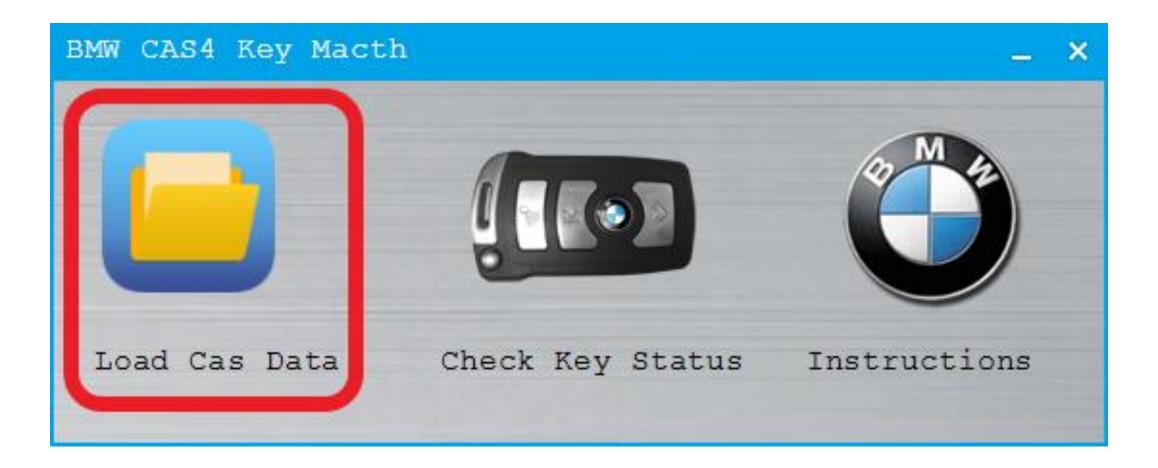


Load CAS 4 data read by CG-Pro

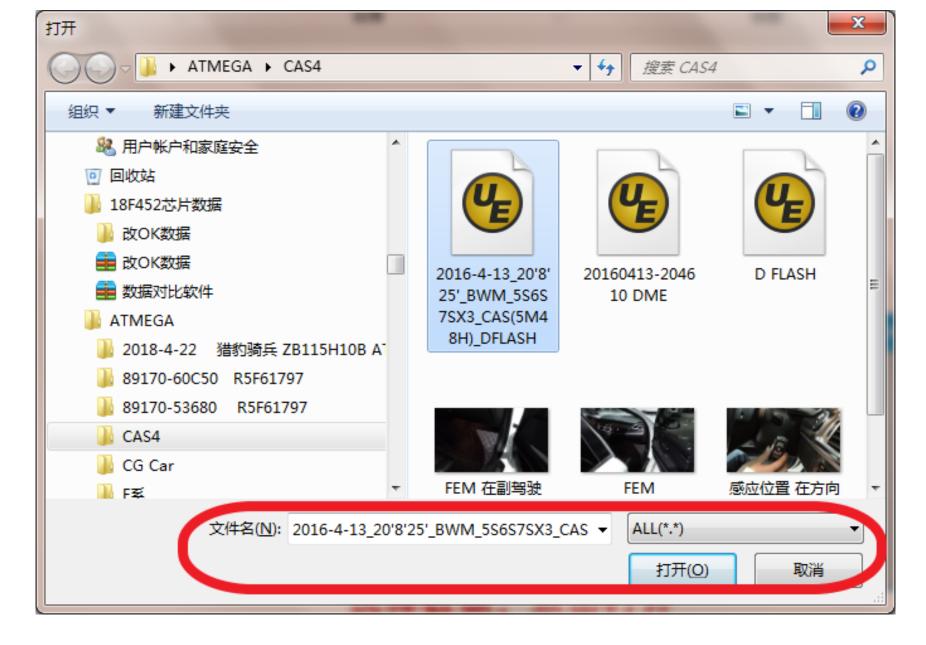

Select data and click open

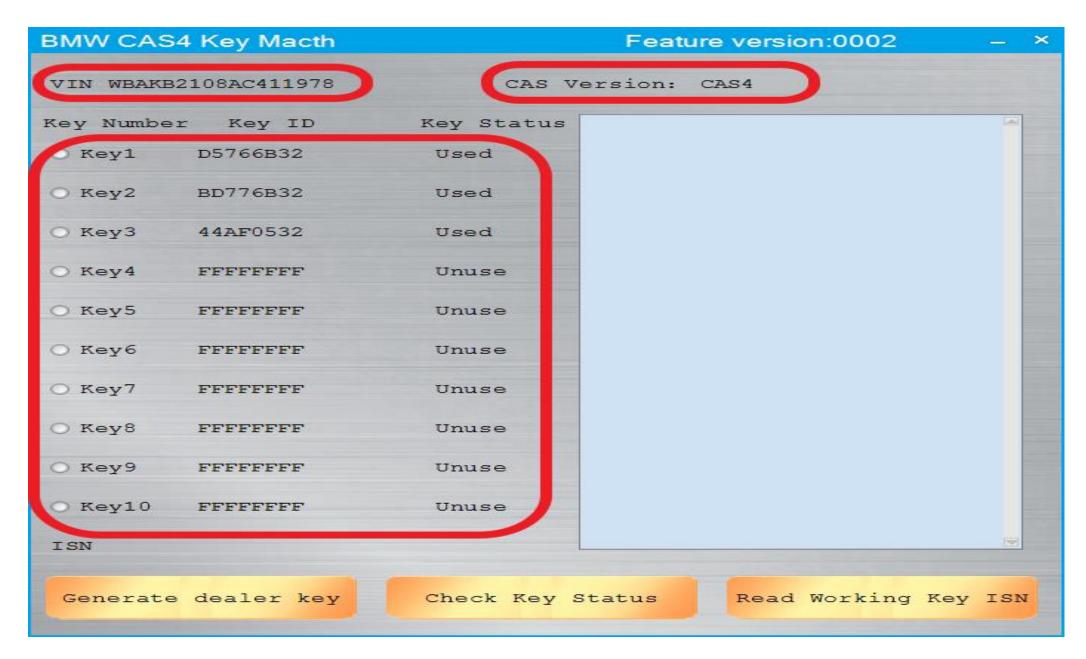


Display relevant information

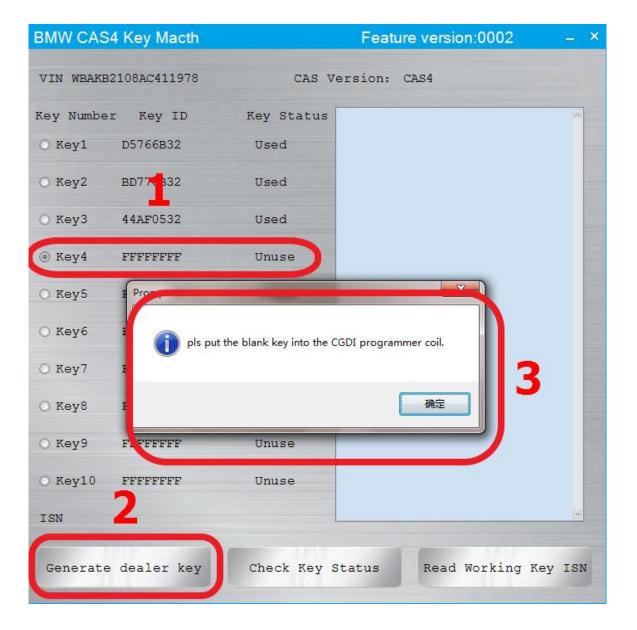




Select the key position that needs to be configured, click to generate the dealer key, put in the blank key, and determine the next step.

New key programming success

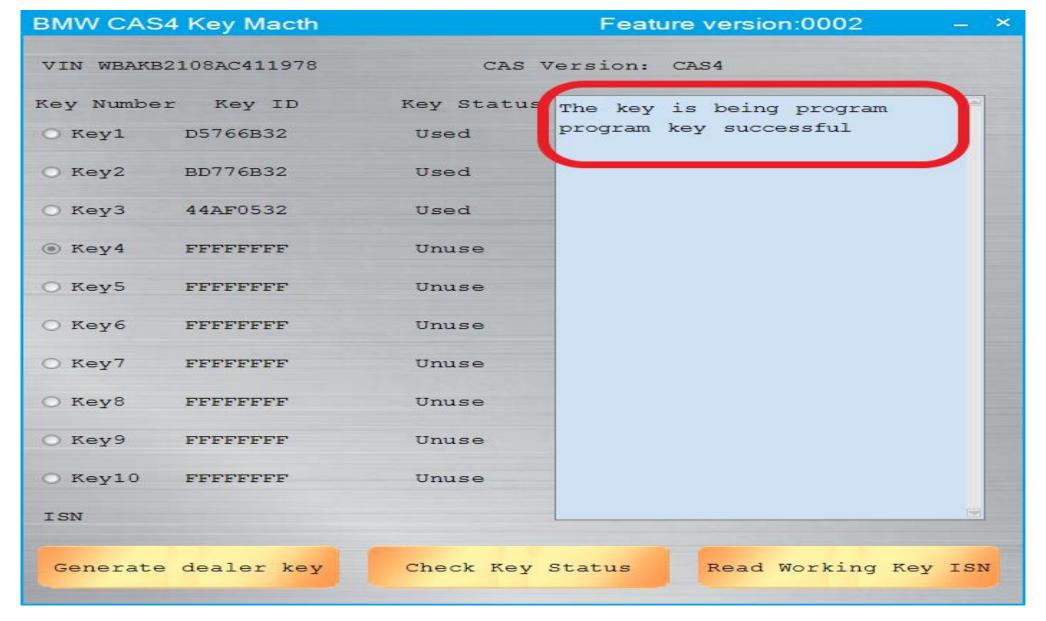

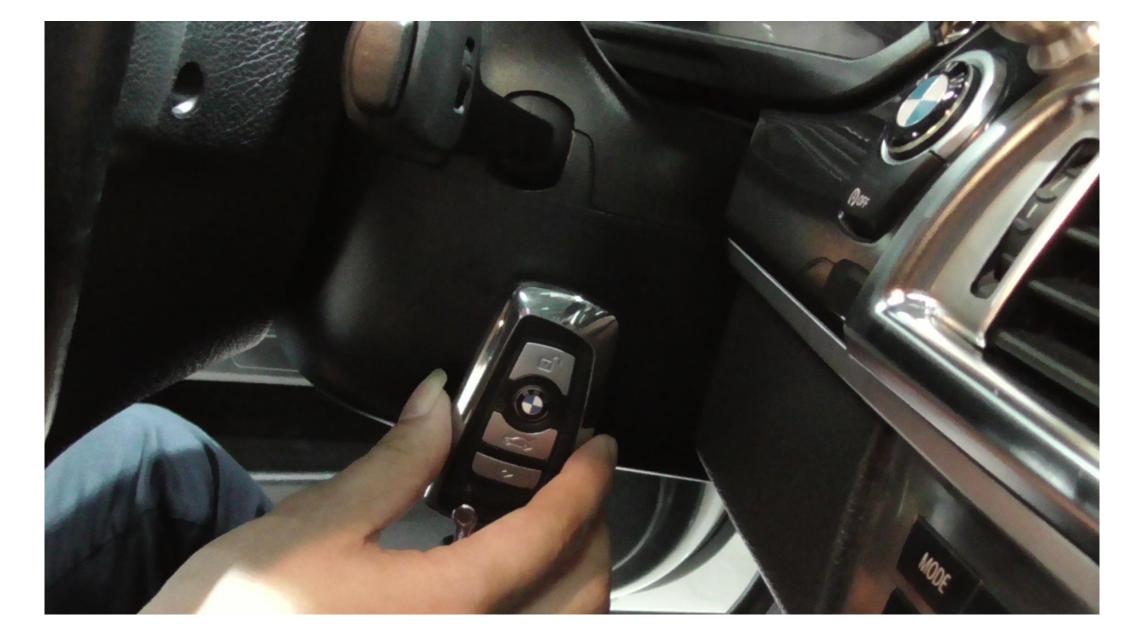

After learning, it can be used normally