

Clean the ISM/DSM/ESM

CG-MB


Remove the car, remove ISM/DSM/ESM, and connect according to the software wiring diagram




Gear computer style



Gear computer pin

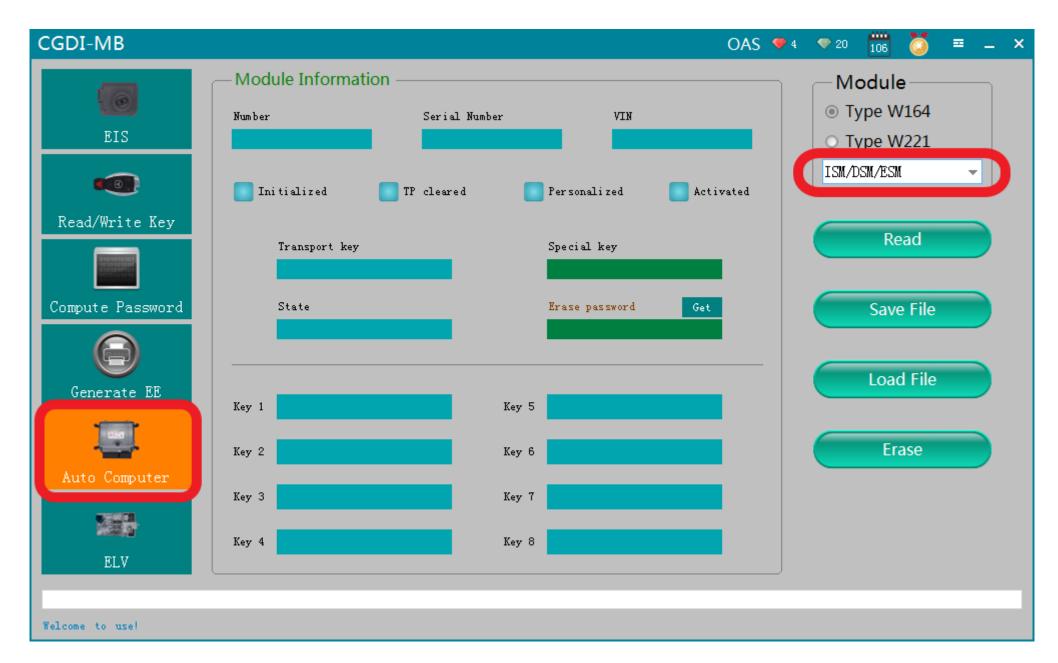


Open software, enter Auto computer, choose "Gear computer"

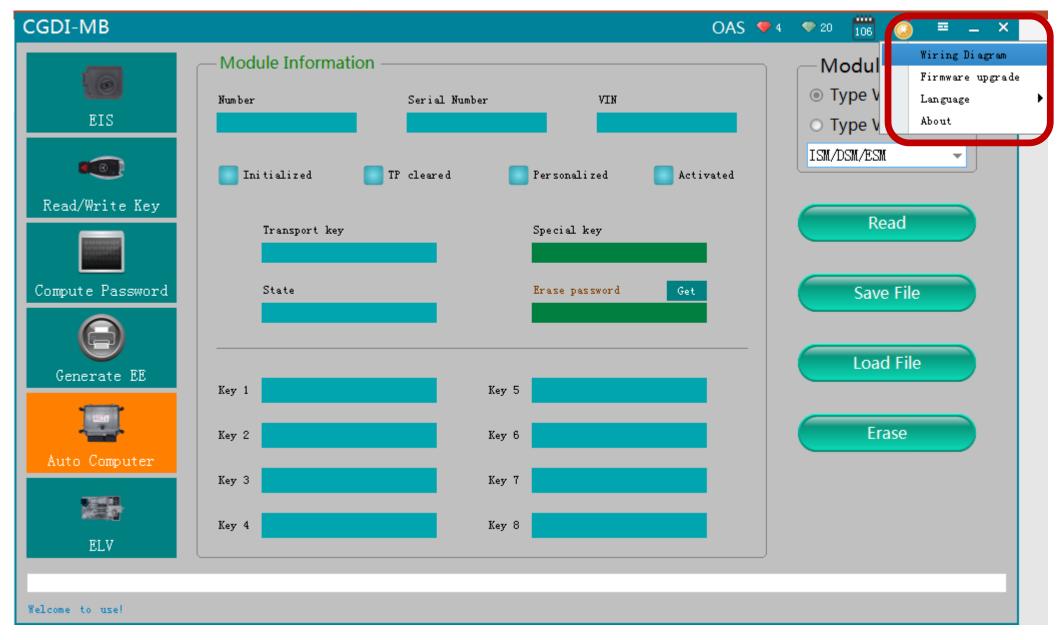


Software wiring diagram


Wiring Diagram

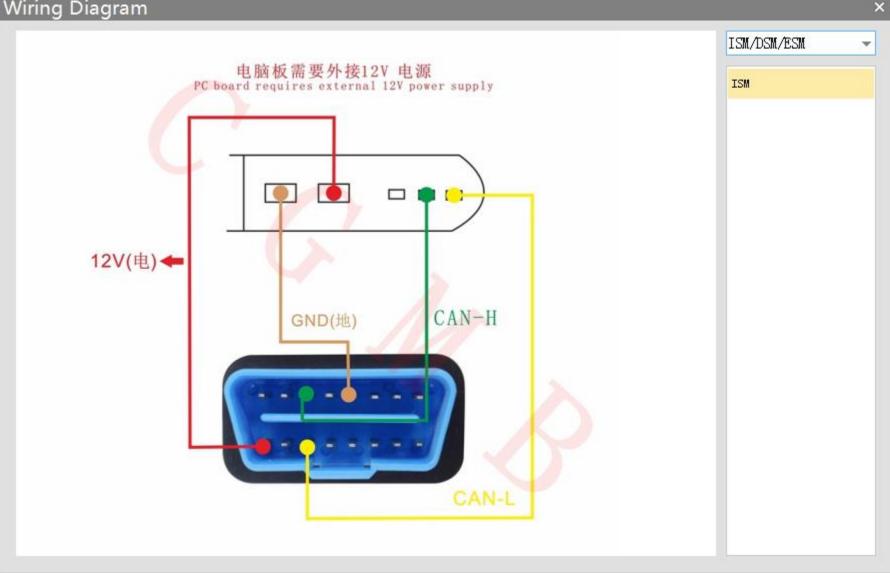


Software wiring diagram

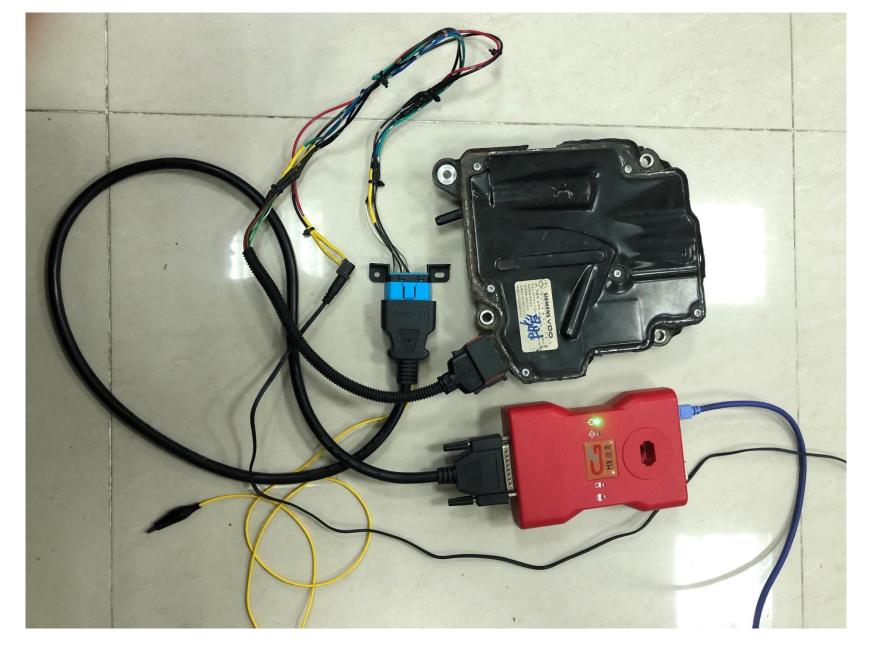


Physical wiring diagram

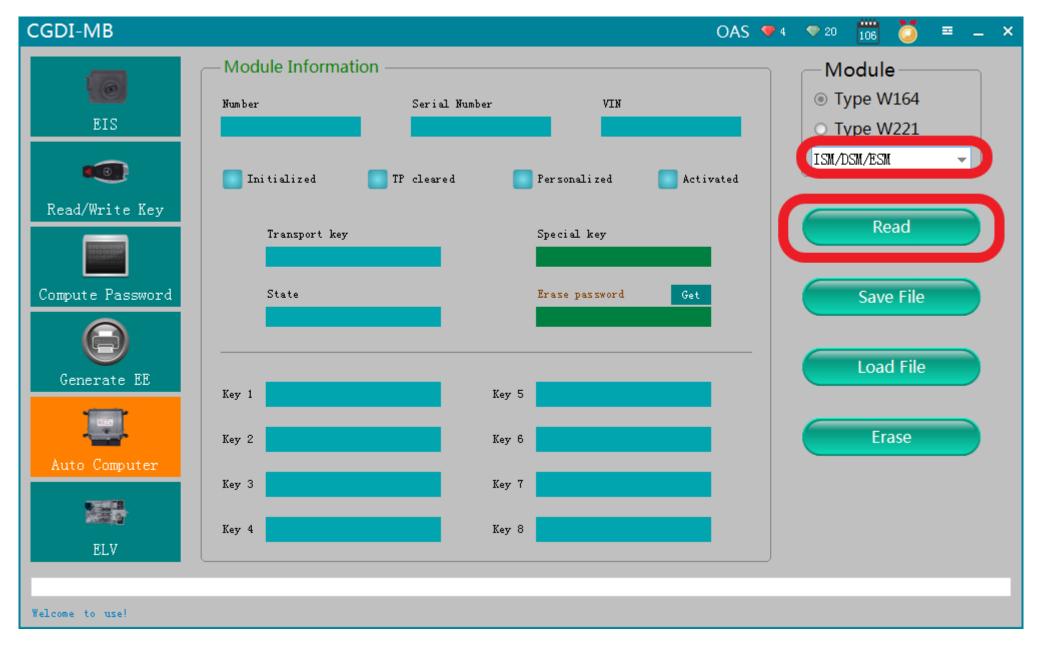


Click 'Read'

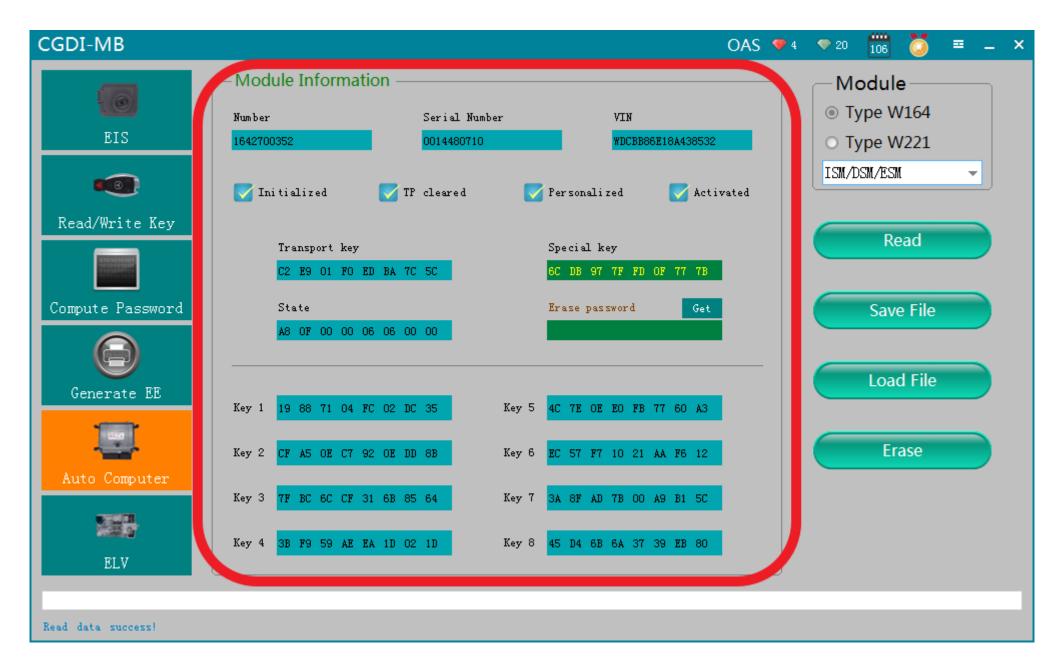


Gear computer related information

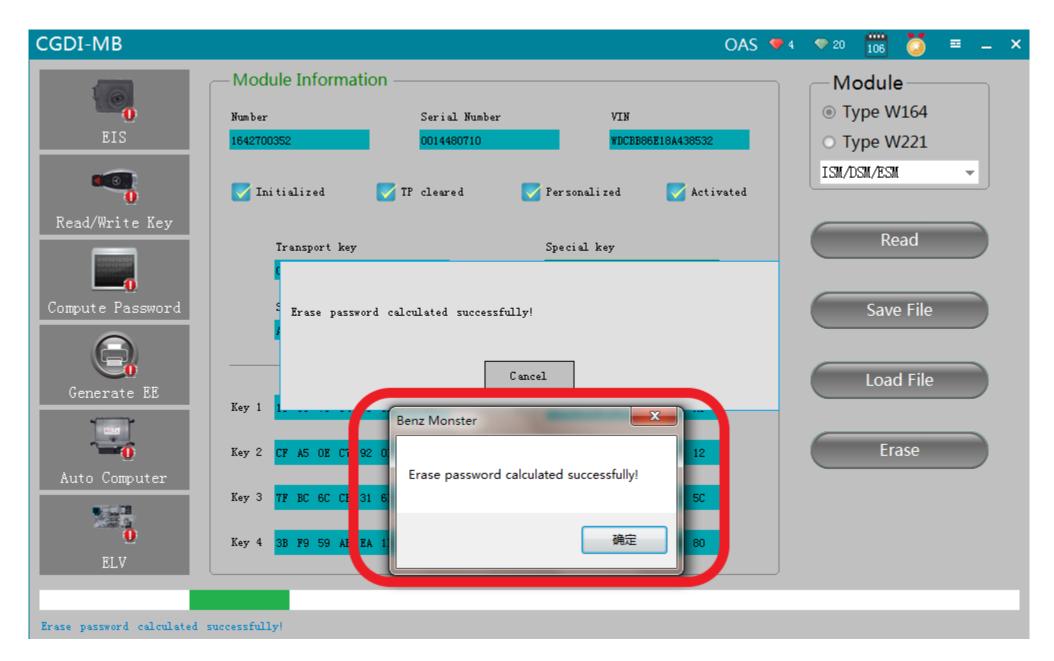


Click to get erase password, calculated successfully

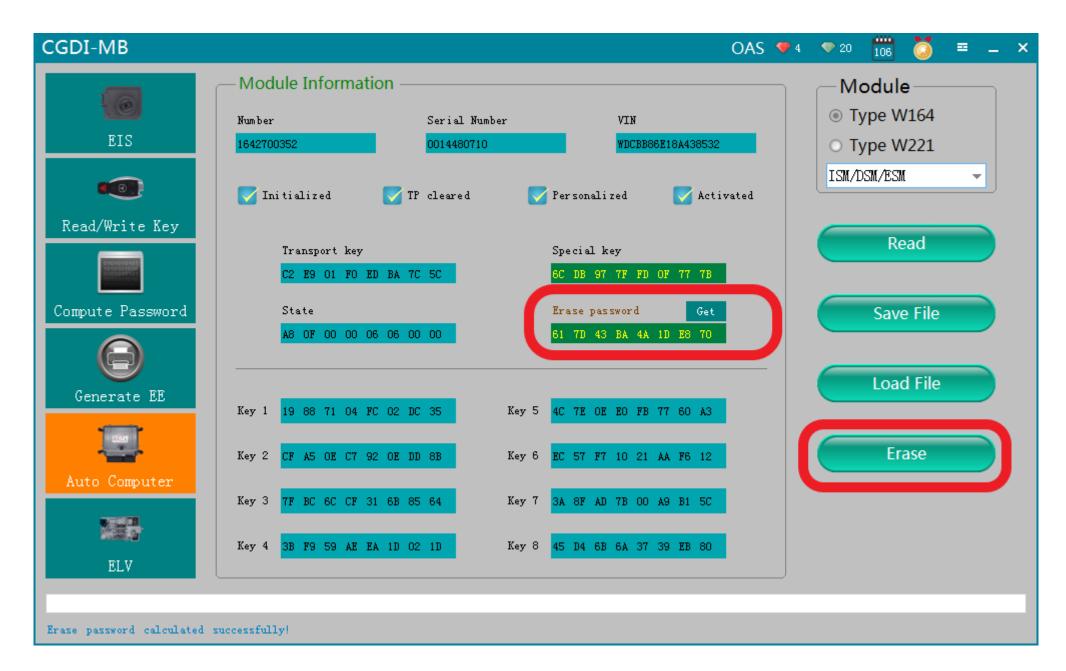

Get password successfully, click"erase"

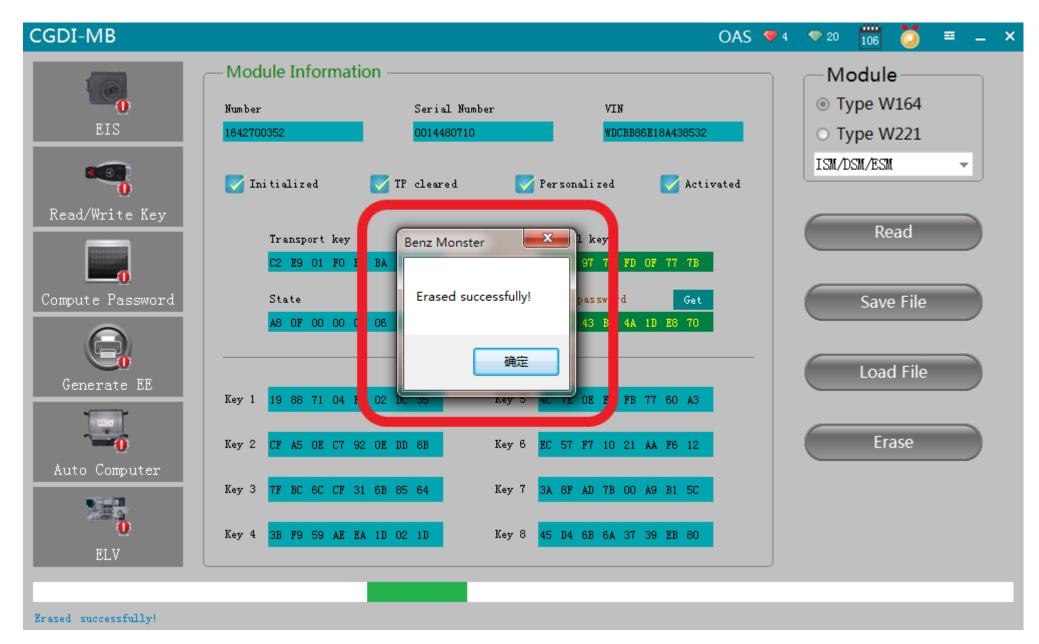

Erased successfully

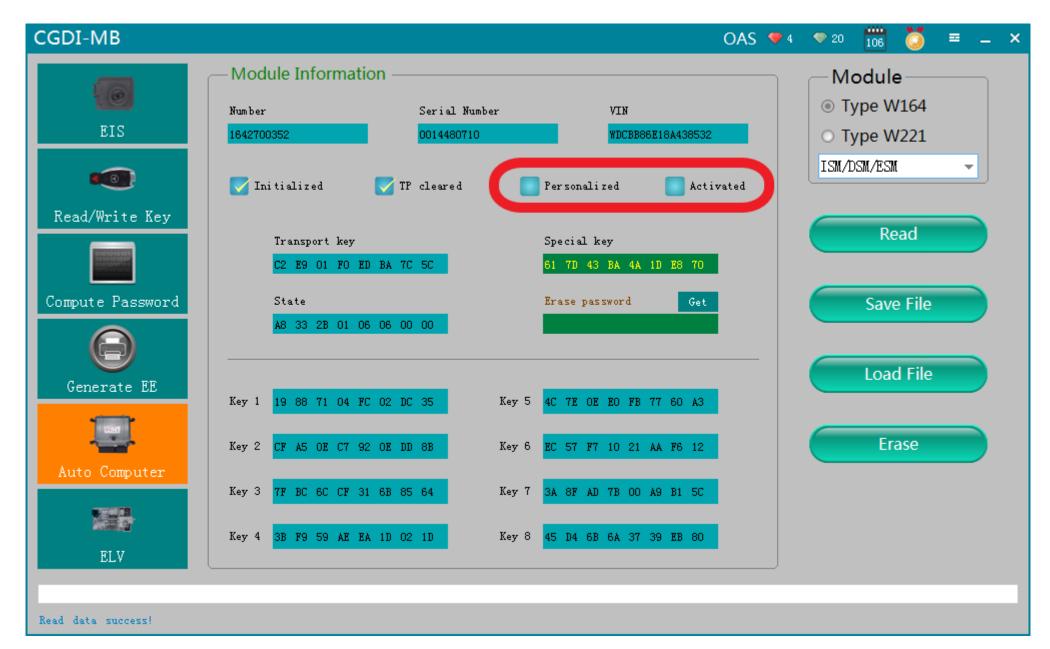

Clik"Read" again, show that it was erased