

Erase the ECU

CG-MB


Remove the car, remove the ECU, and connect according to the software wiring diagram



Engine computer style




Engine computer pin

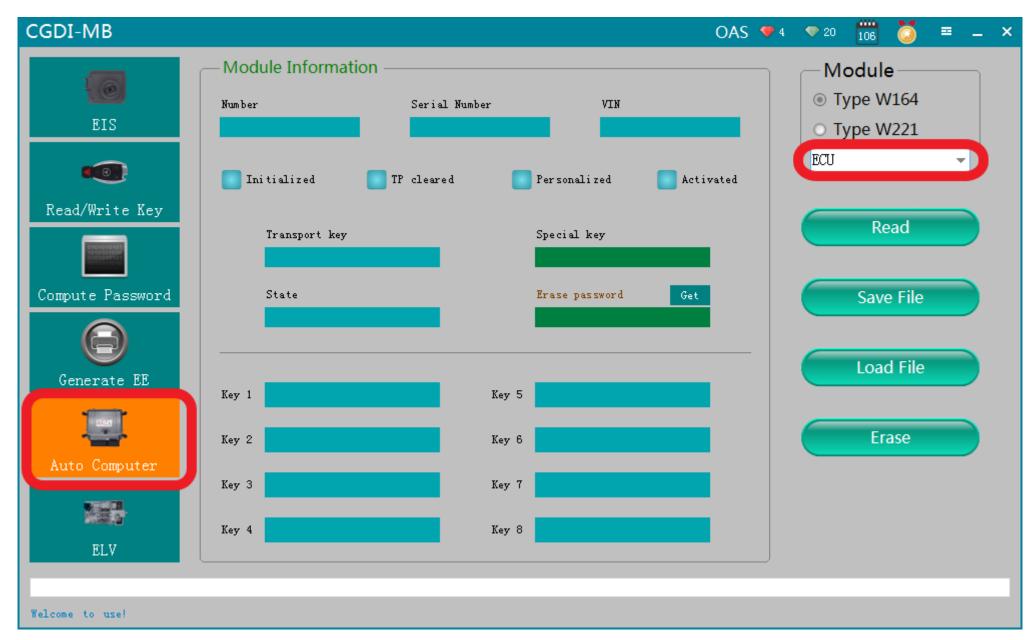

Open software, enter Auto computer, choose "Engine computer"




Software wiring diagram

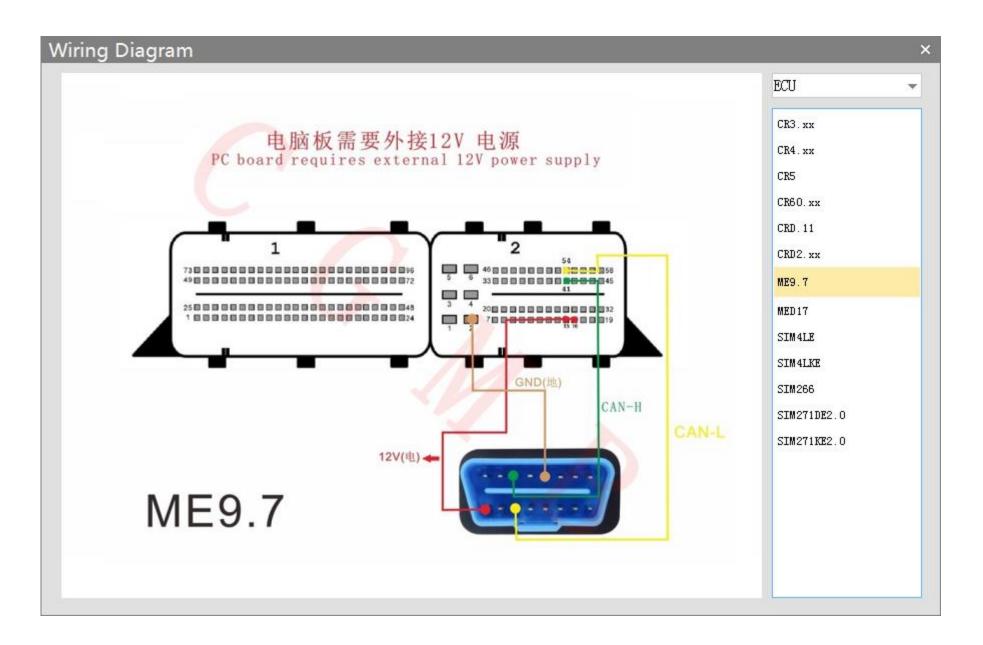


Software wiring diagram




Physical wiring diagram

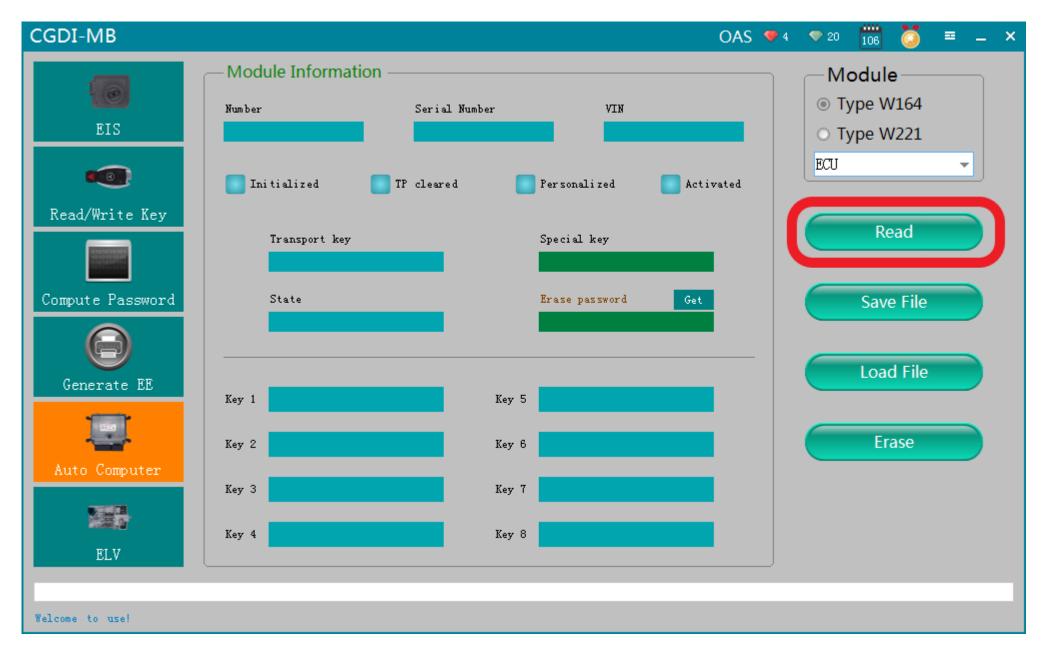


Click "read"

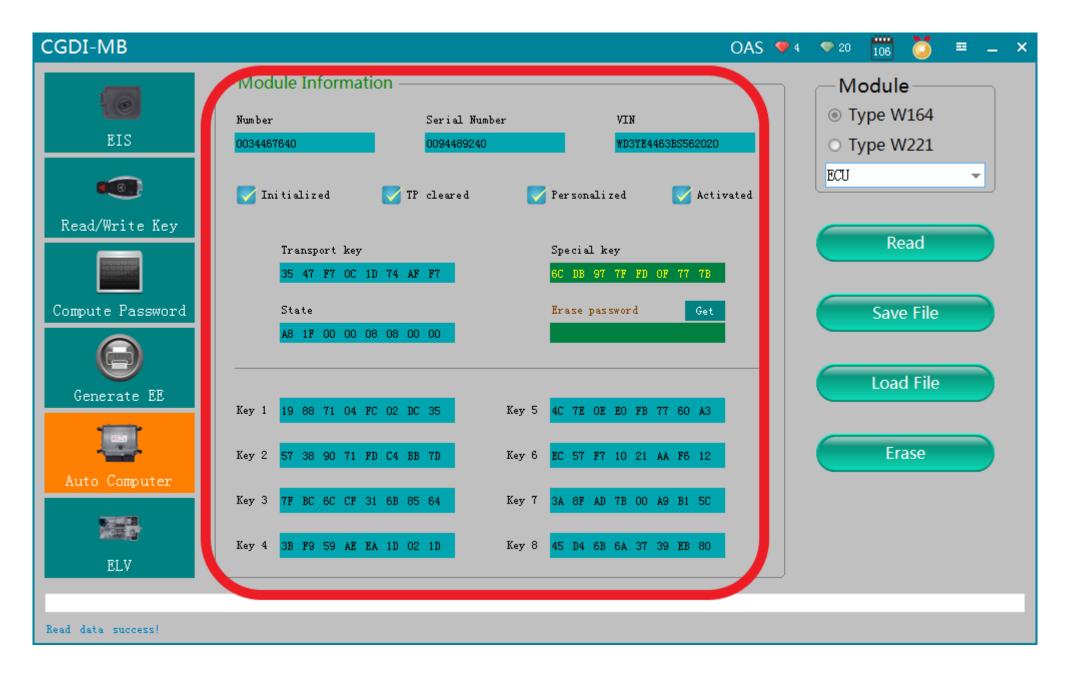


Engine computer related information

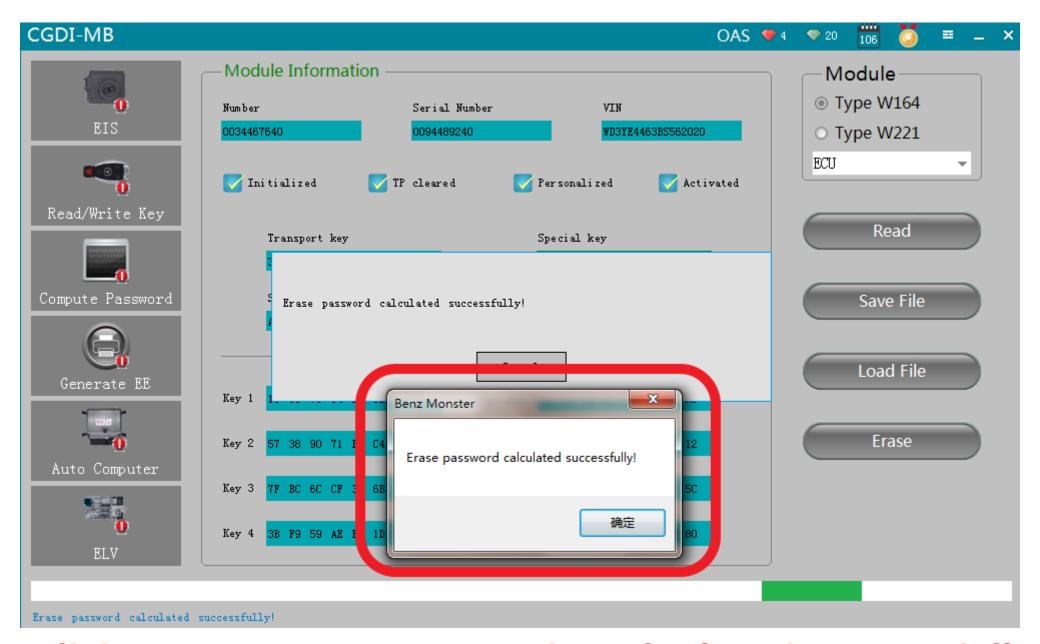


Click to get erase password, calculated successfully

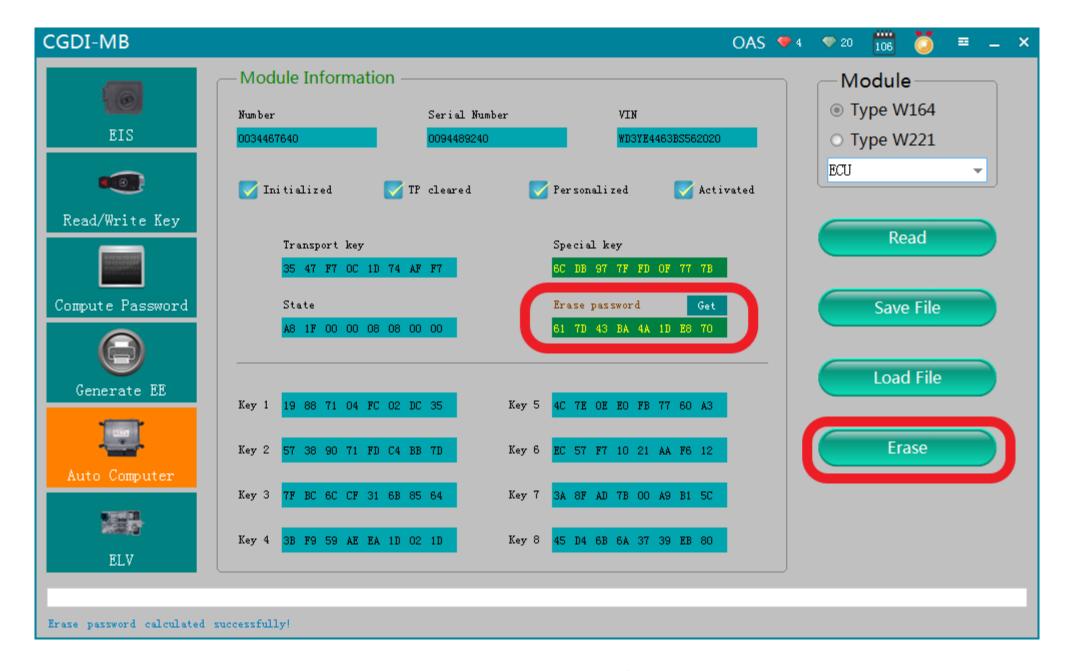

Get the password successfeully, click "Erase"

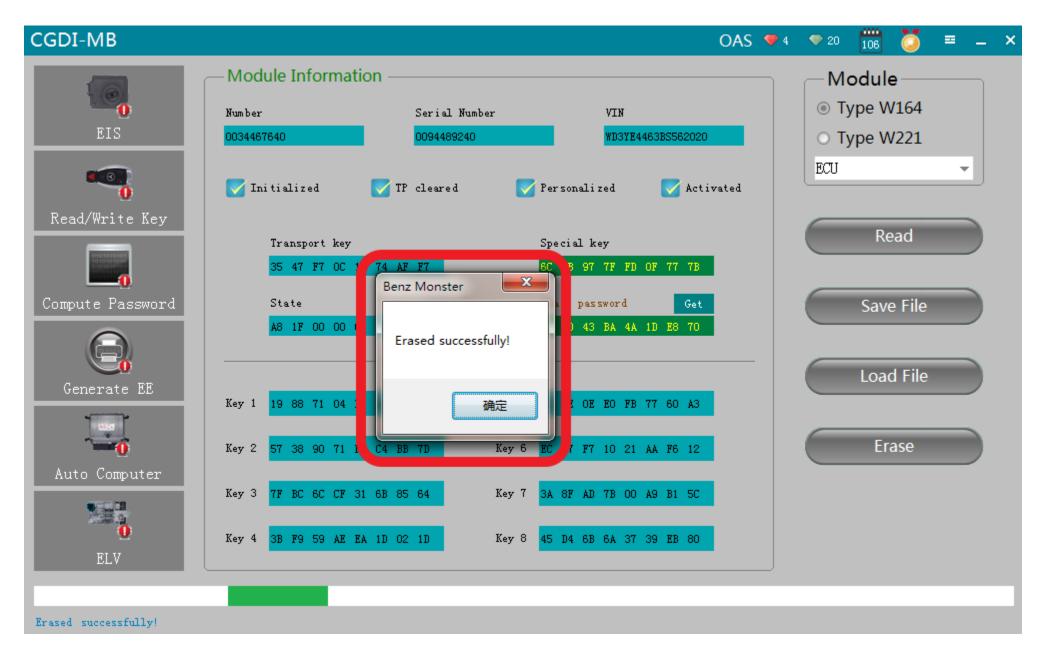

Erase successfully

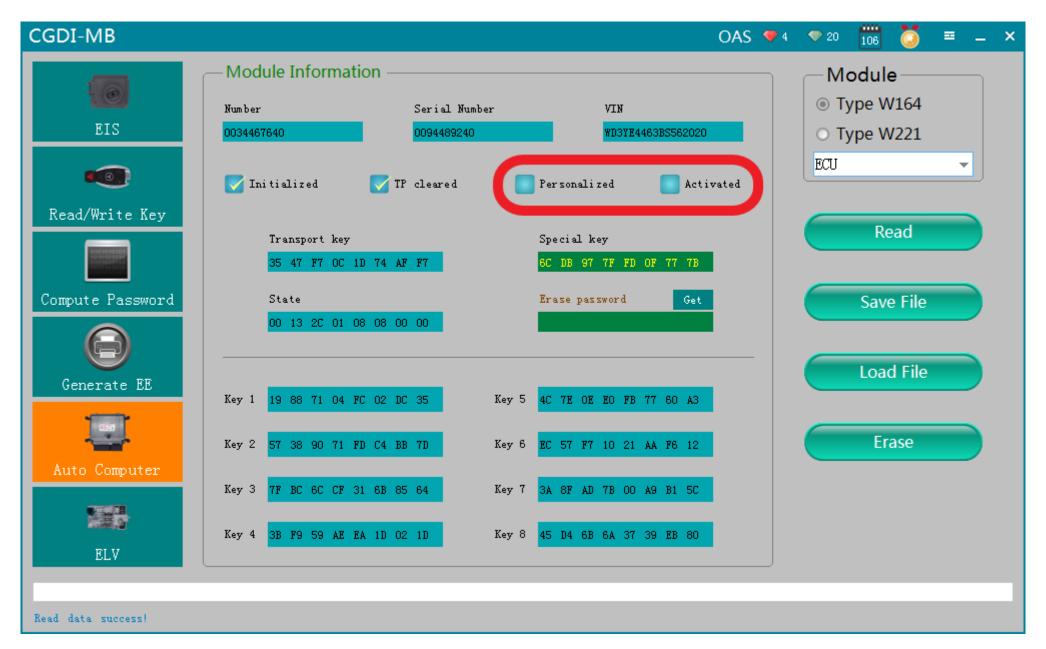

Click"Read" again, show it was erased