


A166 Copy Key Without Key

CG-MB

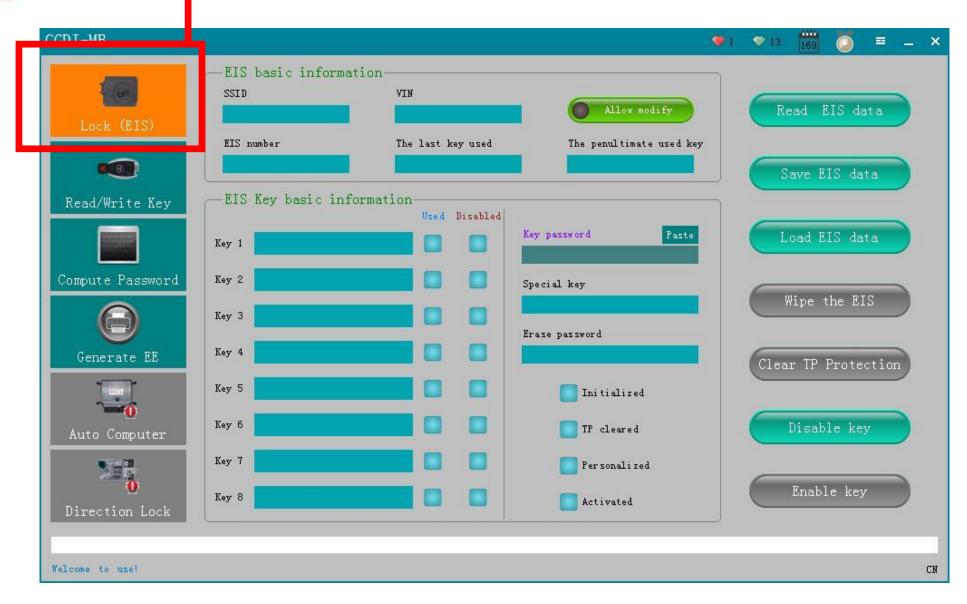


Choose Lock(EIS)






1. Click Read EIS data+

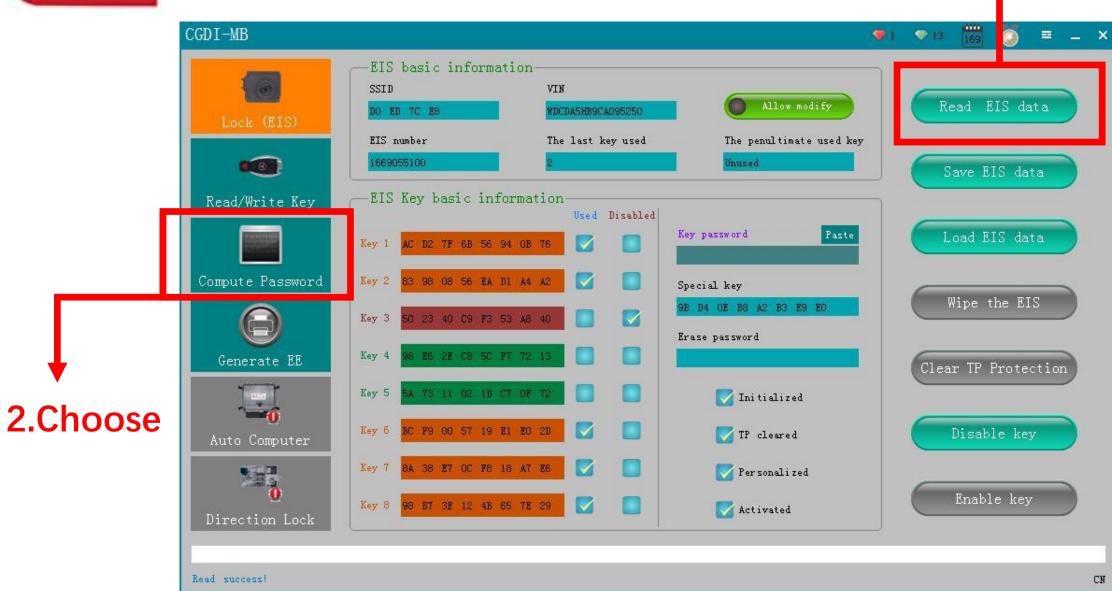



1.Choose Copy key without key

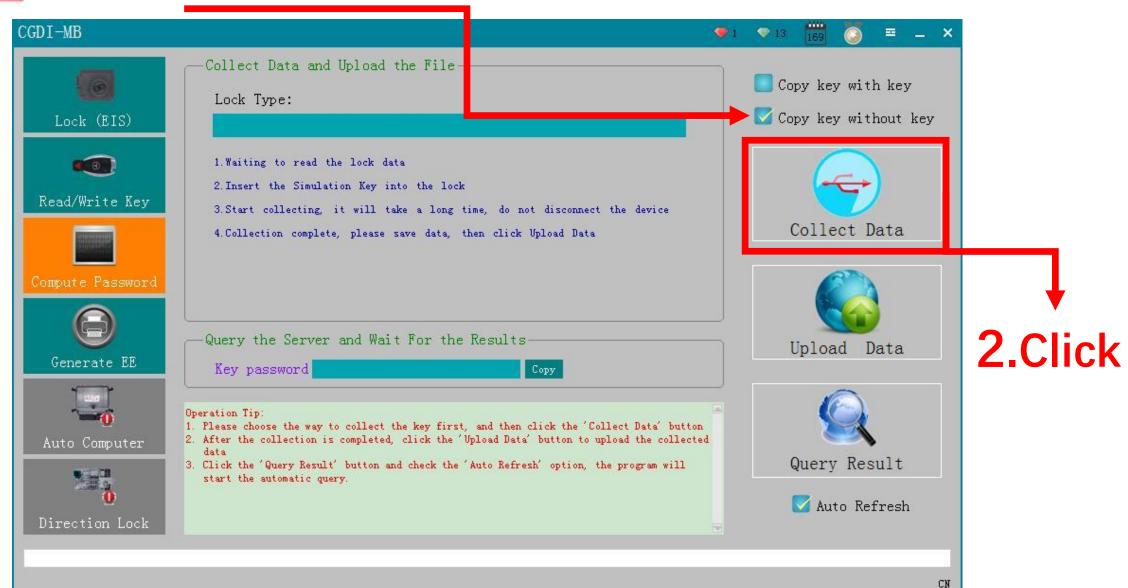







prepare for collecting data, don't operate in random!



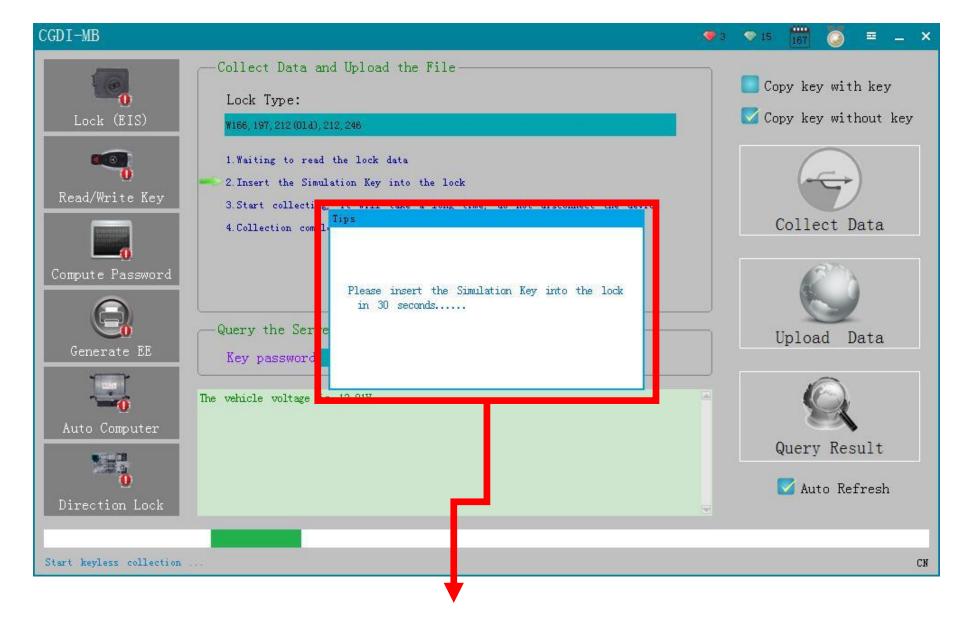


please operate as the software instructed



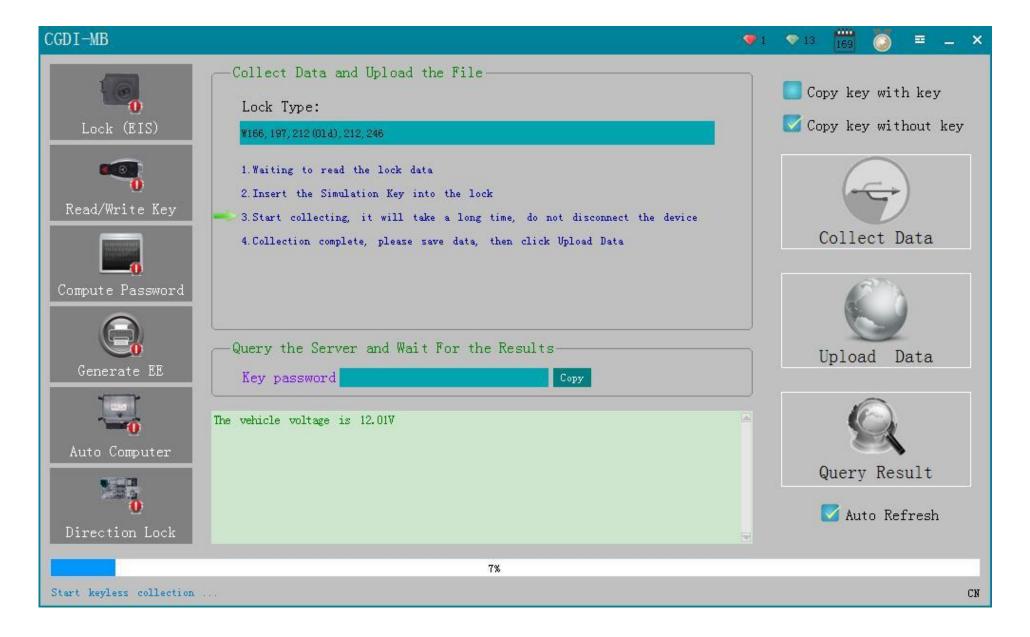


It is collecting data now



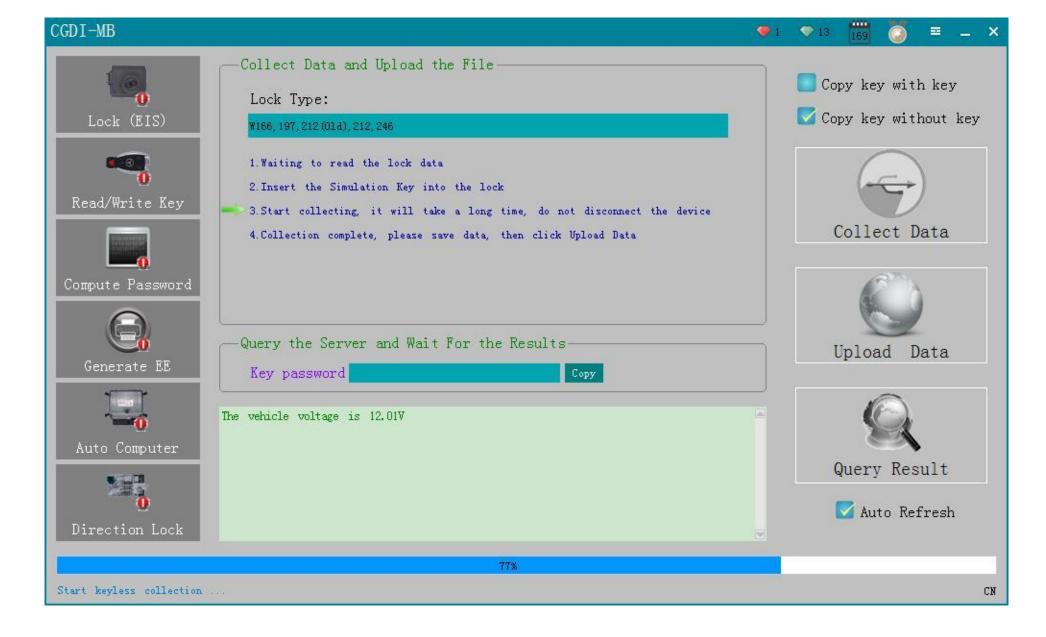


Collecting data 77%



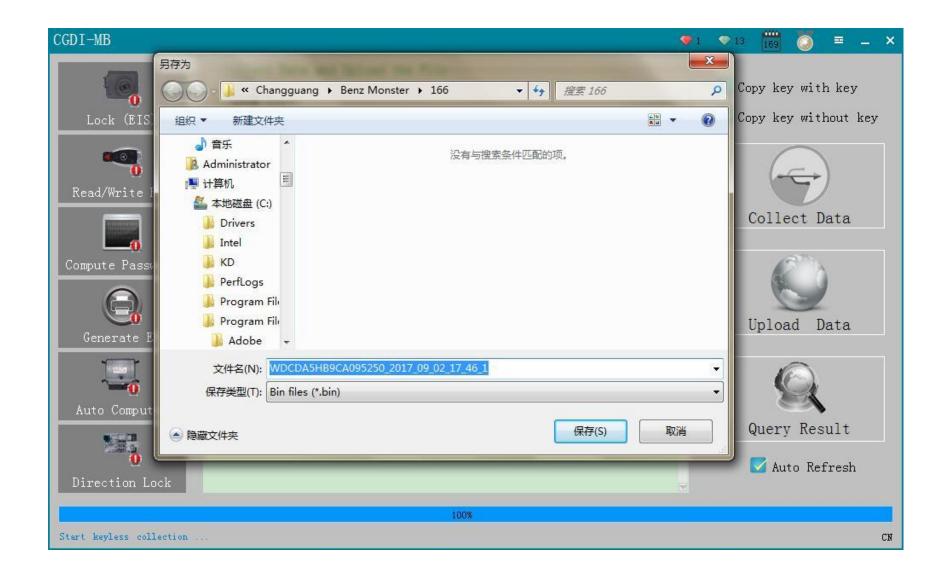


Data collecting finished, please save it with dedault setting



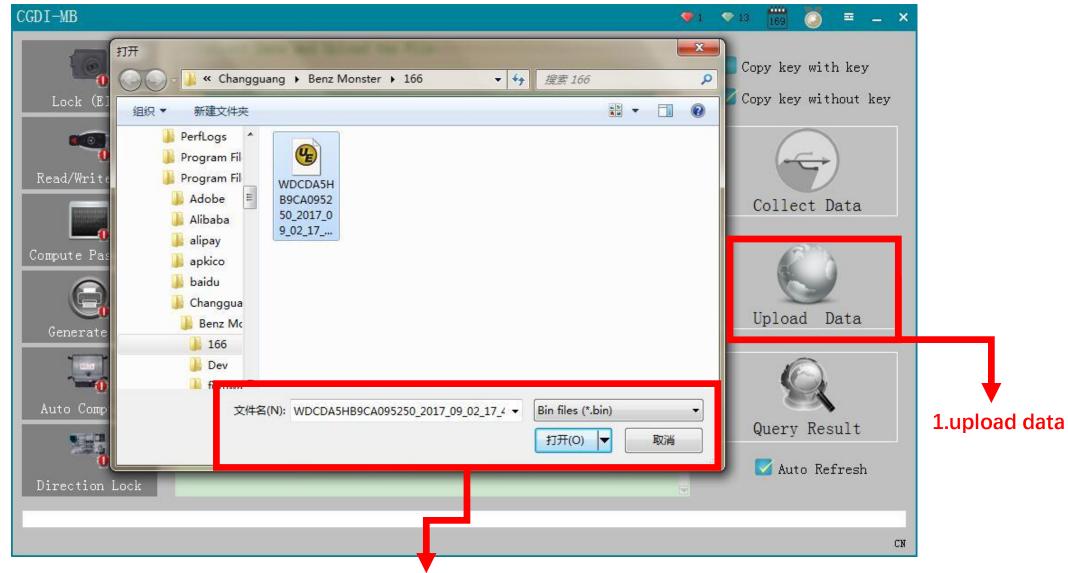


2.open the data just saved



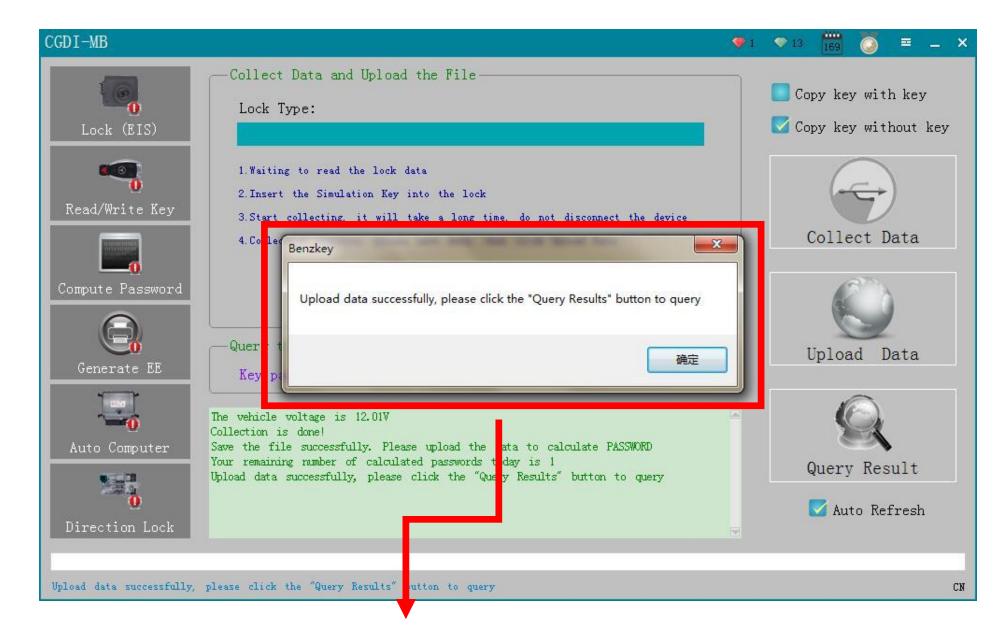


Upload data successfully



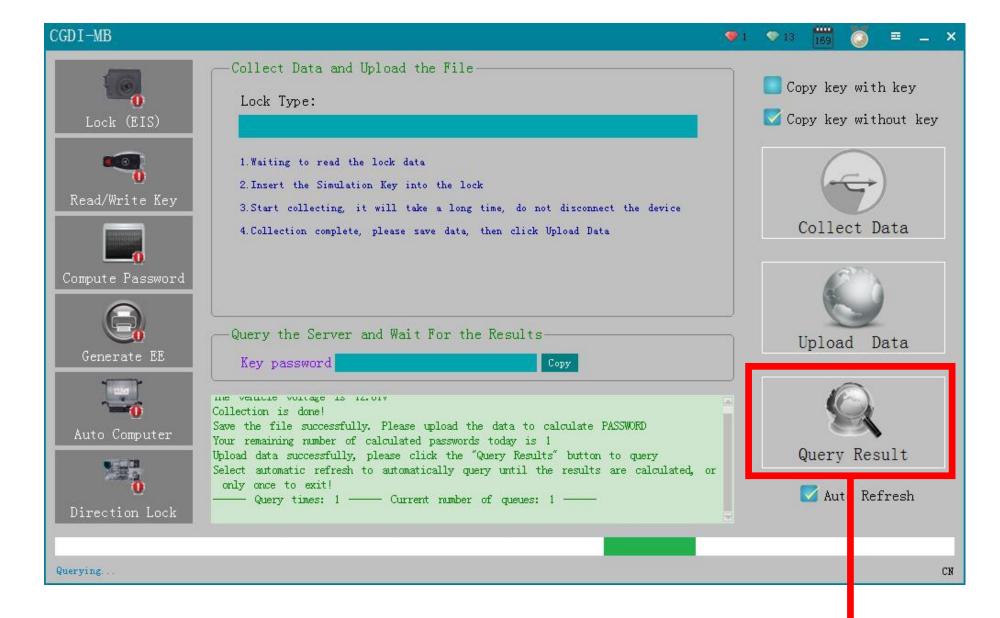


Query password



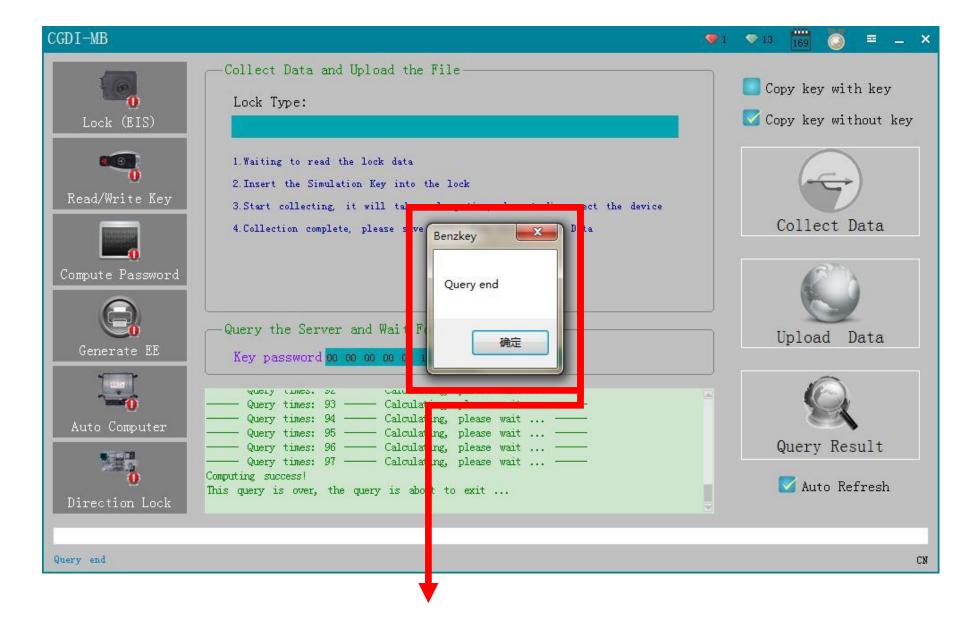


Wait 2 minutes please, query successfully

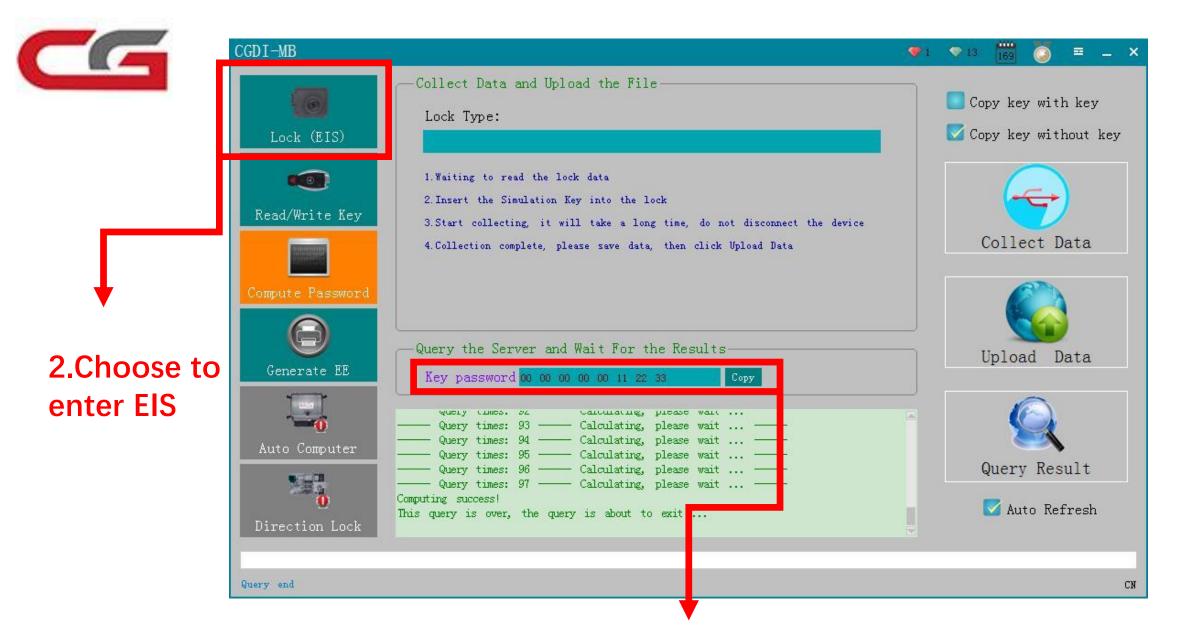


1. Display password, click 'copy'



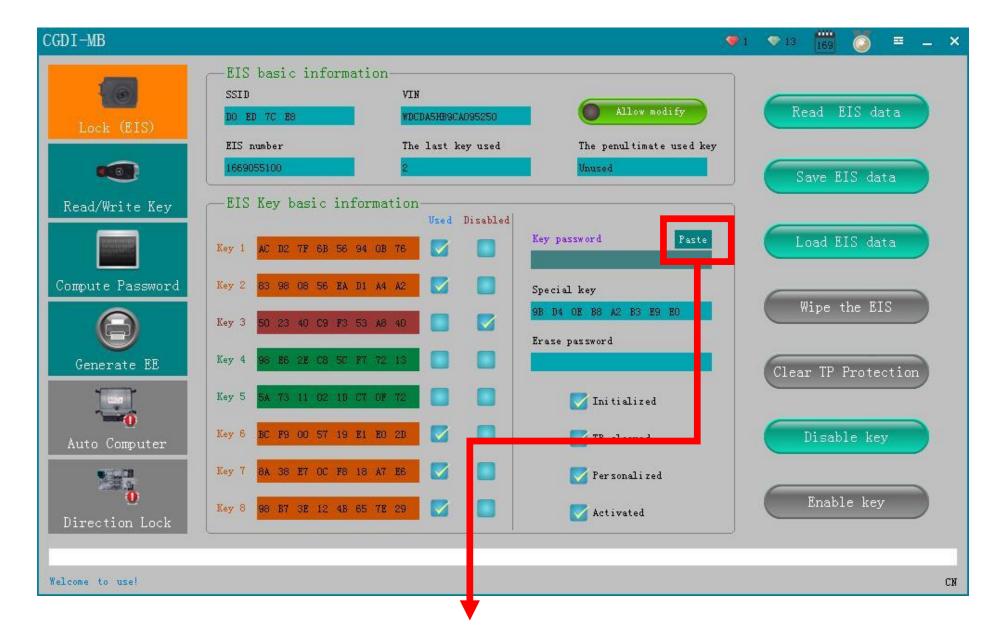


paste password



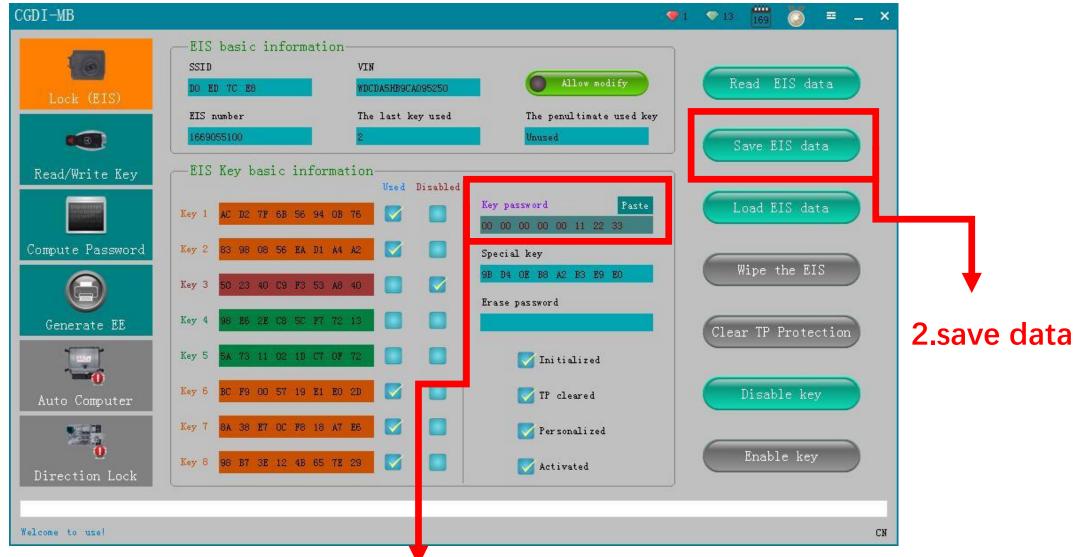


1.paste password



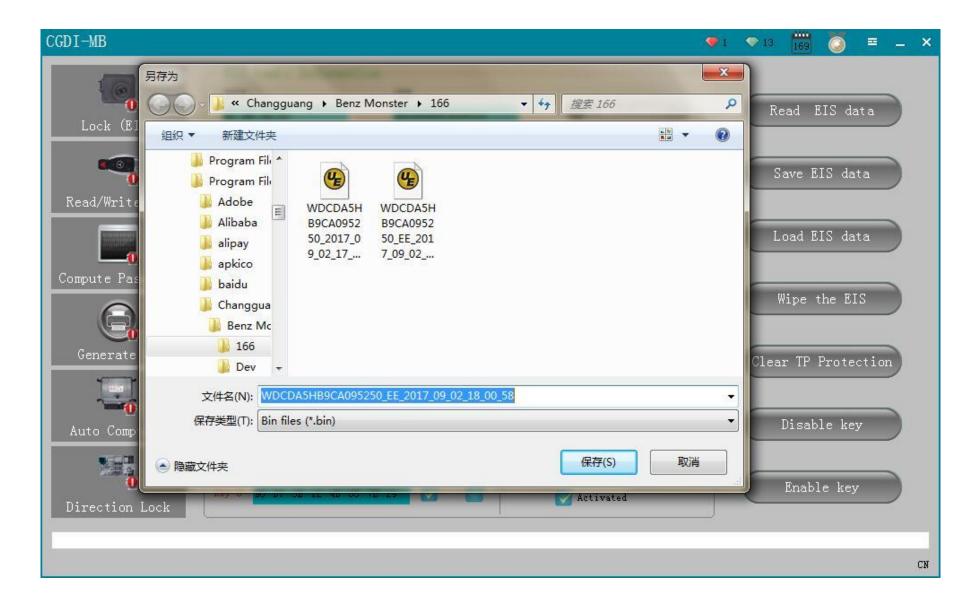


Please saved by default setting

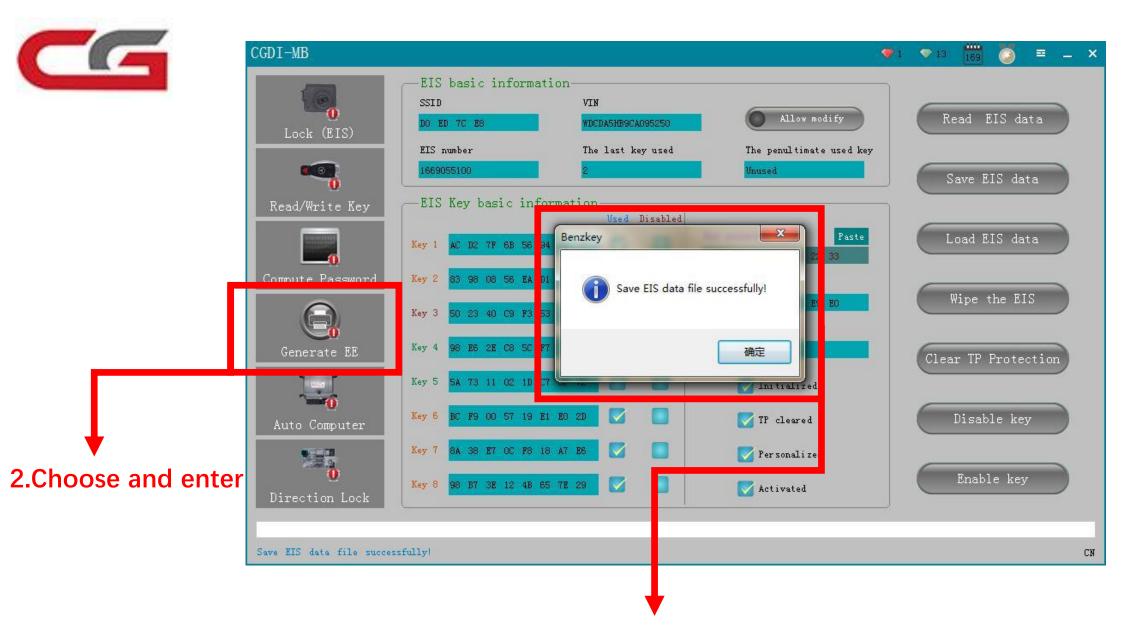


1. Save EIS data successfully



Load EIS File

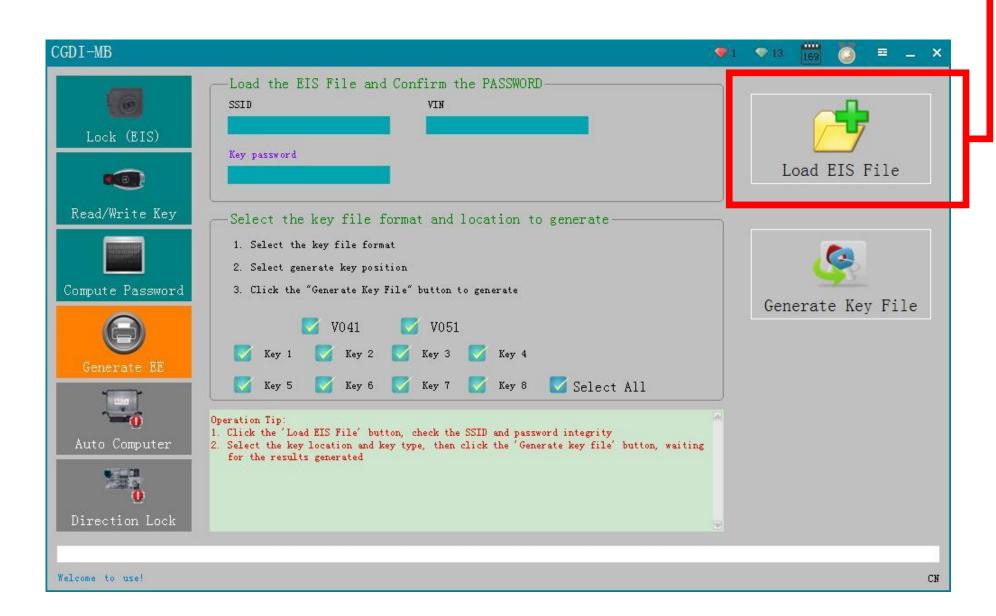




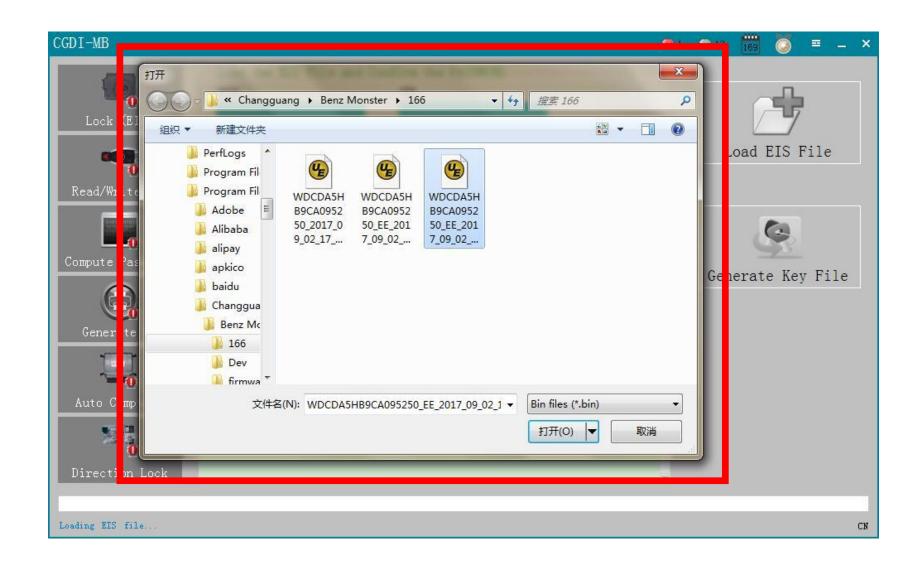


Choose the EIS data saved by last step



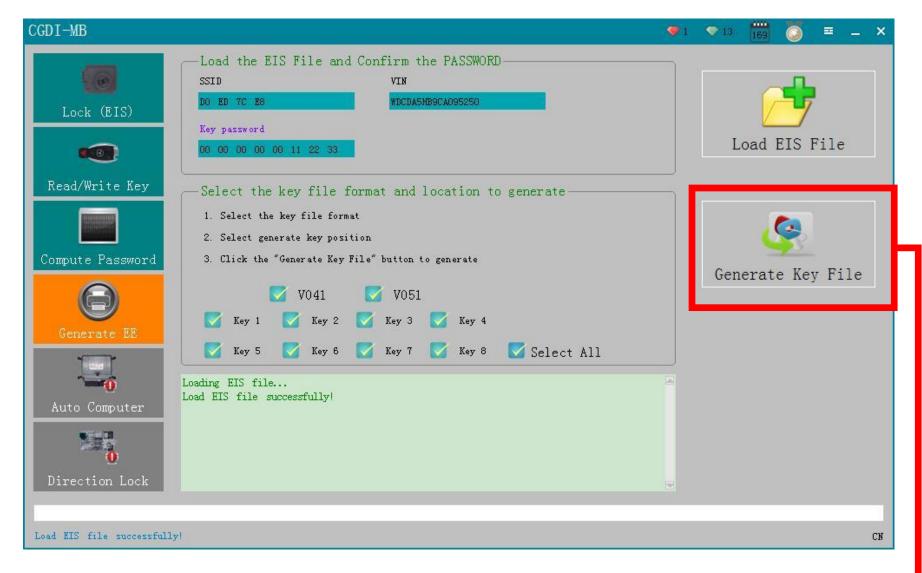


Load EIS file successfully, click 'Generate key File'



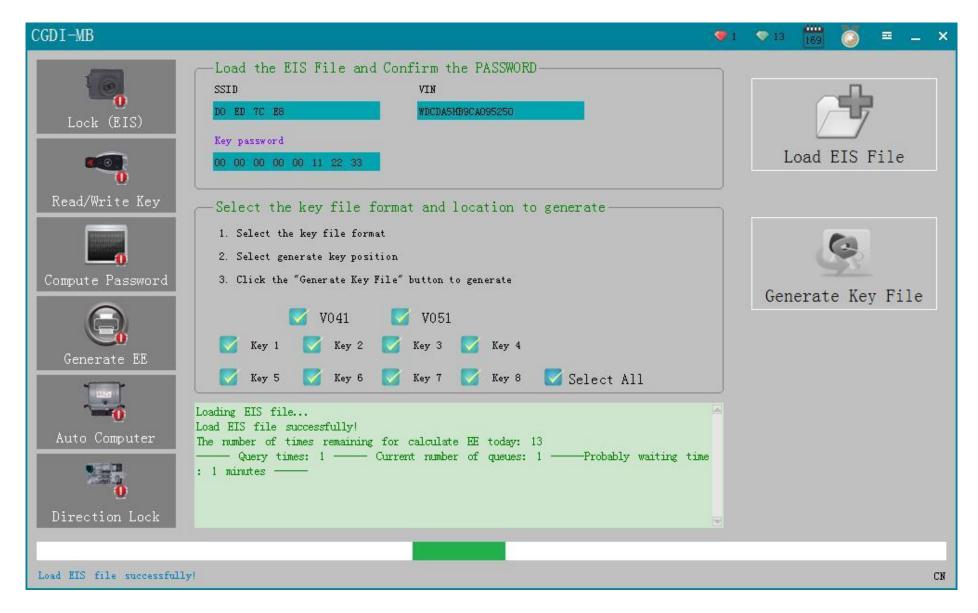


Generating the key file, please wait



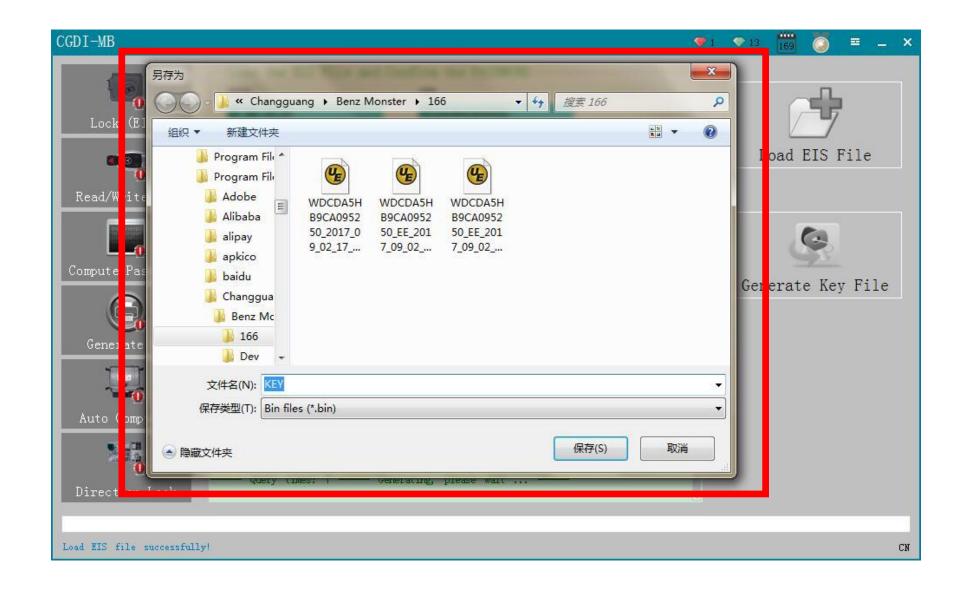


The key file was generated successfully, Please saved by default setting !

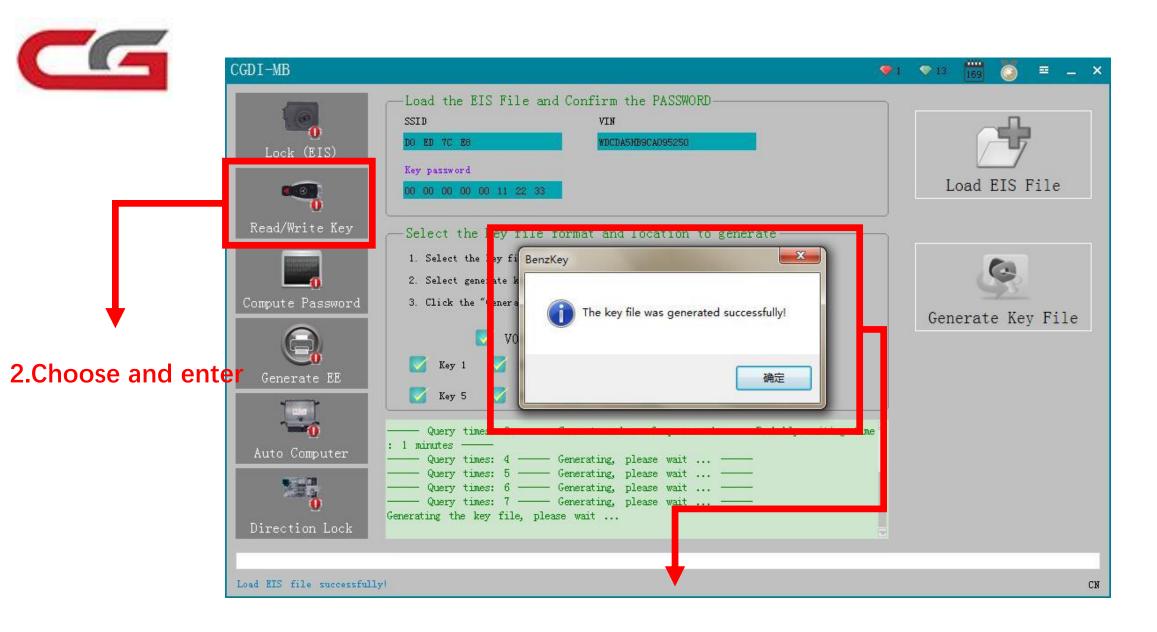


1. save the file successfully



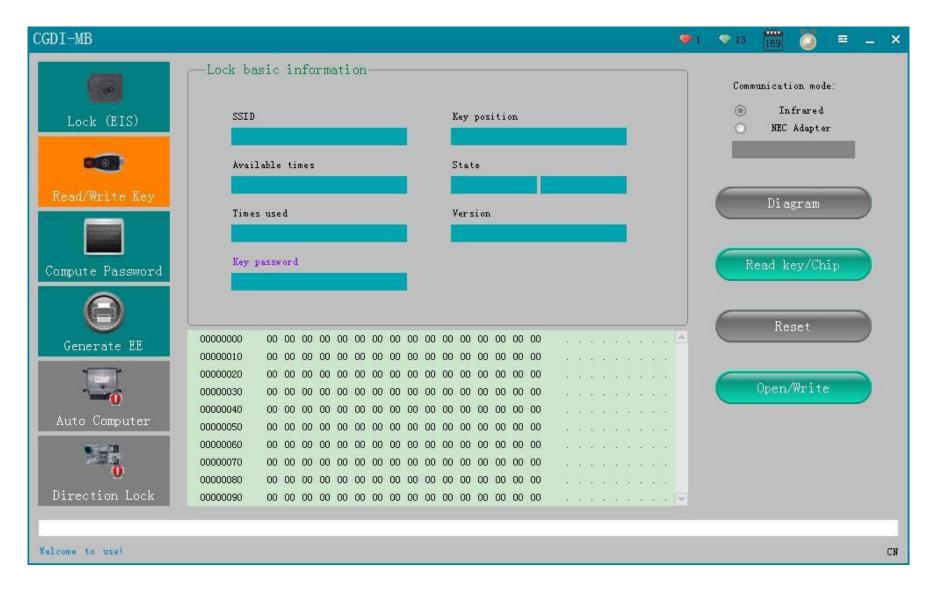


Please inser the new key into the equipment



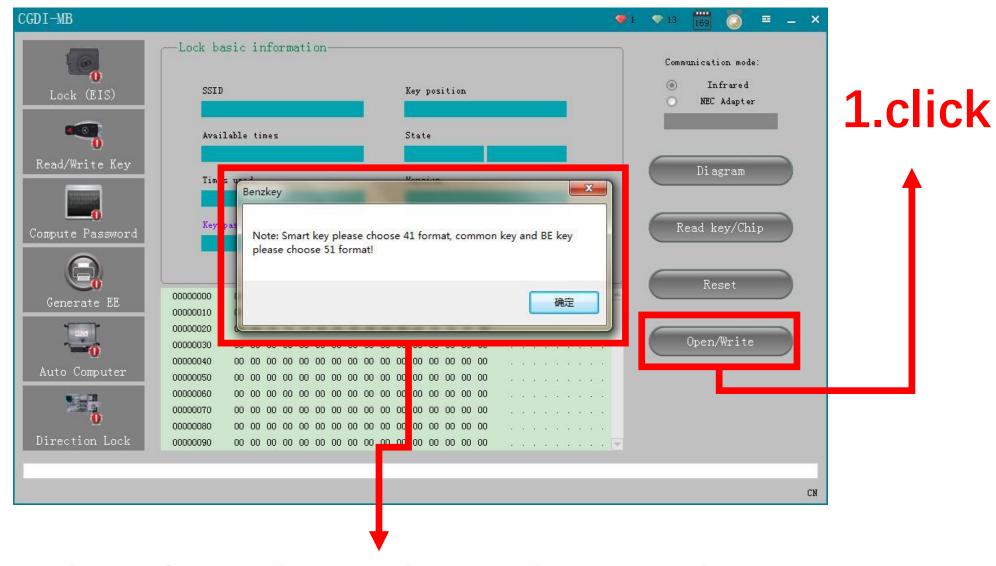


Follow the software instruction to choose and operate



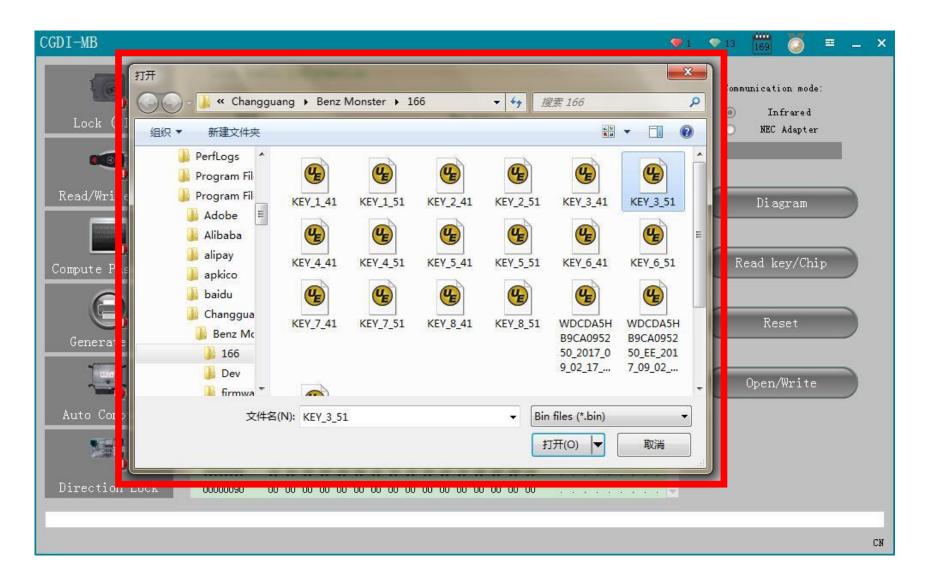


Choose unused key file



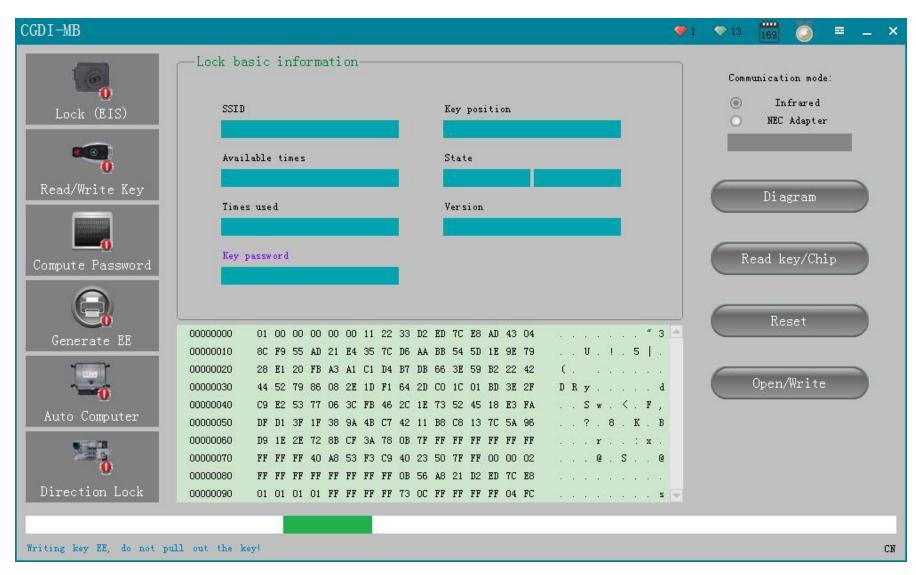


The key data is writing in, please wait......



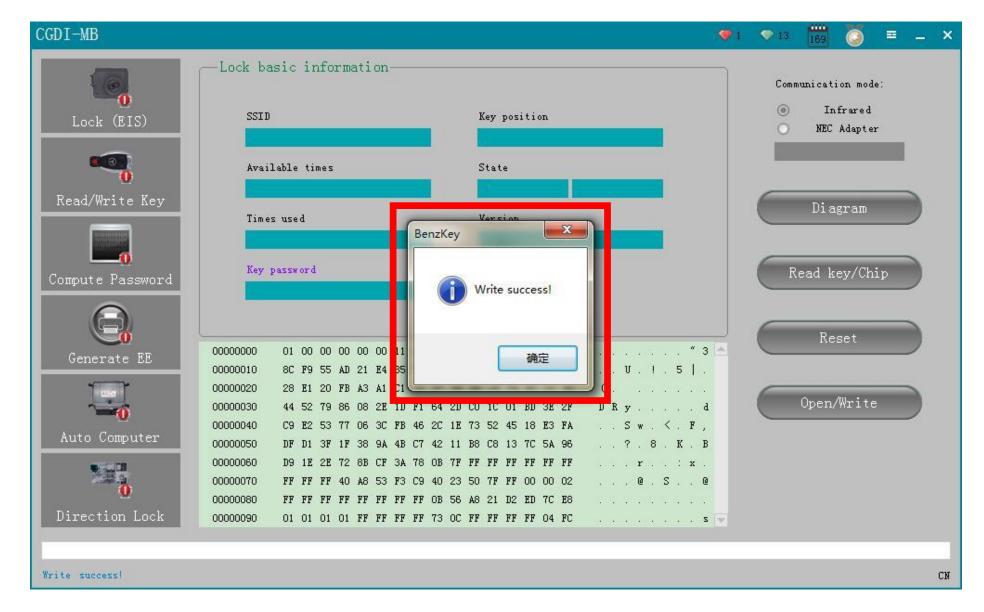

Write success, you can get on car



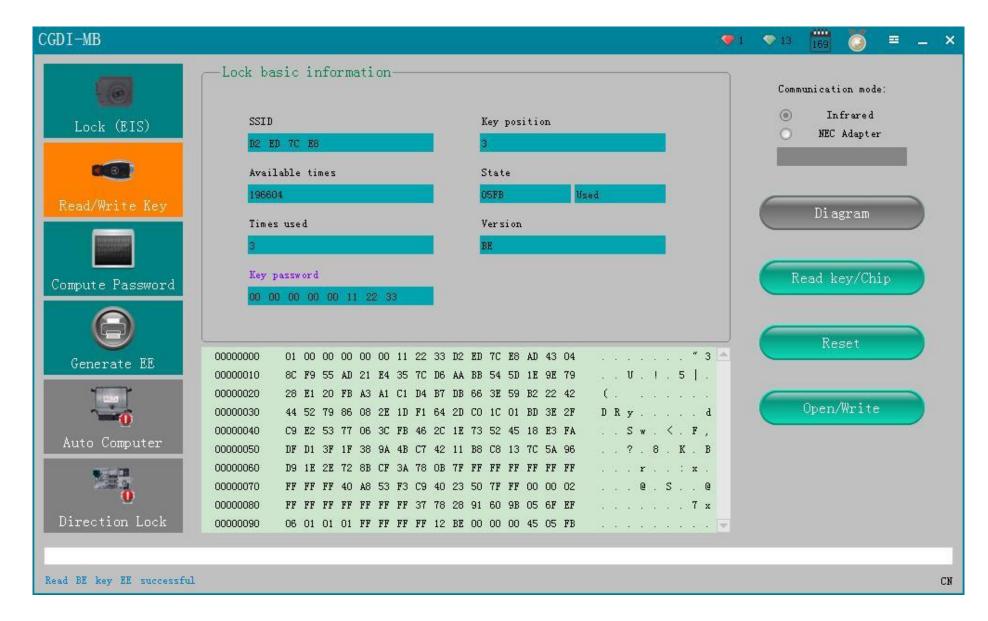

Read key information and save it