


# Install padflashr guide


We strong suggest use the windows7 64 bits system

1:https://padflashr.uk


Go to site download the software and tools drivers

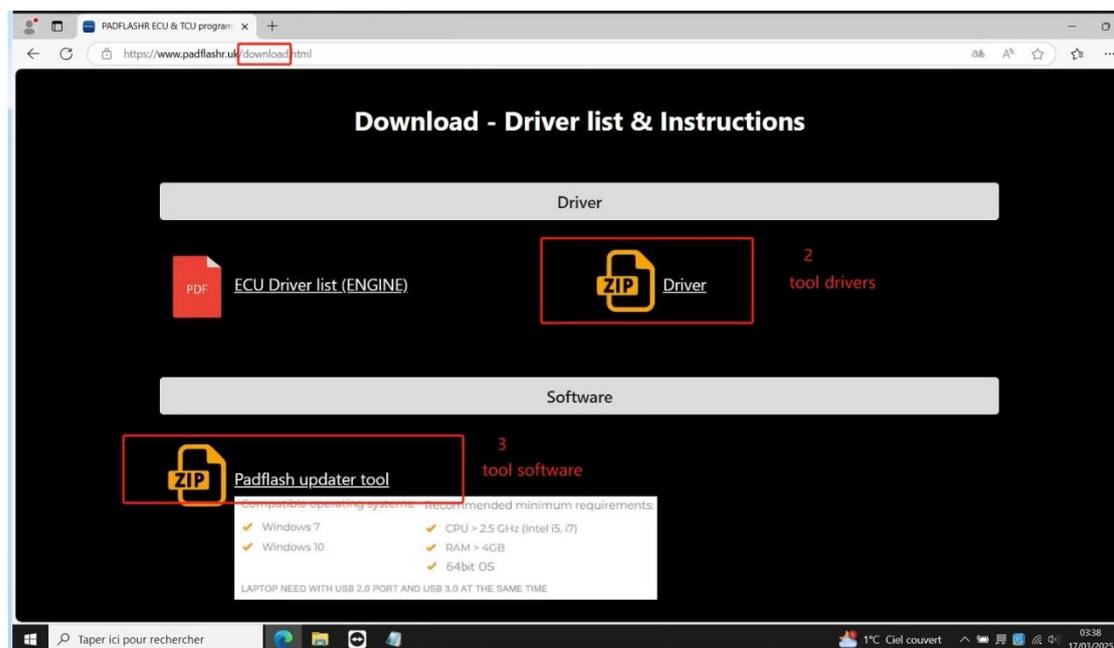


2:Go to donload page , write your email and tools SN

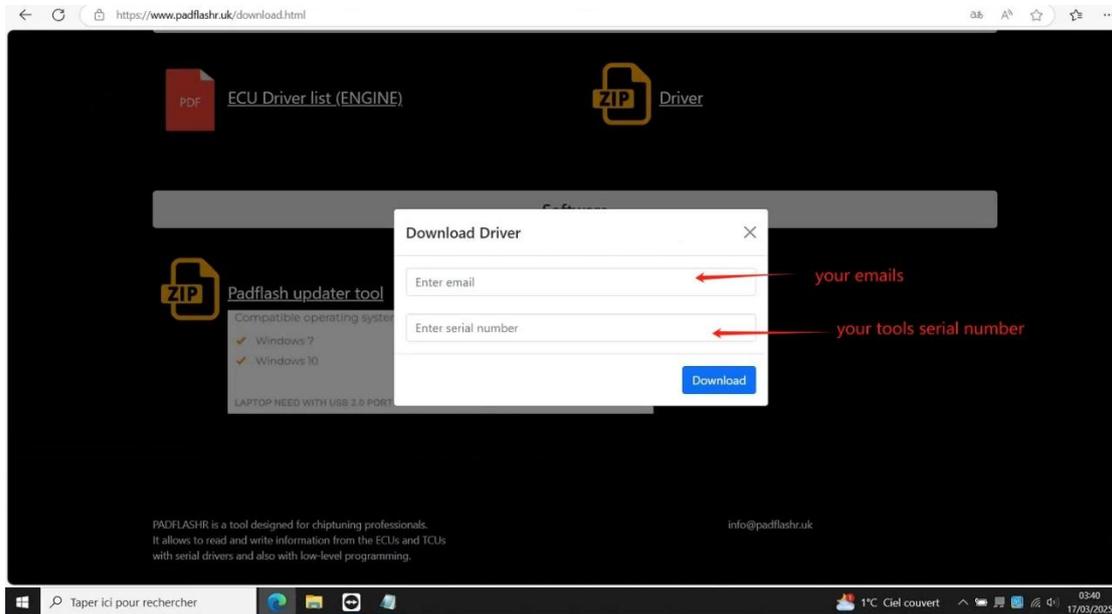


3:tools software

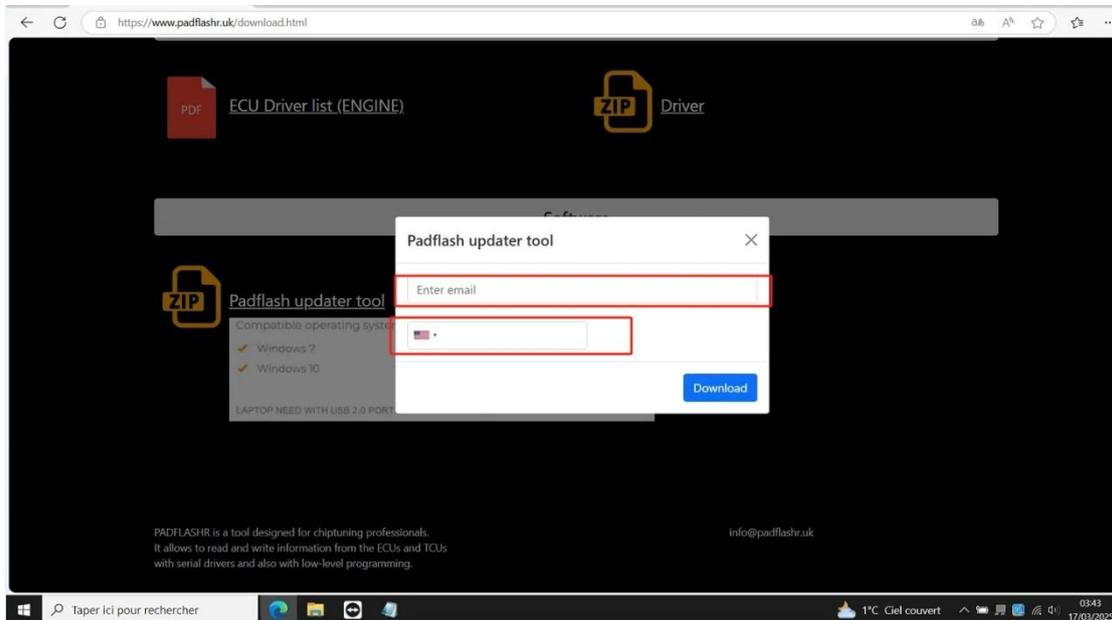


4:install padflashr software

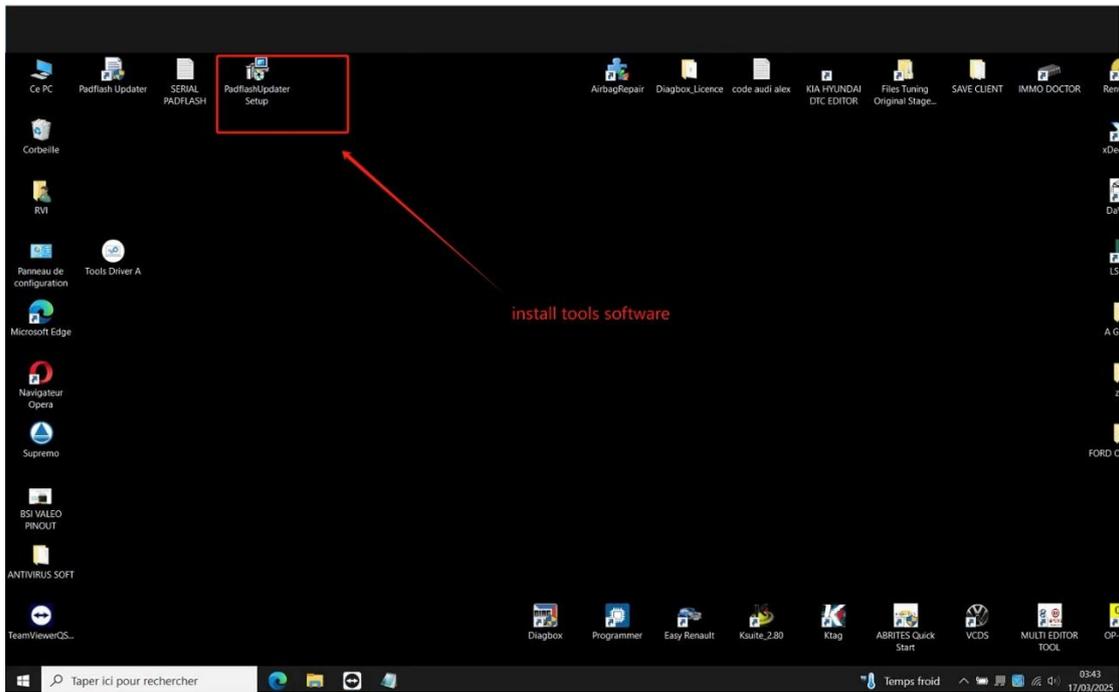


5:write your email and tools serial number for register

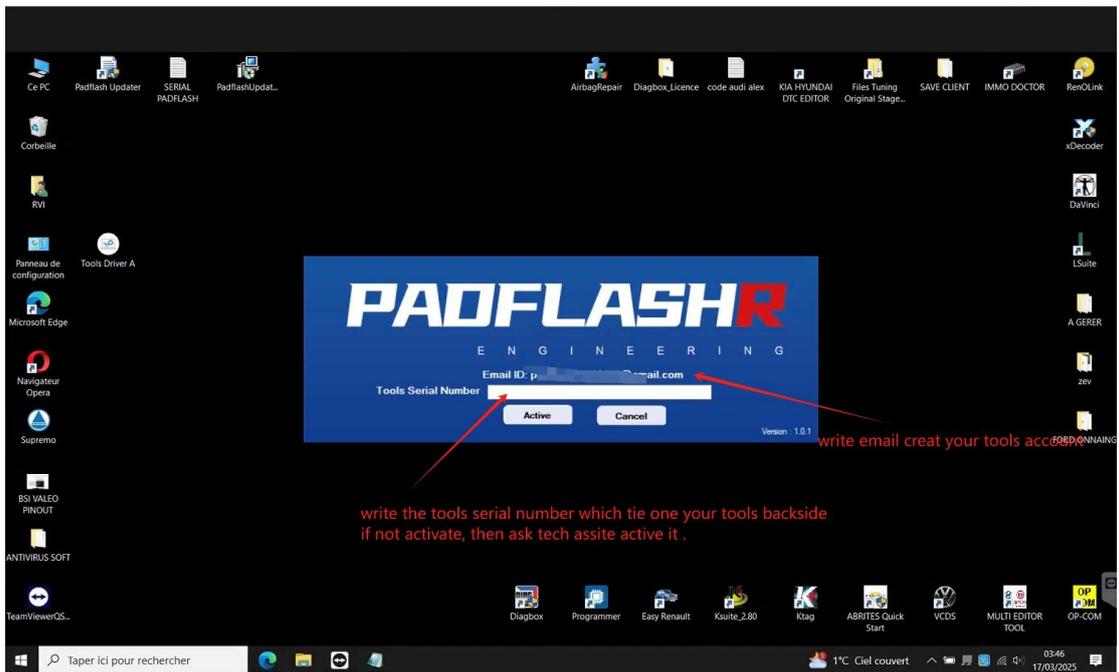


6:restart your padflashr updater after register then download the update files

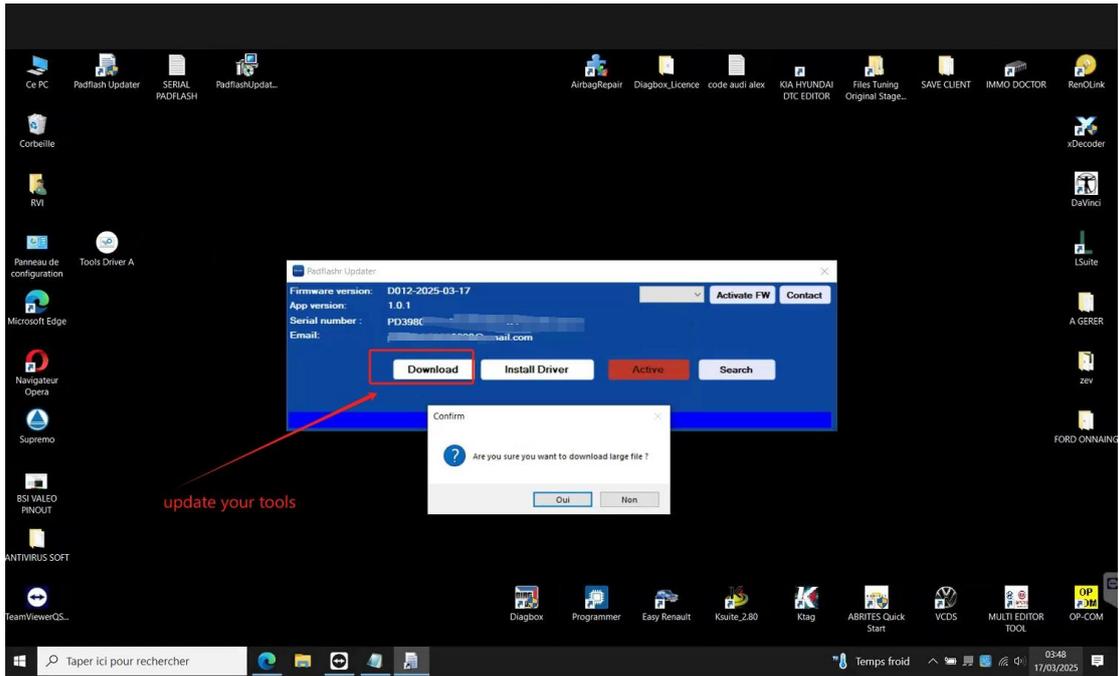


7: wait download finish

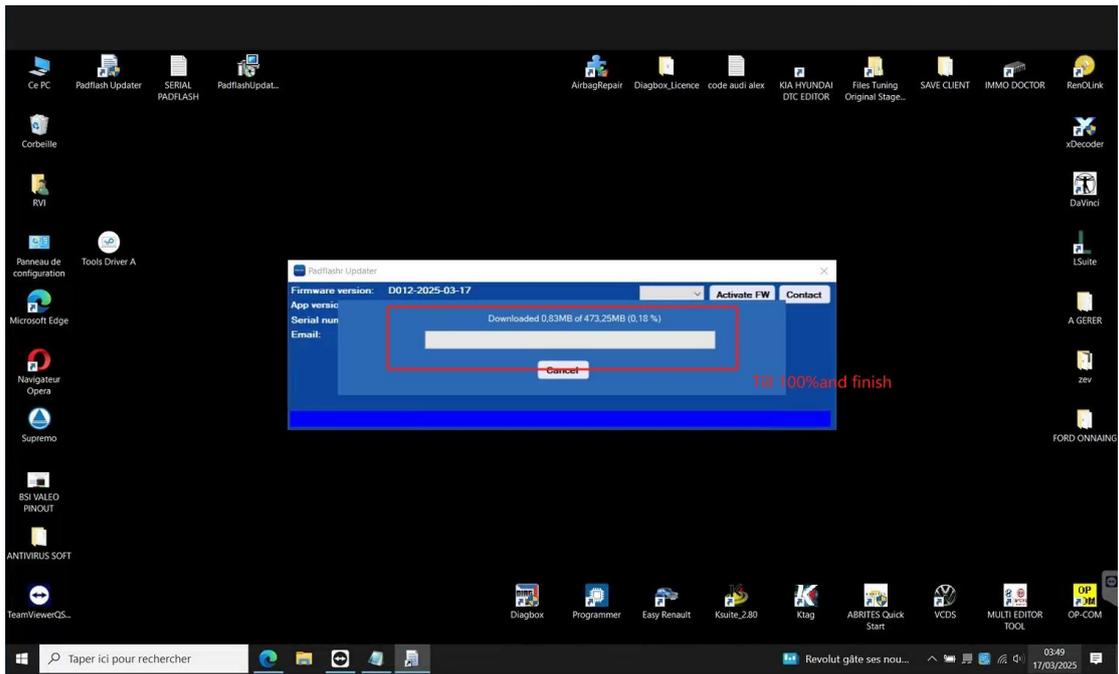



8 after download finish , restart the padflashr 3 times


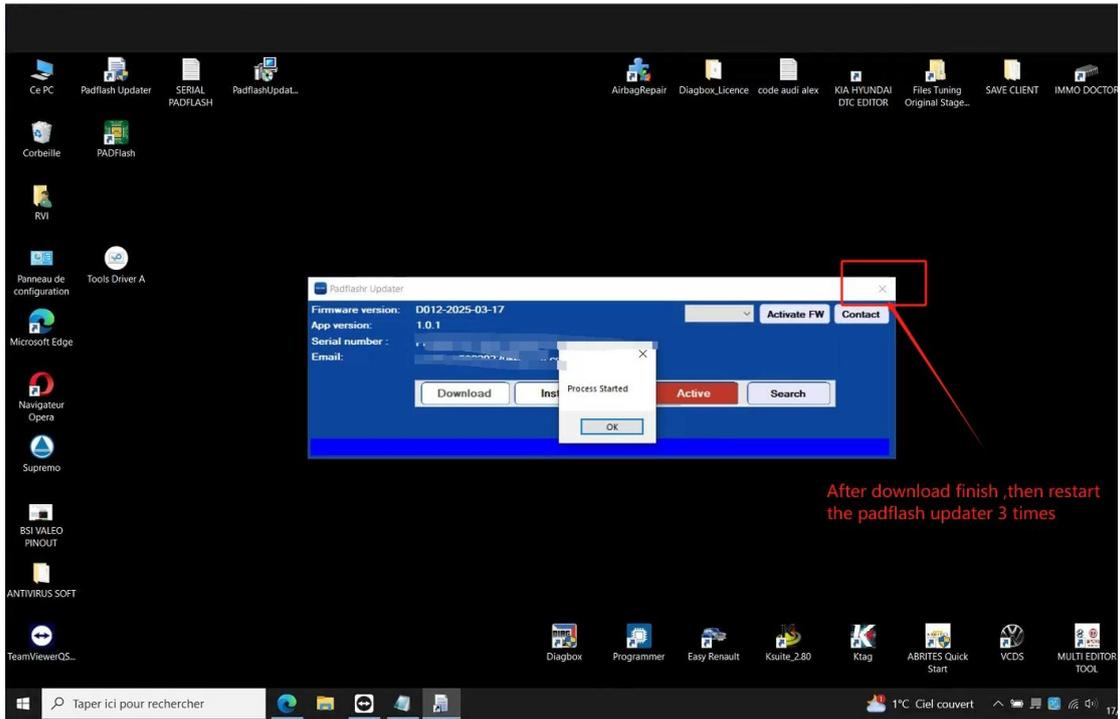


9: connect the tools and dongle install the dongle driver

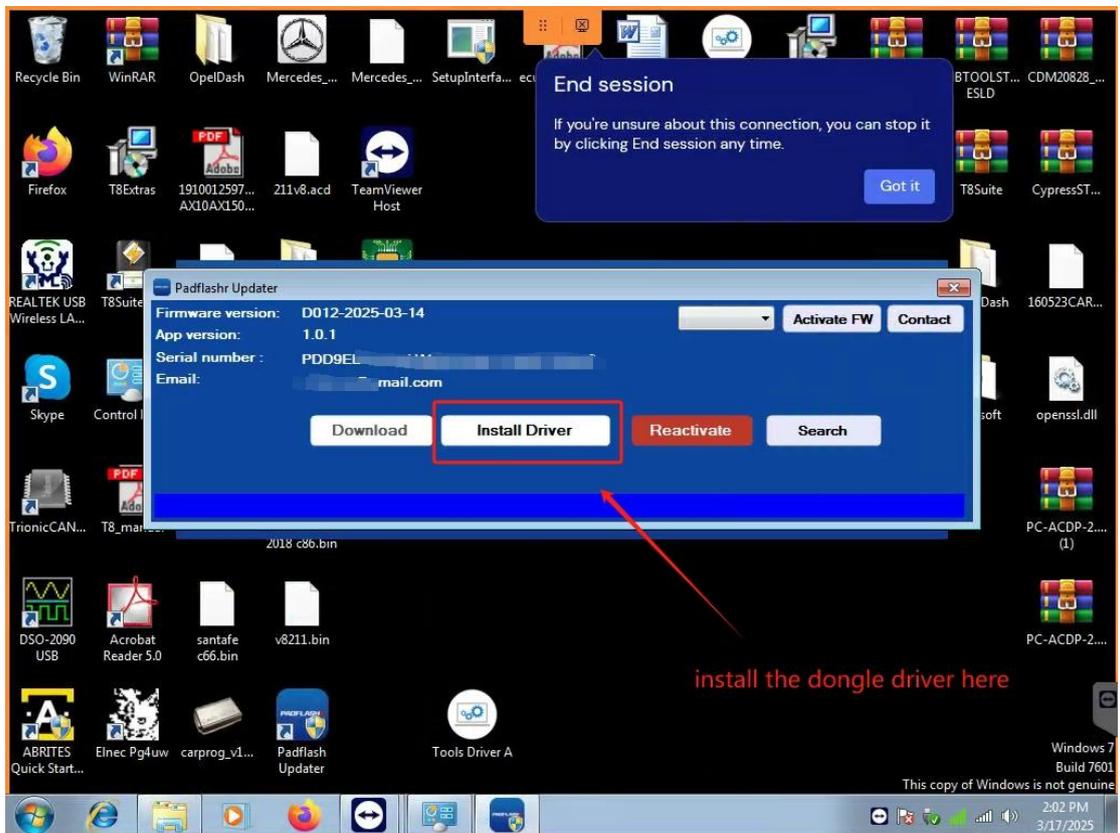

10:connect the tools and drivers install the tools drivers

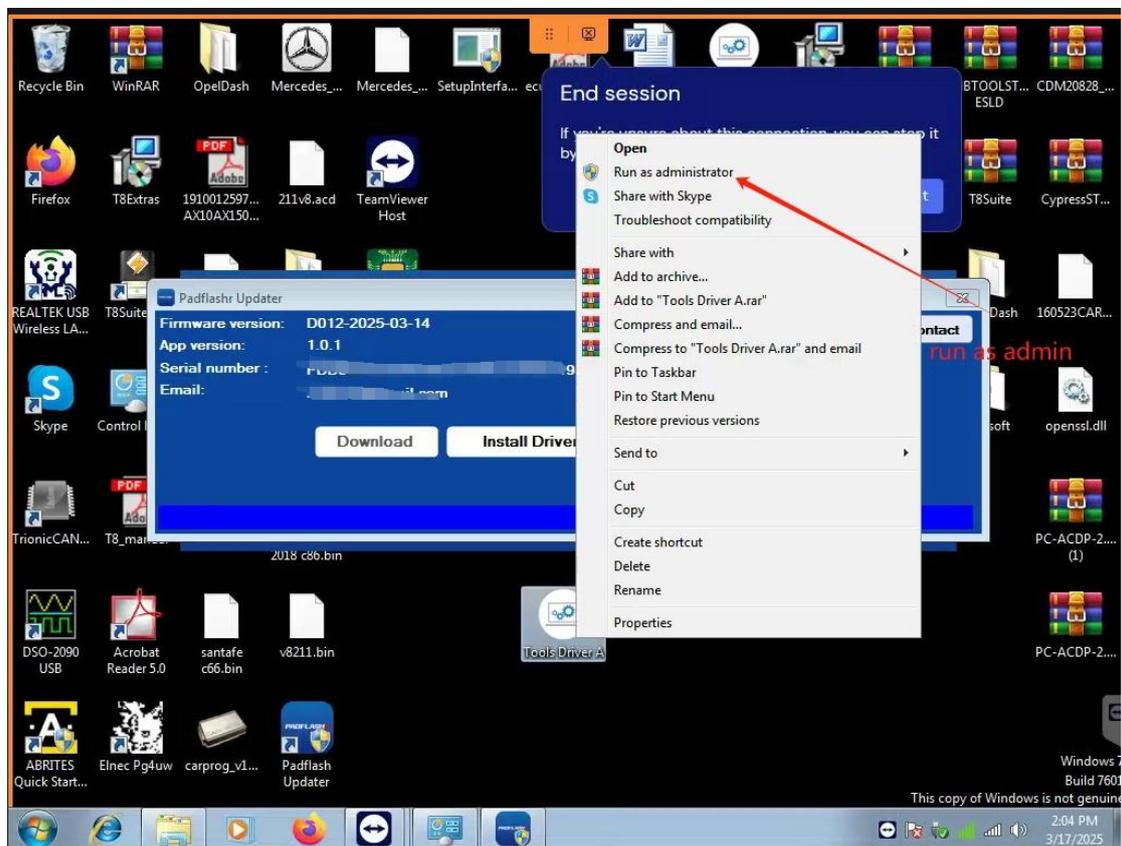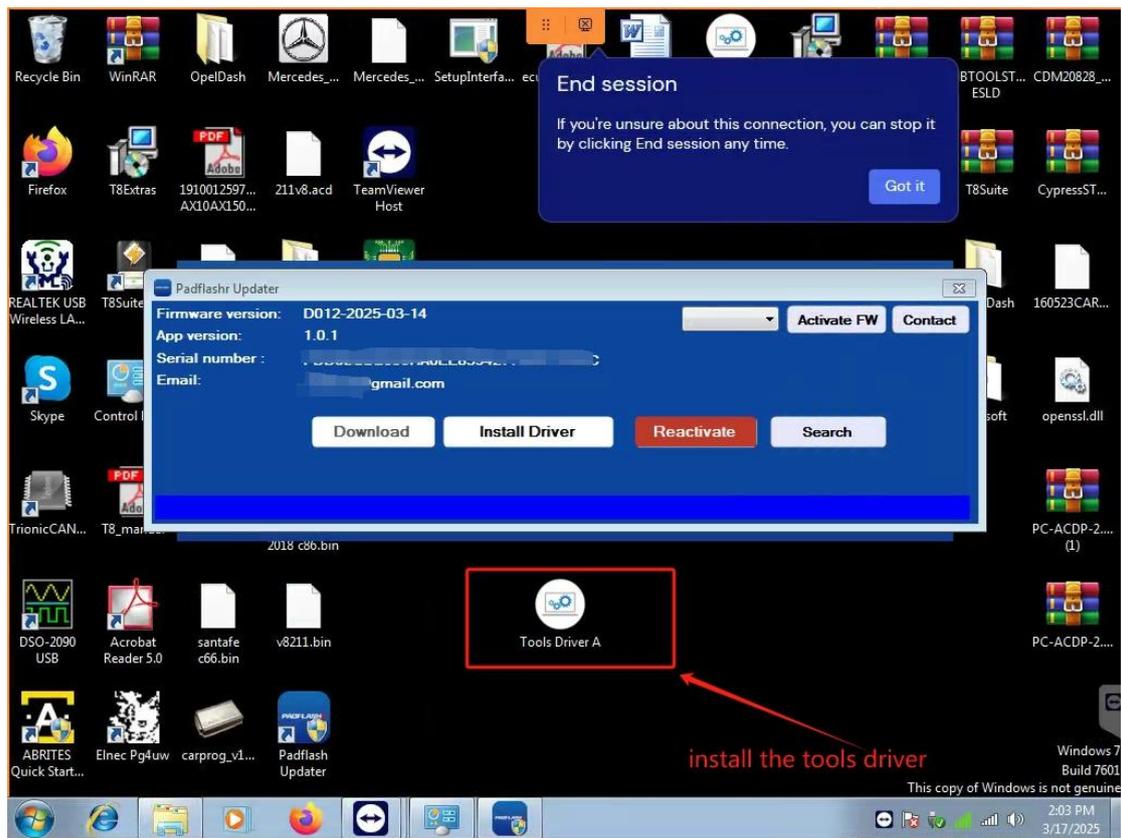

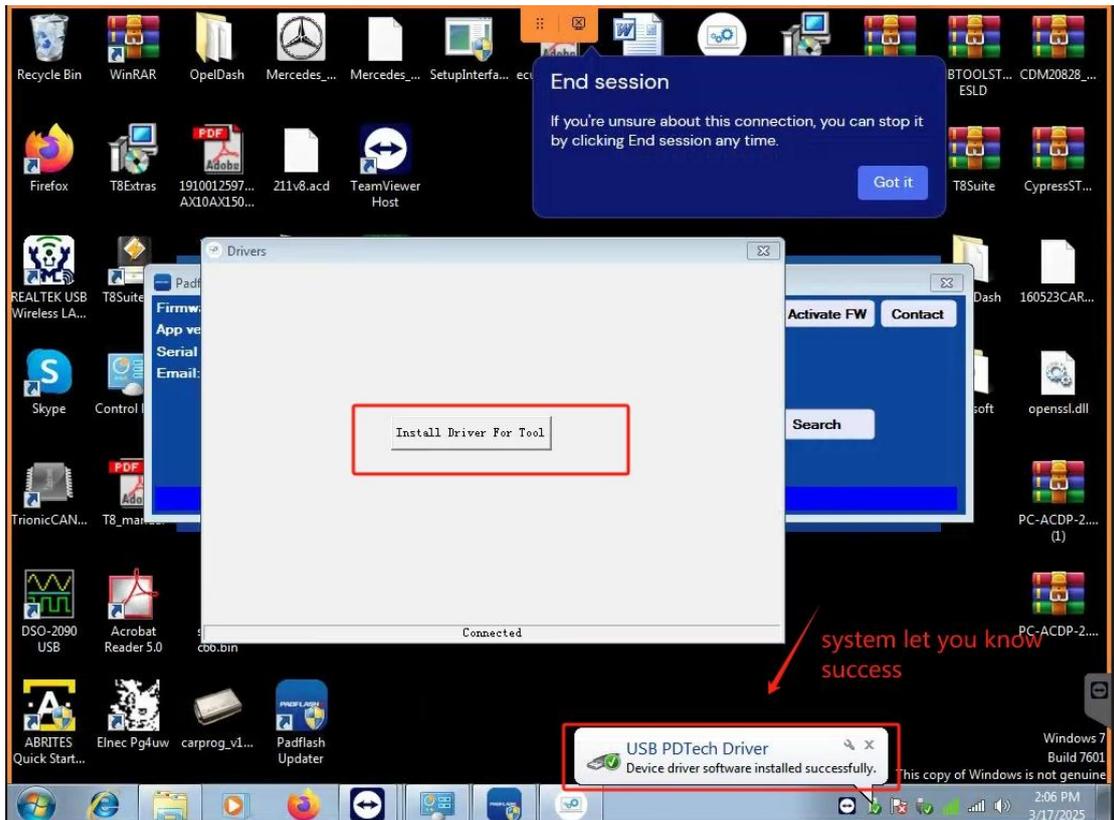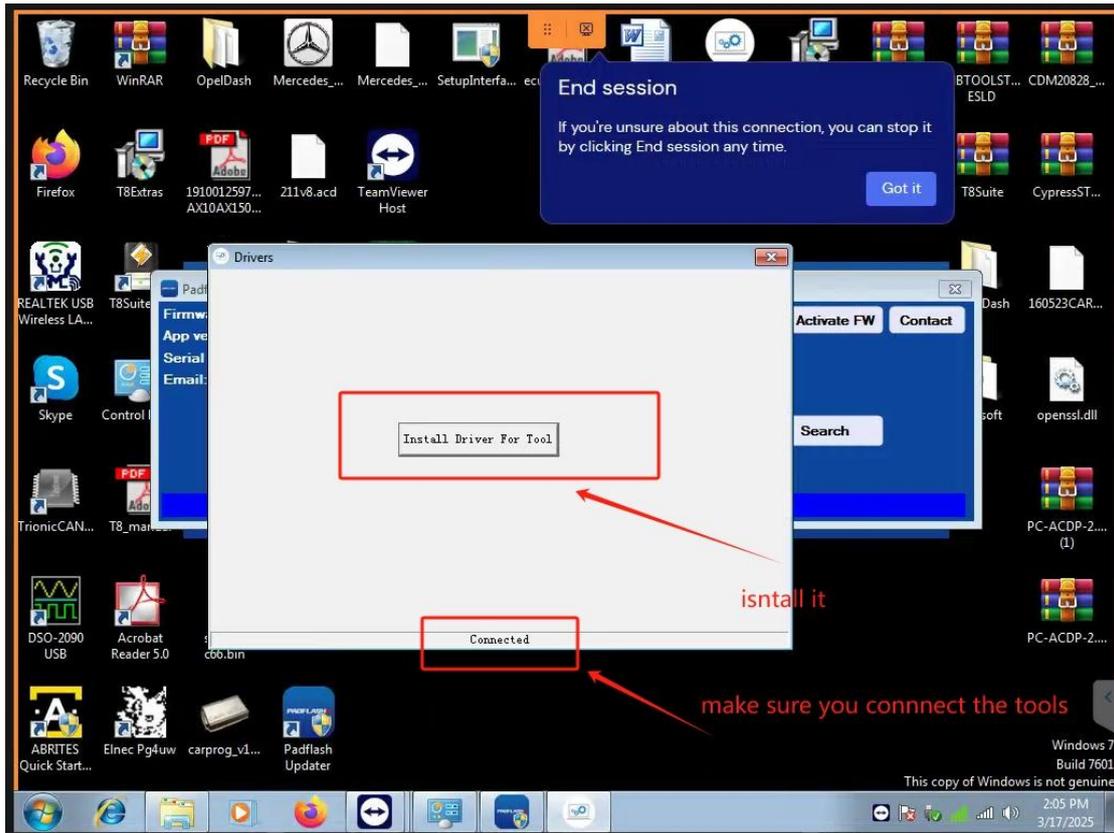

11: run the software ,click the active , then write your tools serial number with big letters

After software open , click the activate the FW, it have the licens for your tools firware

Every time you need click it when you close your software, it will upgrade the whole tools firwarm every time when you close the software.

