

# UCANDAS for Android quick operation user manual

## 5 steps to use UCANDAS for Android to diagnose car


This software runs on Android 4.0 above tablets and phones with WIFI and 720P above screen resolution.

### Step –by –step procedure:

Step 1: Download APP and install

Step 2:

Connect VDM to the car, go to 'Settings' to search WIFI and find the SSID is UCANDAS, connect it successfully, shown as below.

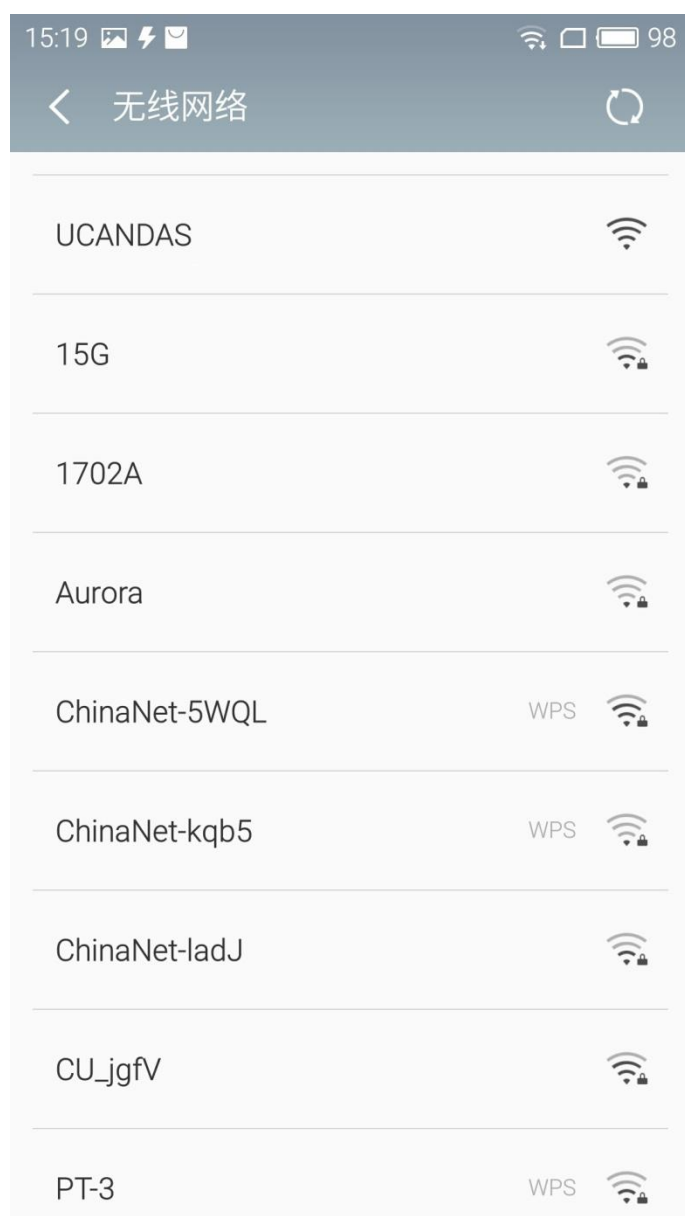

Step 3:

Run UCANDAS, click the icon 'Register', input your basic information.



Diagnosis



Update



Register




Setting



Help



SoftwareManagement

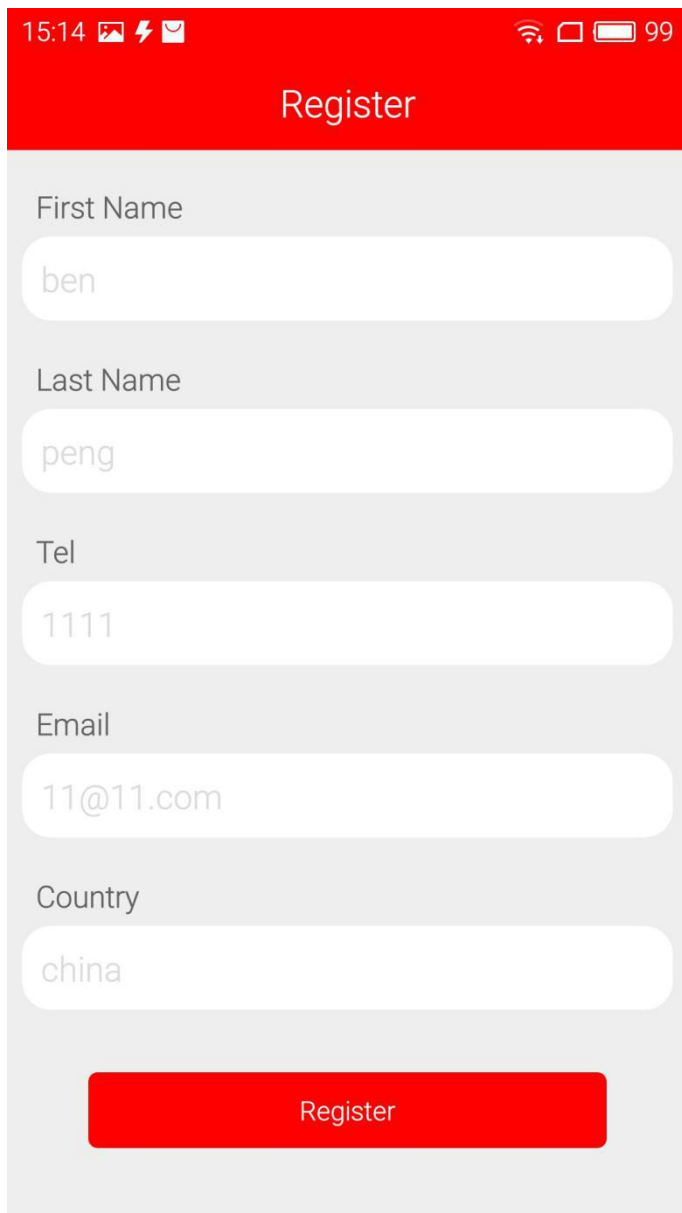A screenshot of a mobile application's registration screen. The screen has a red header with the word "Register" in white. Below the header, there are five white input fields with rounded corners, each preceded by a label: "First Name" (containing "ben"), "Last Name" (containing "peng"), "Tel" (containing "1111"), "Email" (containing "11@11.com"), and "Country" (containing "china"). At the bottom of the form is a red button with the word "Register" in white. The top of the screen shows a status bar with the time "15:14", signal strength, Wi-Fi, and battery level "99".

15:14

Register

First Name

ben

Last Name

peng

Tel

1111

Email

11@11.com

Country

china

Register

Please be informed: after register, the diagnostic program downloaded via the APP only runs with this VDM, not with other VDM.

Step 4:

Unplug VDM from the car and connect network connection, choose 'Update', then 'Language', download the diagnostic program you want shown as below.

Update			
<div> <div> </div> <div> </div> <div> </div> <div>           En..            </div> </div> <div> <div>All</div> <div>Update</div> <div>Refresh</div> </div>			
Vehicle	Version	Status	
AUDI	12.0	Unupdated	
BENZ	15.0	Unupdated	
BMW	12.0	Download completed	
FORDAM	15.0	Unupdated	
FORDEU	15.0	Unupdated	
HONDA	16.0	Unupdated	
JAGUAR	15.0	Unupdated	
KIA	15.0	Unupdated	
LANDROVER	16.0	Unupdated	

Step 5:  
Now you are able to test your car.

# Diagnosis

America **Europe** Asia China OBDII

 Please input key words

B

BMW

S

SAAB

V

VW

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
Q  
R  
S  
T  
U  
V  
W  
X  
Y  
Z  
#