

---

## Honda Key Programmer

### Operation Instructions

#### 1. *For transponder key.*

- A. Switch to "IMMO", and prepare all keys to register.
- B. Turn ignition ON to position II (Instrument panel light on but engine OFF), connect programmer to OBDII socket
- C. The buzzer periodically short beep with "Di", Turn ignition OFF.
- D. The buzzer periodically short beep with "Di, Di, Di", turn ignition on without changing key.
- E. The buzzer long beep once "Di---", key registration begins.
- F. The buzzer periodically short beep with "Di", Turn ignition OFF.
- G. The buzzer periodically short beep with "Di, Di", Change another key and turn ignition ON
- H. Repeat step F,G, register more up to 6 keys.
- I. For last key: First turn ignition ON/OFF following above instructions. When the buzzer periodically short beep with "Di Di", turn on ignition **WITHOUT** changing key. Then the buzzer periodically short beep with "Di", **DO NOT** turn off ignition and keep ignition on for more than 20 seconds.
- J. The buzzer long beep once "Di---", key registration finished.
- K. The buzzer periodically long beep with "Di---", start to learn

---

remote function. Learning remote function instruction: close all doors, press and release lock/unlock button on key in 4 seconds until door locks lock/unlock. Then learn next remote.(Some cars do not need remote learning, and no buzzer beep tips for learning remote)

- L. Turn ignition OFF. Pull out programmer from OBDII. Try to start engine with every key.

## **2. For smart key.**

- A. Switch to "SMRT", and prepare all smart cards to register. Only 1 card in car, and the others out of car.
- B. Push one-push-start button, or use ignition key in card, turn ignition ON(Instrument panel light on but engine OFF). If all cards lost and can't turn ignition on, press and hold one-push-start button. Connect programmer to OBDII socket.
- C. The buzzer periodically short beep with "Di", turn ignition OFF
- D. The buzzer periodically short beep with "Di, Di, Di ", turn ignition ON.
- E. The buzzer long beep once "Di---", card registration begins.
- F. The buzzer periodically short beep with "Di", take card out of car.
- G. The buzzer periodically short beep with "Di, Di", take another card in car.

- 
- H. Repeat step F,G, register more up to 6 cards
  - I. For last card: First take card in car following instruction. When the buzzer periodically short beep with "Di", **DO NOT** take card out of car and keep card in car for more than 100 seconds.
  - J. The buzzer long beep once "Di---", cards registration finished.
  - K. Turn ignition OFF. Pull out programmer. Try to start engine with every card.