

# CANEMU CAN filter connection manual for Renault


## 1. Renault Laguna III installation instructions




Remove instrument cluster and change mileage in 24C16 EEPROM.

- For first prepare **CANEMU** board: solder 3 configuration point. Use fine KYNAR wire for installation.



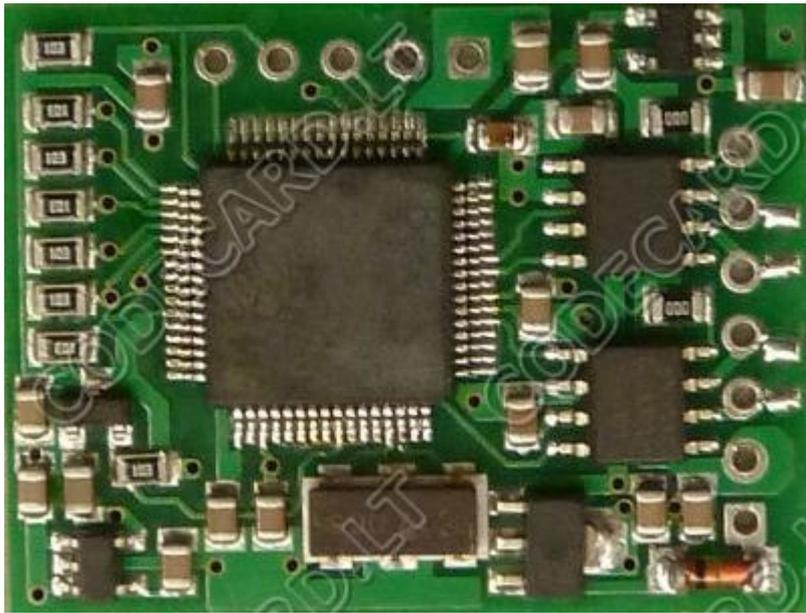

Install CANEMU board like in picture:

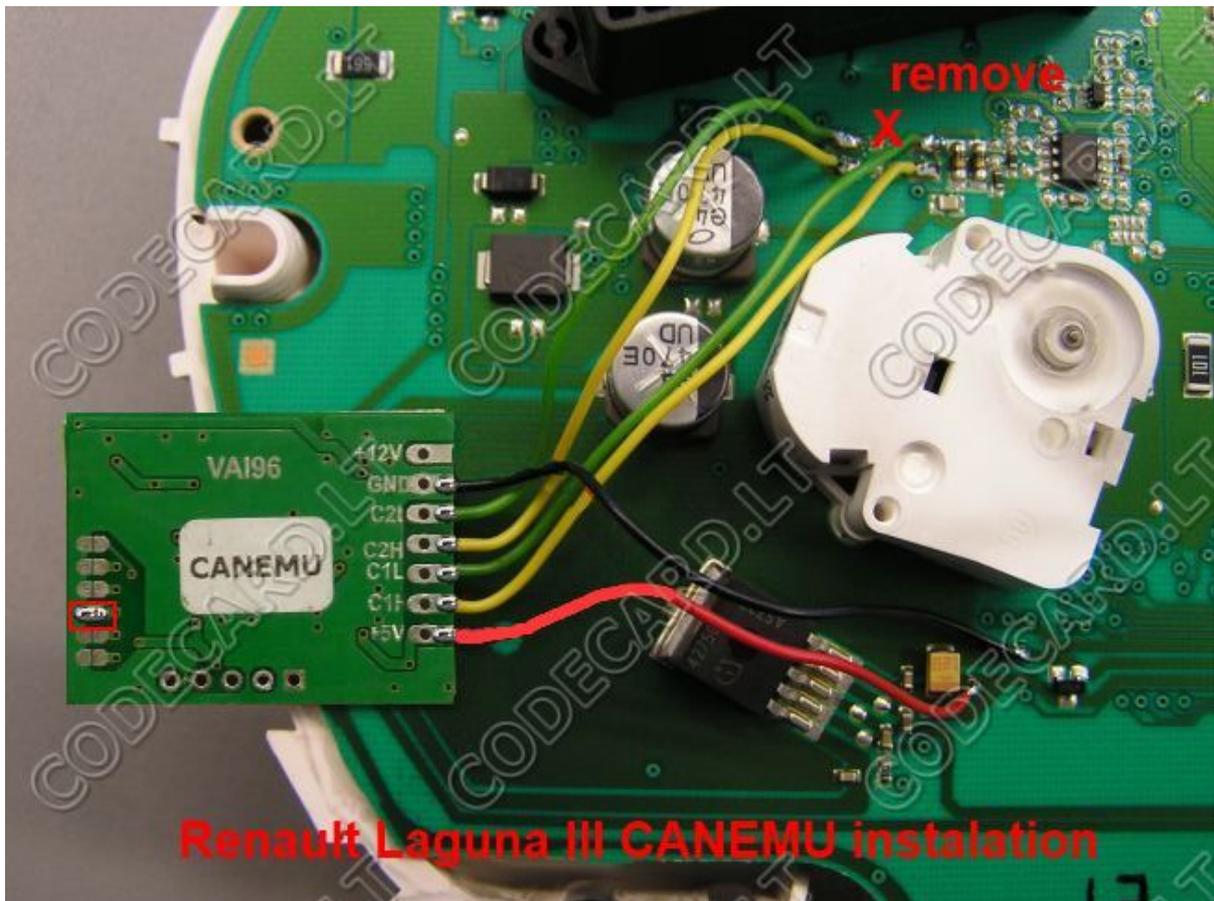


## 2. Renault Megane III installation instructions




Remove instrument cluster and change mileage in 24C16 EEPROM.

- For first prepare **CANEMU** board: solder 3 configuration point. Use fine KYNAR wire for installation.



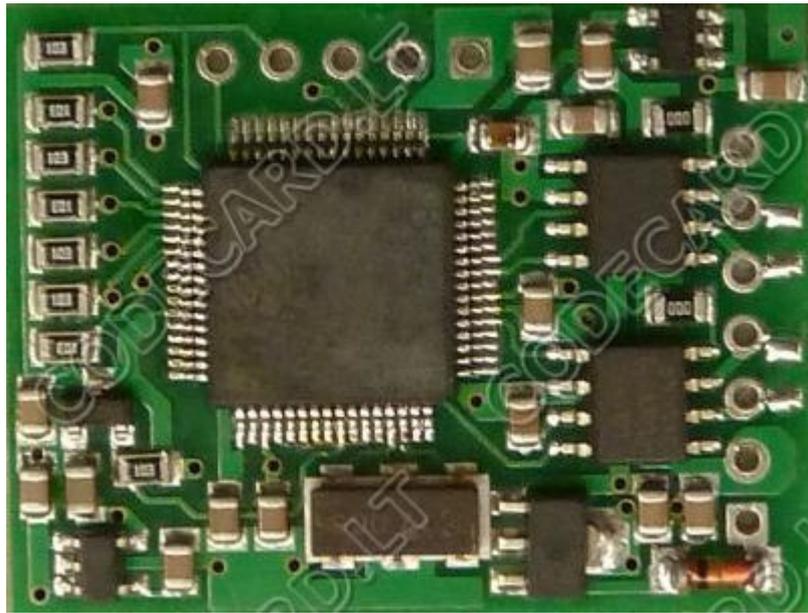

Install CANEMU board like in picture:

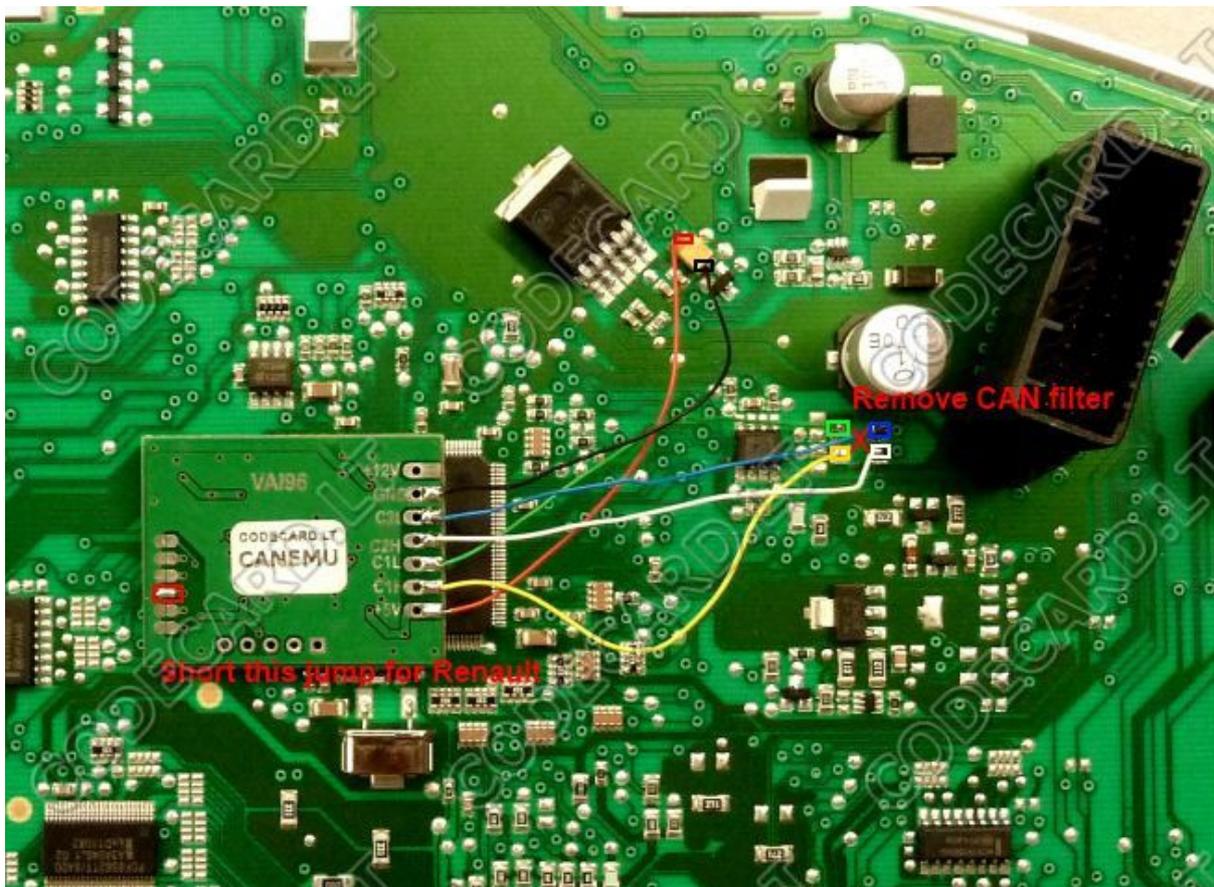


### 3. Renault Scenic III installation instructions



Remove instrument cluster and change mileage in 24C16 EEPROM.

- For first prepare **CANEMU** board: solder 3 configuration point. Use fine KYNAR wire for installation.



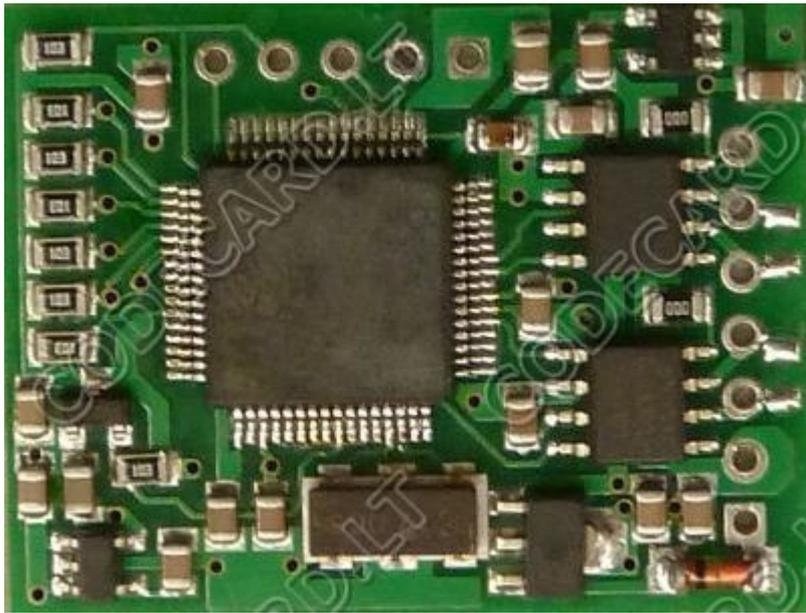

Install CANEMU board like in picture:

