**How to use Chrysler wiTech MicroPod 2 Diagnostic Programming Tool ?**

1. Please confirm that you have successfully installed the software.

If you don't know how to install Chrysler wiTech MicroPod 2 software, please check this link: http://www.obd2tool.com/blog/2017/05/12/how-to-install-chrysler-witech-micropod-2-diagnostic-programming-tool/

2.Connect Chrysler wiTech MicroPod 2 USB Port with PC, OBD2 Port connect with car.

3 . The computer will automatically install Chrysler wiTech MicroPod 2 hardware driver
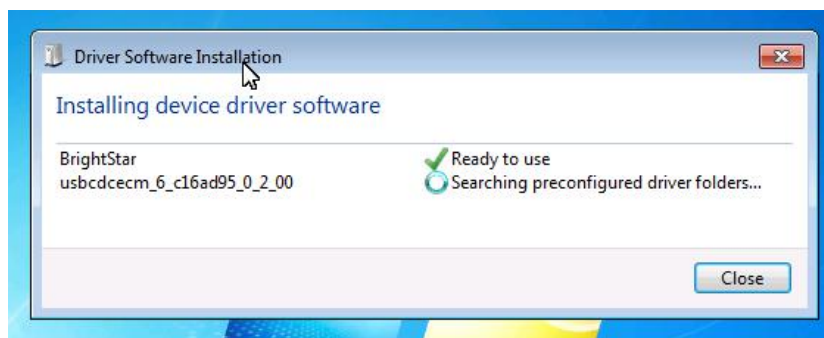
4 . After Drive installed, you can find your device in your computer device manager
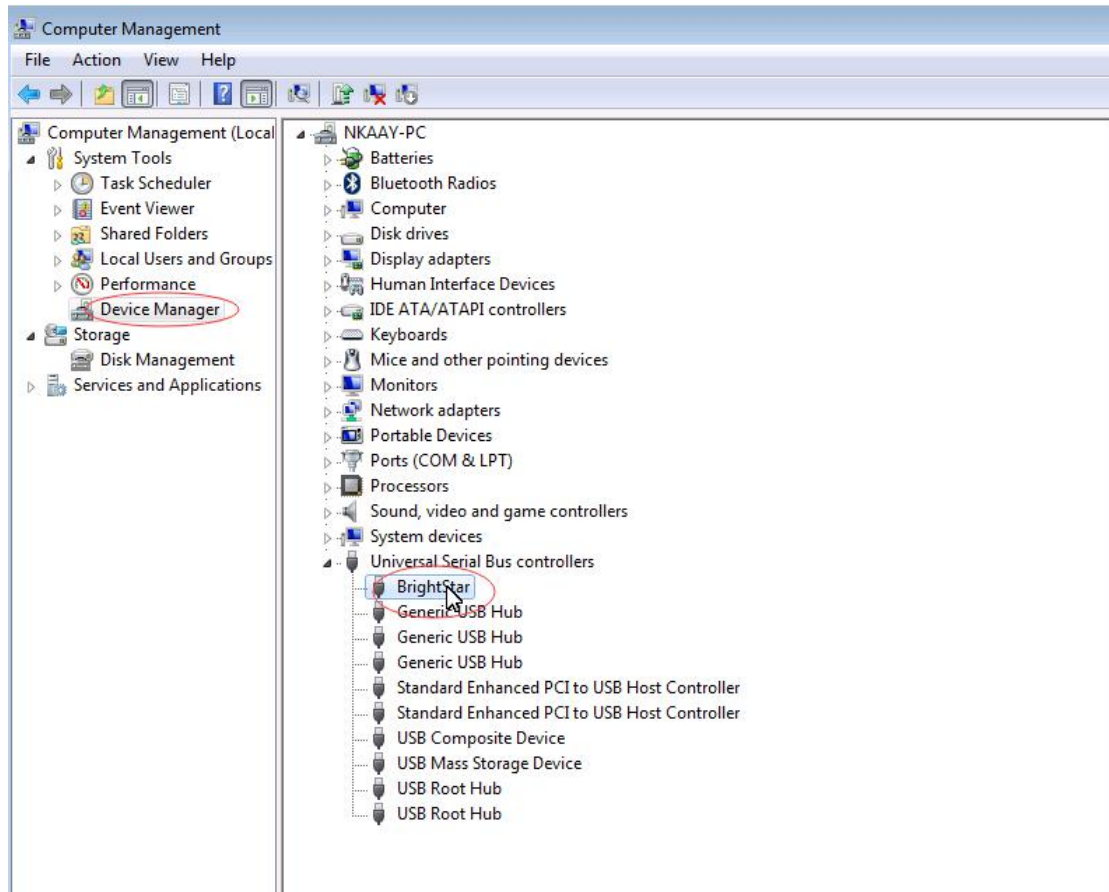
5．Double click the icon of Chrysler wiTech MicroPod 2

6．You will see　Chrysler wiTech MicroPod 2 connected with software, Please click　　　　　　　　　　　　　　　　　　　　"　　　　　　　　　　　　　　　　　next"

7. If you have your personal online account, you can login in your user id and password. If you don't have online account, please select "word off line" , Then click "finish" and go to next step

8. Select " Connect"
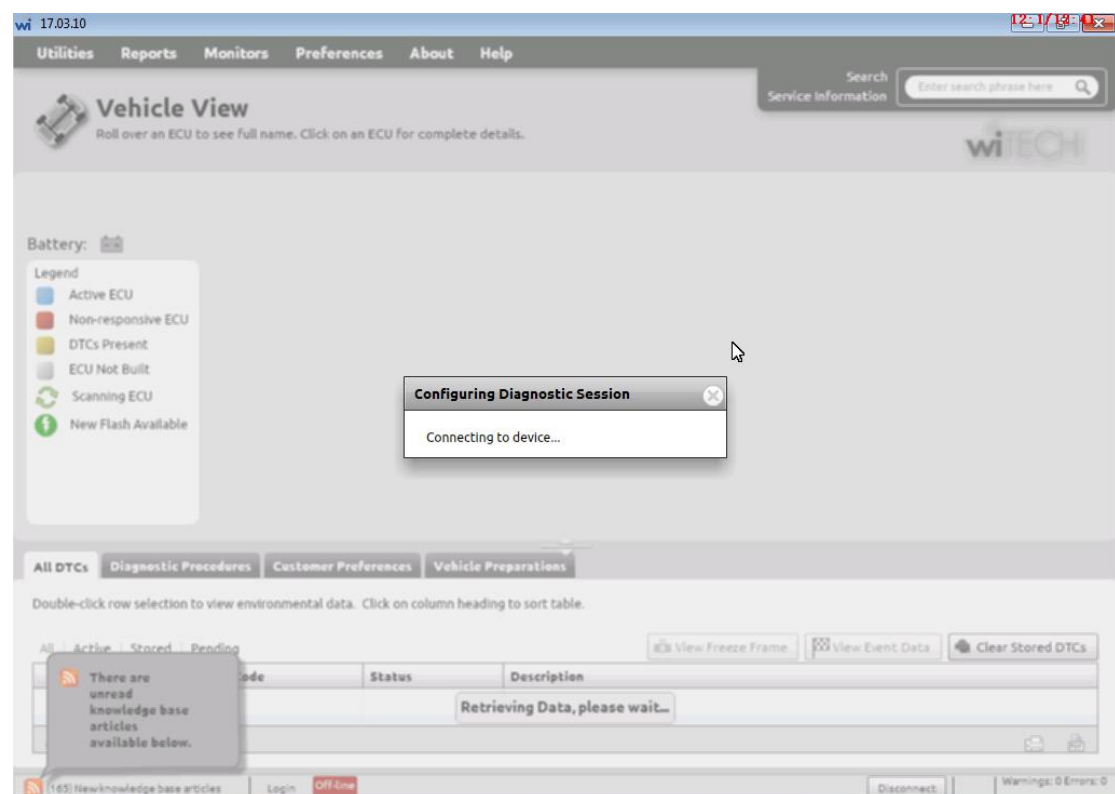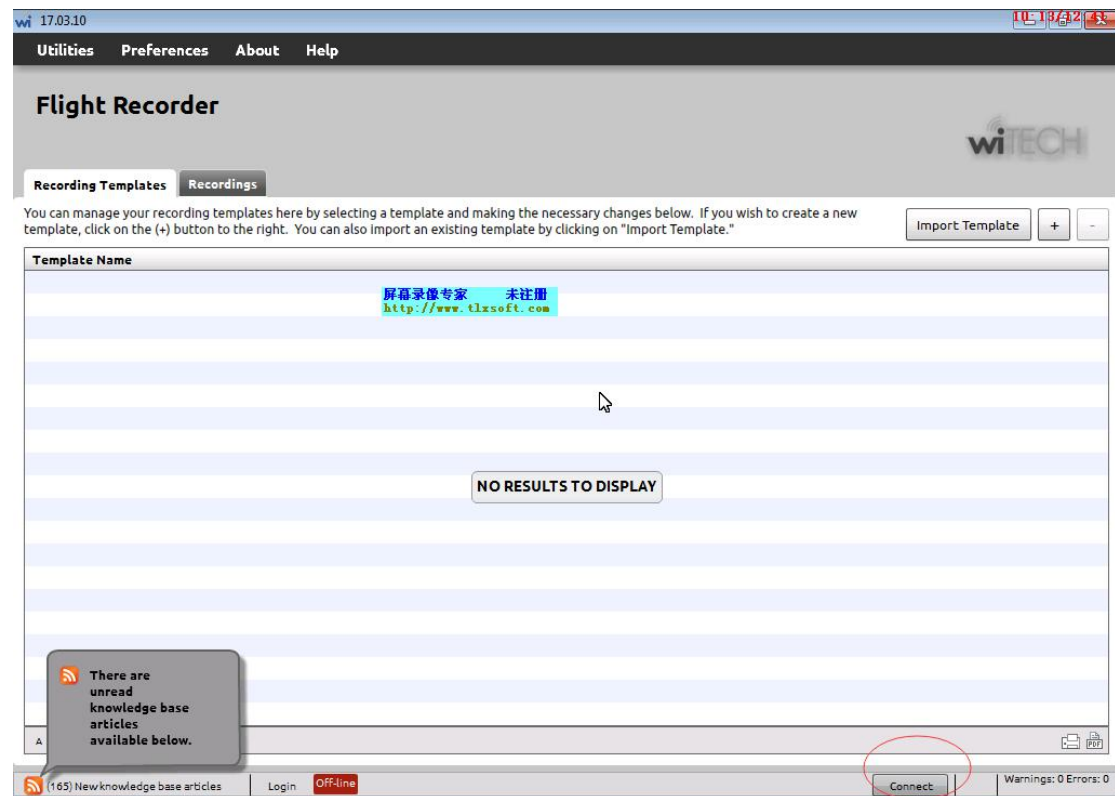
9. To this step, you can choose the type of car which you want to test and the system for diagnosis and programming.